


EFM 2018 2019

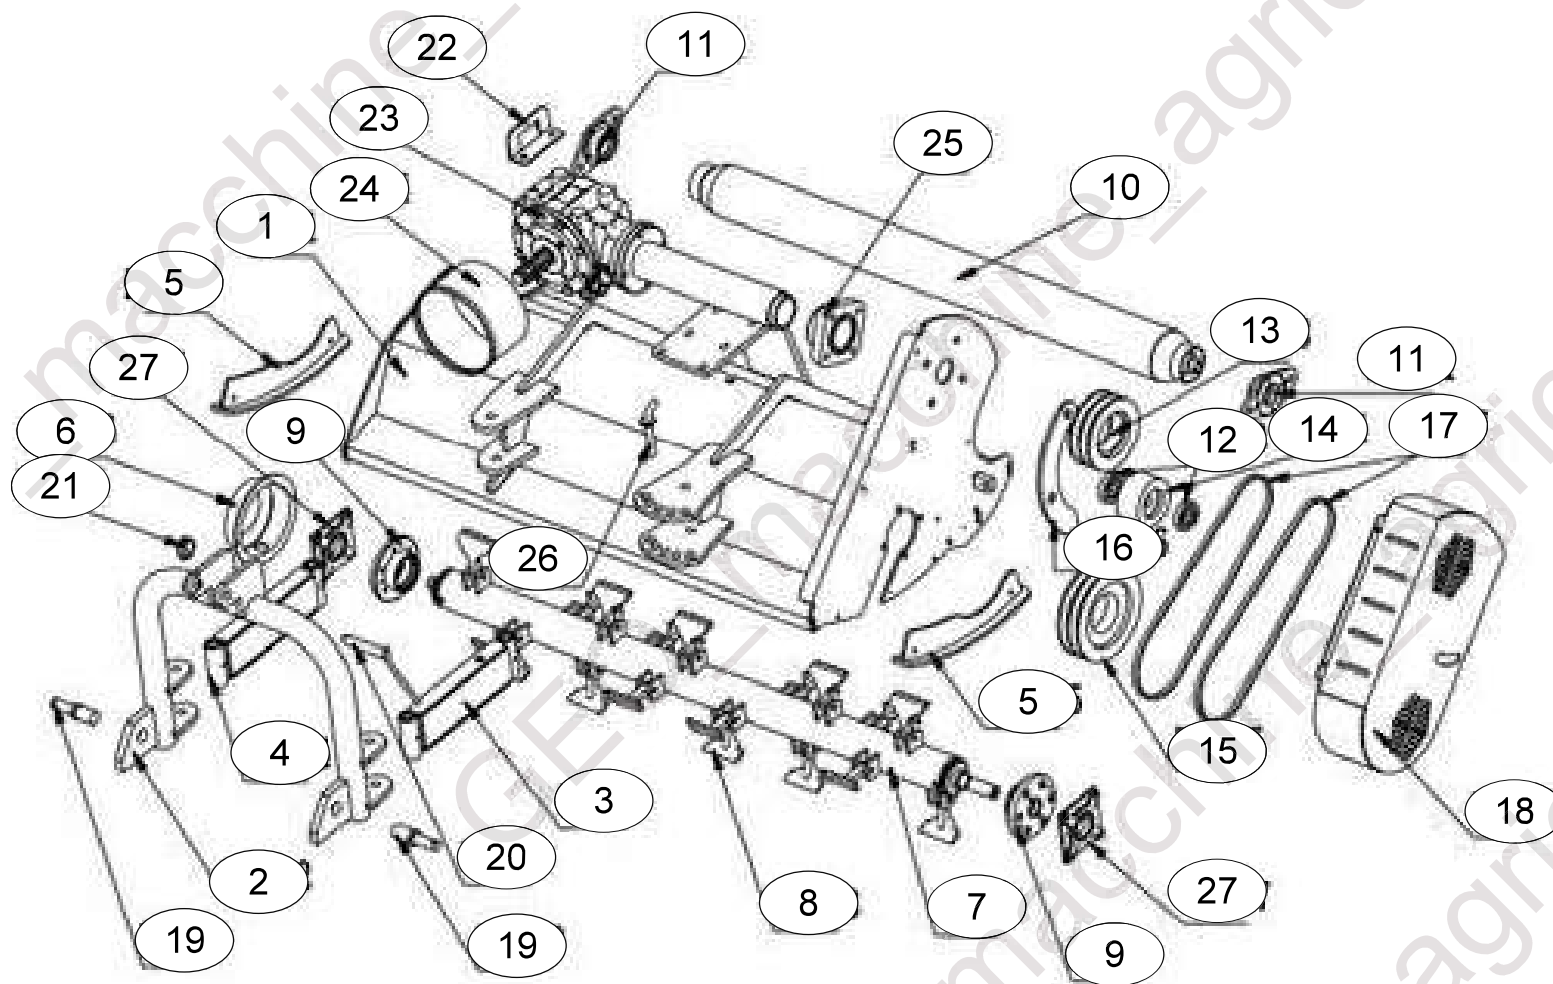



Pos	Code	Description	NOTE	Q.
1	EFM125.001	Mower Body 125		1
1	EFM145.001	Mower Body 145		1
1	EFM155.001	Mower Body 155		1
2	EFM002	3 point		1
3	EFM003	Right Point Arm		1
4	EFM004	Lift Point Arm		1
5	EFM115.023	RIHGT CHUTE BOARD ASSEMBLY		2
6	EFM006	Bearing Conver		1
7	EFM115.003	CUTTER SHAFT ASSEMBLY EFM 115		1
7	EFM125.003	CUTTER SHAFT ASSEMBLY EFM 125		1
7	EFM145.003	CUTTER SHAFT ASSEMBLY EFM 145		1
7	EFM155.003	CUTTER SHAFT ASSEMBLY EFM 155		1
8	EFM.100.00.107	HAMMER		0
9	EFM115.118	BEARING SEAT GUARD PLATE		2
10	EFM115.014	ROLLER ASSEMBLY EFM 115		1
10	EFM125.014	ROLLER ASSEMBLY EFM 125		1
10	EFM145.014	ROLLER ASSEMBLY EFM 145		1
10	EFM155.014	ROLLER ASSEMBLY EFM 155		1
11	GB.7810-UCFLU204	BEARING WITH DIAMOND SEAT UCFLU204		2
12	GB276-6006	Bearing 6006		2
13	EFG120.106.2	Big belt pulley 170mm 2 grooves		1
14	EFM014	Adjustable pully		1
15	EFG120.105.2	small belt pulley 120mm 2 grooves		1
16	EFM016	Ajustable bar		1
17	GB/1154-17.41	BELT B 41 (1041Li)		2

Pos	Code	Description	NOTE	Q.
18	EFM018	Conver		1
19	EFM019	Botton pins CAT I		2
20	EFM020	top pins CAT I		4
21	EFM021	R pins		3
22	EFM022	Hooker		1
23	EFM023	Gearbox with shaft		1
24	EFM024	Gearbox Conver		1
25	UCF207	BEARING SEAT UCF207 SQUARED		1
26	EFM026	Lock pin		1
27	EFM027	Hammer axle Bearing UCFC207		2
1	EFM115.001	Mower Body 115		1