


TL



GEO Italy S.R.L.

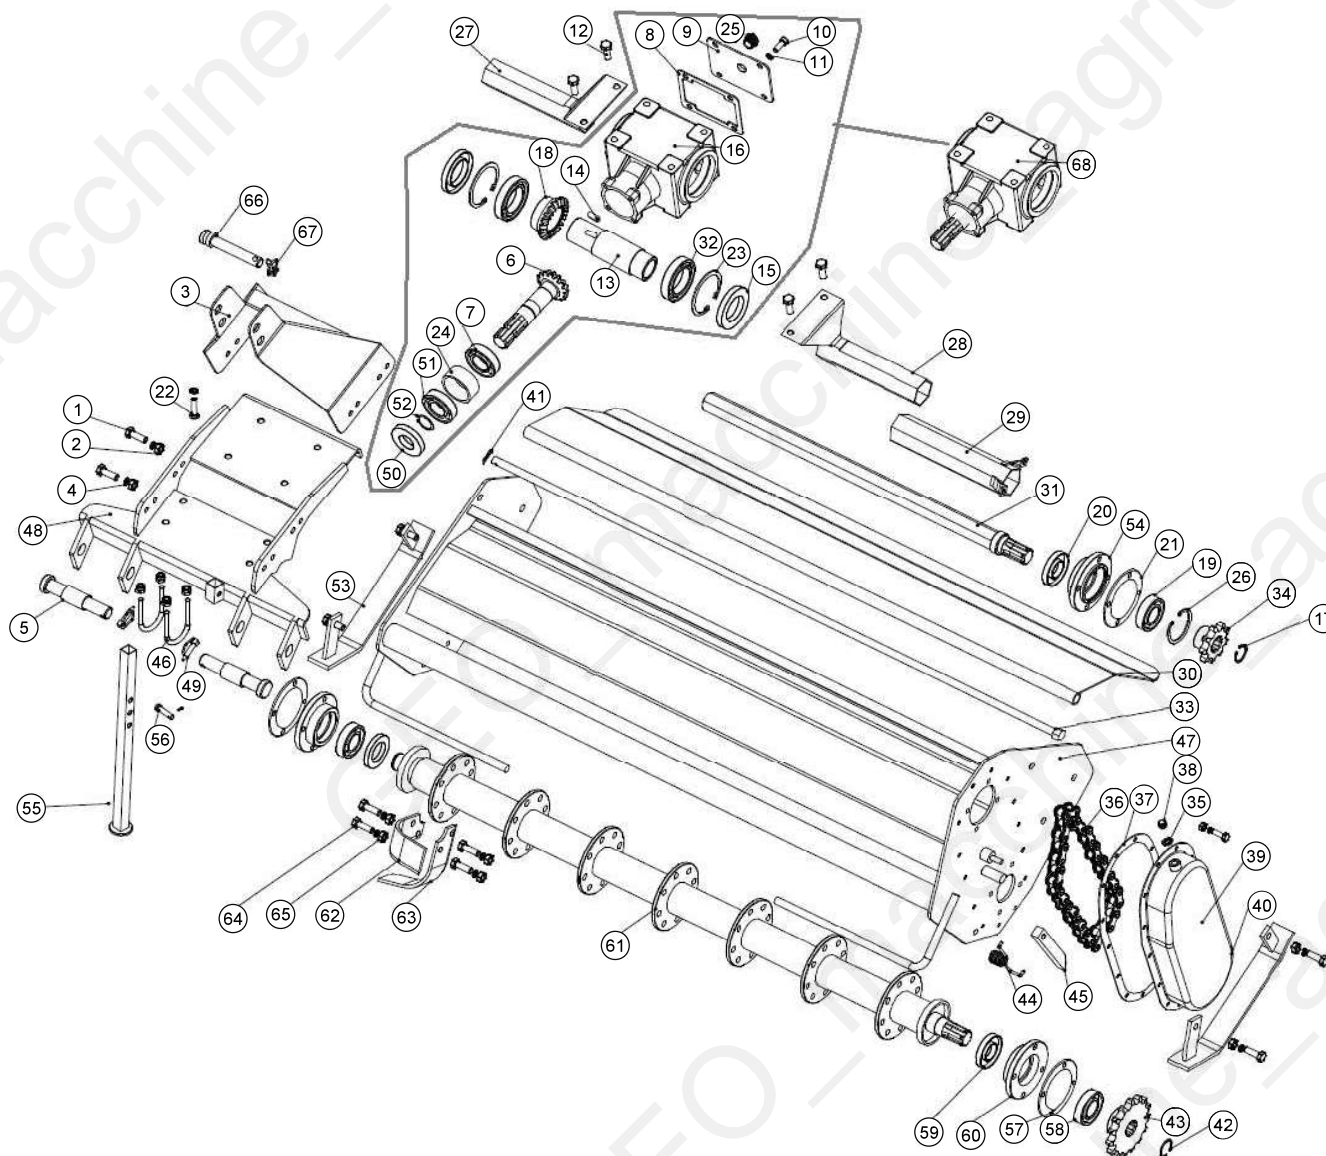

Machine: TL

Assembly: TL_parte 1



Pos	Code	Description	NOTE	Q.
1	TL.001	Bolts		8
2	TL.002	Nuts		8
3	TL.003	Shield protective cover		1
4	TL.004	Washer		8
5	TL.005	Lower suspension pin		2
6	TL.006	Small bevel gear		0
7	TL.007	Bearing 30207		0
8	TL.008	Oil seal ring		0
9	TL.009	Cap		0
10	TL.010	Bolts		0
11	TL.011	Washer		0
12	TL.012	Bolts		0
13	TL.013	Splite sleeve		0
14	TL.014	Flat key		0
15	GB13871-94-55X90X12	Oil seal of bearing seat 55*90*12		2
16	TL.016	Intermediate gearbox		0
17	TL.017	Circlip diam 32		0
18	TL.018	Big bevel gear		0
19	TL.019	Bearing 6207		0
20	GB13871-94-45X65X12	Oil seal 45X65X12		0
21	TL.021	Oil seal ring		1
22	TL.022	Bolts		0
23	TL.023	Eyelet washer diam 90		2
24	TL.024	bushing		0
25	TL.025	Oil check plug		0

GEO Italy S.R.L.

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT

Page 5

Machine: TL

Assembly: TL_parte 1



Pos	Code	Description	NOTE	Q.
26	TL.026	Eyelet washer diam 72		8
27	TL.027	Small sleeve tabe		8
28	TL.028	Small sleeve tabe		1
29	TL.029	Big sleeve tabe		1
30	TL.030.01	Tail plate TL95		1
30	TL.030.02	Tail plate TL105		1
30	TL.030.03	Tail plate TL115		1
30	TL.030.04	Tail plate TL125		1
30	TL.030.05	Tail plate TL135		1
31	TL105.66.36	2nd EXAGONAL shaftTL105		1
31	TL115.71.36	2nd EXAGONAL shaftTL115		1
31	TL125.75.36	2nd EXAGONAL shaft TL125		1
31	TL135.81.36	2nd EXAGONAL shaftTL135		1
31	TL95.61.36	2nd EXAGONAL shaft TL95		1
32	TL.032	Bearing 6011		2
33	TL.033.01	Rod TL95		1
33	TL.033.02	Rod TL105		1
33	TL.033.03	Rod TL115		1
33	TL.033.04	Rod TL125		1
33	TL.033.05	Rod TL135		1
34	TL.034	Small sprocket wheel TL		1
35	TL.035	Washer		1
36	TL.036.01	Chain TL95-105(12A-60H)		1
36	TL.036.02	Chain TL115-125-135 (16A-80H)		1
37	TL.037	Oil seal ring		1

GEO Italy S.R.L.

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT

Page 6

Machine: TL

Assembly: TL_parte 1



Pos	Code	Description	NOTE	Q.
38	TL.038	Oil filler plug		1
39	TL.039	Side chain gear box		1
40	TL.040	Oil drain plug		1
41	TL.01.041	B type pin		1
42	TL.042	Circlip diam 32		1
43	TL.043	Big sprocket wheel TL		1
44	TL.044	Spring		1
45	TL.045	Tension plate		1
46	TL.046	U-bolts		2
47	TL.047.01	Main Frame TL95		1
47	TL.047.02	Main Frame TL105		1
47	TL.047.03	Main Frame TL115		1
47	TL.047.04	Main Frame TL125		1
47	TL.047.05	Main Frame TL135		1
48	TL.048	Foot pedal		1
49	TL.049	Spring lock pin		0
50	GB13871-94-35x72x12	Oil Seal 35x72x12		0
51	TL.051	bearing 6207		0
52	TL.052	Shaft washer diam 32		1
53	TL.053	Anti-friction plate L		2
54	TL.054	Bearing seat		1
55	TL.055	Stay bar		1
56	TL.056	Pin		1
57	TL.057	Oil seal ring		2
58	TL.058	Bearing 6207		2

GEO Italy S.R.L.

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT

Page 7


Machine: TL

Assembly: TL_parte 1



Pos	Code	Description	NOTE	Q.
59	GB13871-94-40x65x12	Oil seal 40*65*12		2
60	TL.060	Bearing seat		2
61	TL.061.01	Blades shaftTL95		1
61	TL.061.02	Blades shaftTL105		1
61	TL.061.03	Blades shaftTL115		1
61	TL.061.04	Blades shaft TL125		1
61	TL.061.05	Blades shaftTL135		1
62	1GQ.11.128	Blade (L)		1
63	1GQ.11.127	Blade (R)		1
64	TL.064	Blades bolt		1
65	TL.065	Blades nut		1
66	TL.066	Upper suspension pin		1
67	TL.067	Spring lock pin		1
68	TL.068	Complete gearbox		1

TL 135 - Roller front

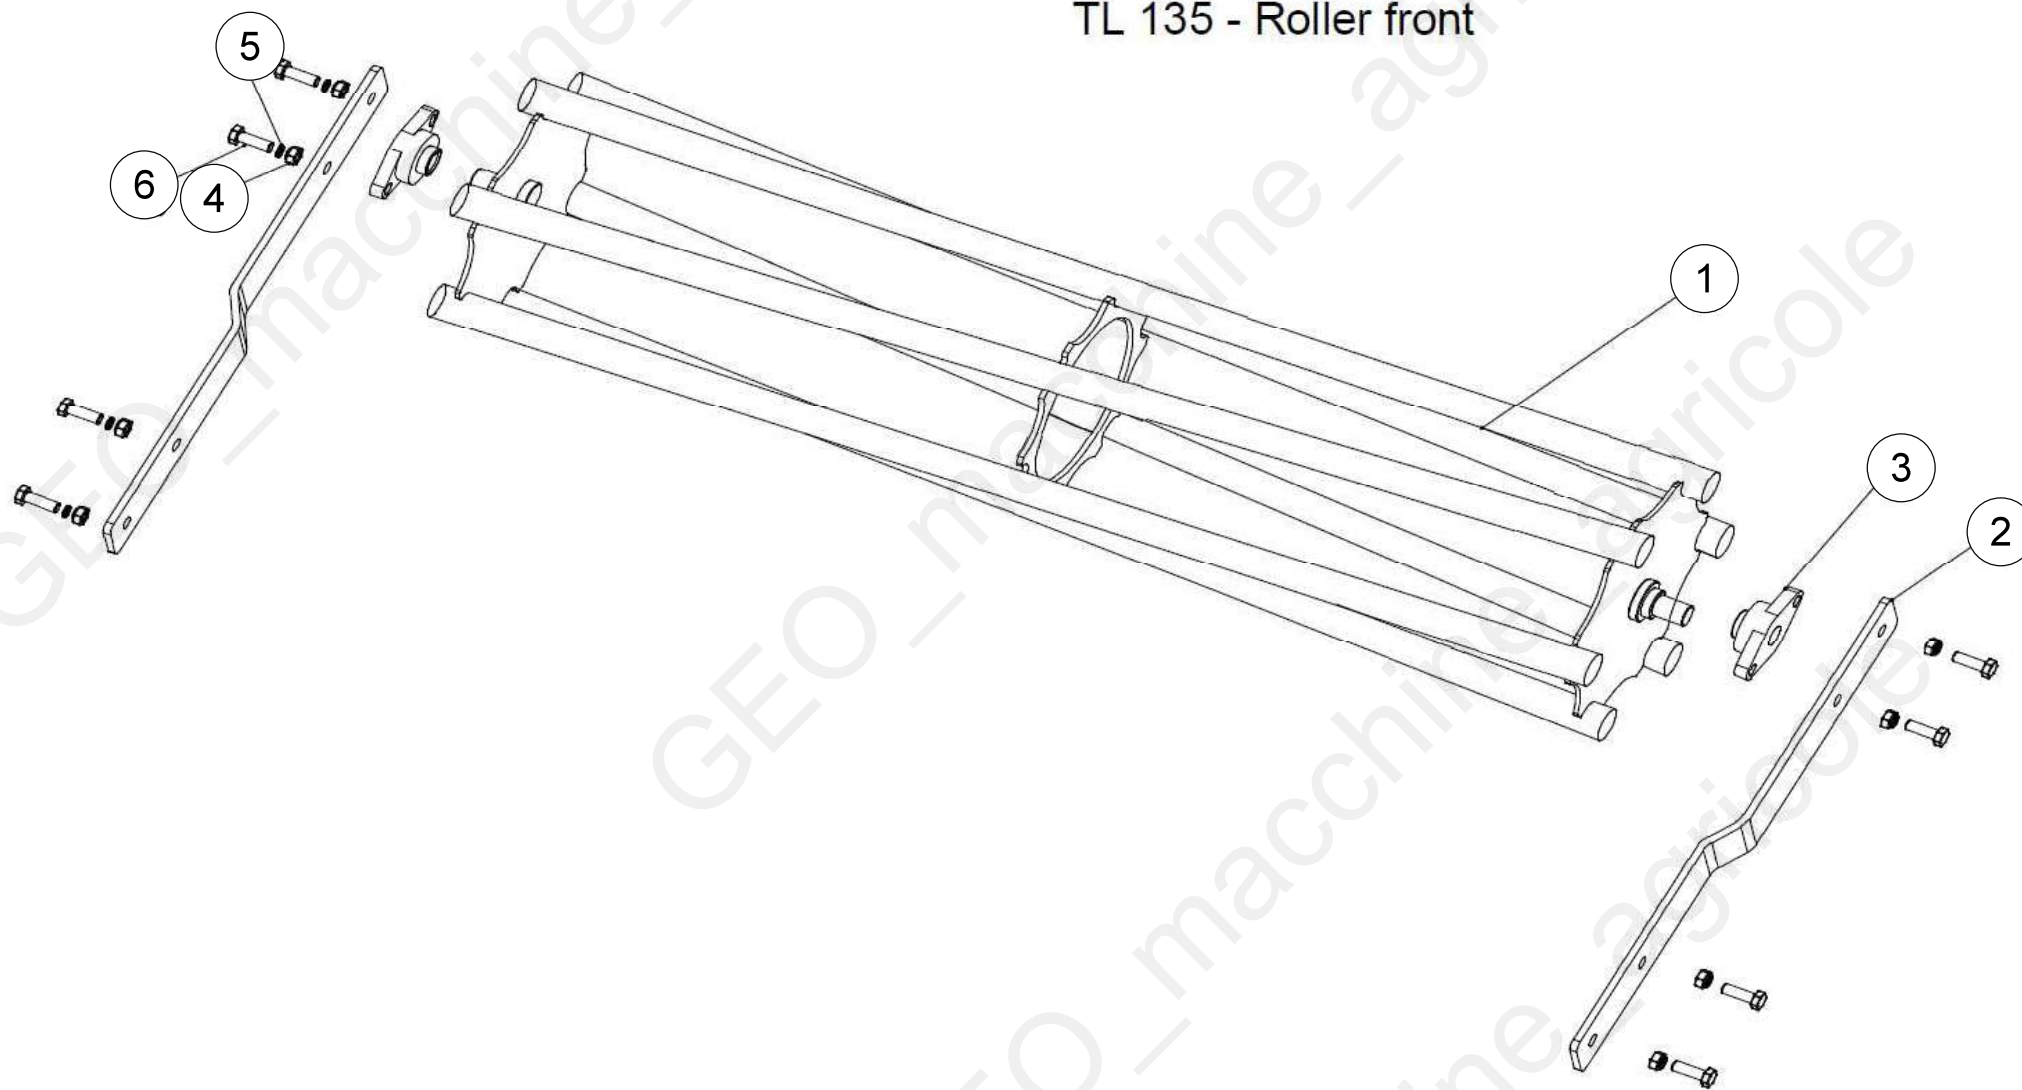

Machine: TL

Assembly: TL_parte 2



Pos	Code	Description	NOTE	Q.
1	TL135.001	roller 135		1
2	TL135.002	Connection plate		2
3	GB/T7810-UCFLU205	BEARING UCFLU205		2
4	TL135.004	nut		8
5	TL135.005	washer		8
6	TL135.006	bolt		8