


TL 2010_2014



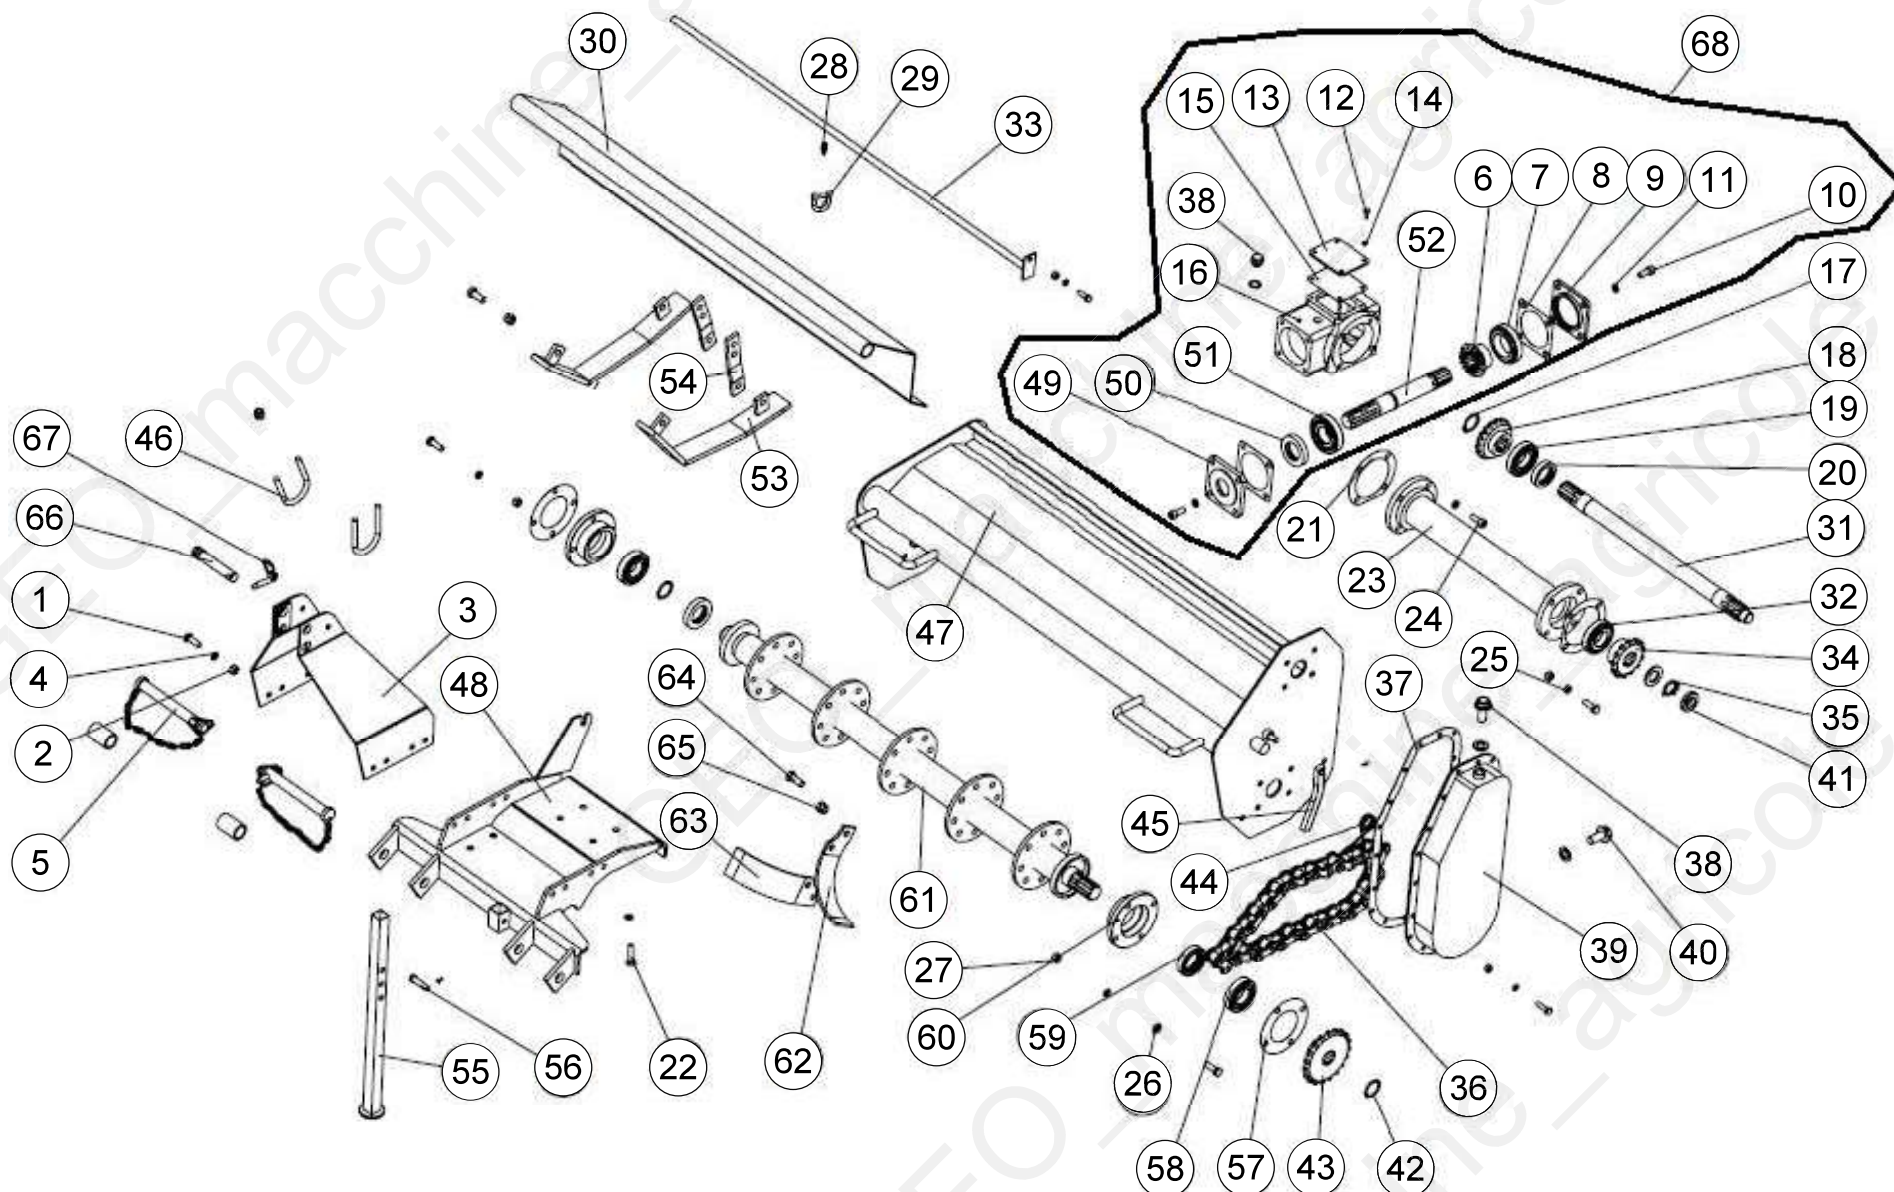

Pos	Code	Description	NOTE	Q.
1	TL.001	Bolts		8
2	TL.002	Nuts		8
3	TL.003	Shield protective cover		1
4	TL.004	Washer		8
5	TL.005	Lower suspension pin		2
6	TL.006	Small bevel gear		1
7	TL.007	Bearing 30207		1
8	TL.008	Oil seal ring		2
9	TL.009	Cap		1
10	TL.010	Bolts		8
11	TL.011	Washer		8
12	TL.012	Bolts		4
13	TL.1.013	Cap		1
14	TL.1.014	Washer		4
15	TL.1.015	Oil seal ring		1
16	TL.2.016	Intermediate gearbox		1
17	TL.017	Circlip diam 32		1
18	TL.1.018	Big bevel gear		1
19	TL.1.019	Bearing		1
20	TL.1.020	Oil seal		1
21	TL.1.021	Oil seal ring		2
22	TL.1.022	Bolts		4
23	TL.095.023	Main Frame TL95		1
23	TL.105.023	Main Frame TL105		1
23	TL.115.023	Main Frame TL115		1

Pos	Code	Description	NOTE	Q.
23	TL.125.023	Main Frame TL125		1
23	TL.135.023	Main Frame TL135		1
24	TL.1.024	Bolts		8
25	TL.1.025	Washer		8
26	TL.1.026	Washer		8
27	TL.1.027	Nut		0
28	TL.1.028	Chain		1
29	TL.1.029	Hook		1
30	TL.030.01	Tail plate TL95		1
30	TL.030.02	Tail plate TL105		1
30	TL.030.03	Tail plate TL115		1
30	TL.030.04	Tail plate TL125		1
30	TL.030.05	Tail plate TL135		1
31	TL.095.031	2nd shaft TL95		1
31	TL.105.031	2nd shaft TL105		1
31	TL.115.031	2nd shaft TL115		1
31	TL.125.031	2nd shaft TL125		1
31	TL.135.031	2nd shaft TL135		1
32	TL.1.032	Bearing		1
33	TL.033.01	Rod TL95		1
33	TL.033.02	Rod TL105		1
33	TL.033.03	Rod TL115		1
33	TL.033.04	Rod TL125		1
33	TL.033.05	Rod TL135		1
34	TL.034	Small sprocket wheel TL		1

Pos	Code	Description	NOTE	Q.
35	TL.035	Washer		1
36	TL.036.01	Chain TL95-105(12A-60H)		1
36	TL.036.02	Chain TL115-125-135 (16A-80H)		1
37	TL.037	Oil seal ring		1
38	TL.038	Oil filler plug		1
39	TL.039	Side chain gear box		1
40	TL.040	Oil drain plug		1
41	TL.041	Circular nut		1
42	TL.042	Circlip diam 32		1
43	TL.043	Big sprocket wheel TL		1
44	TL.044	Spring		1
45	TL.045	Tension plate		1
46	TL.046	U-bolts		2
47	TL.047.01	Main Frame TL95		1
47	TL.047.02	Main Frame TL105		1
47	TL.047.03	Main Frame TL115		1
47	TL.047.04	Main Frame TL125		1
47	TL.047.05	Main Frame TL135		1
48	TL.048	Foot pedal		1
49	TL.1.049	Cap		1
50	TL.1.050	Oil seal		1
51	TL.1.051	Bearing		1
52	TL.1.052	First shaft		1
53	TL.053	Anti-friction plate L		1
54	TL.1.054	Connection plate		2

Pos	Code	Description	NOTE	Q.
55	TL.055	Stay bar		1
56	TL.056	Pin		1
57	TL.057	Oil seal ring		2
58	TL.058	Bearing 6207		2
59	TL.059	Oil seal		2
60	TL.060	Bearing seat		2
61	TL.061.01	Blades shaftTL95		1
61	TL.061.02	Blades shaftTL105		1
61	TL.061.03	Blades shaftTL115		1
61	TL.061.04	Blades shaft TL125		1
61	TL.061.05	Blades shaftTL135		1
62	1GQ.11.128	Blade (L)		0
63	1GQ.11.127	Blade (R)		0
64	TL.064	Blades bolt		0
65	TL.065	Blades nut		0
66	TL.066	Upper suspension pin		1
67	TL.067	Spring lock pin		1
68	TL.01.060	Complete Gearbox		0