

ATV SW



GEO Italy S.R.L.


Latest release: 16/03/2021

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT

Page 1

Table of Contents

Tavola	Page
ATV SW_parte 1	3
ATV SW_parte 2	5
ATV SW_parte 3	7
ATV SW_parte 4	9
ATV SW_parte 5	12
ATV SW_parte 6	15
Motore JF168-200	17

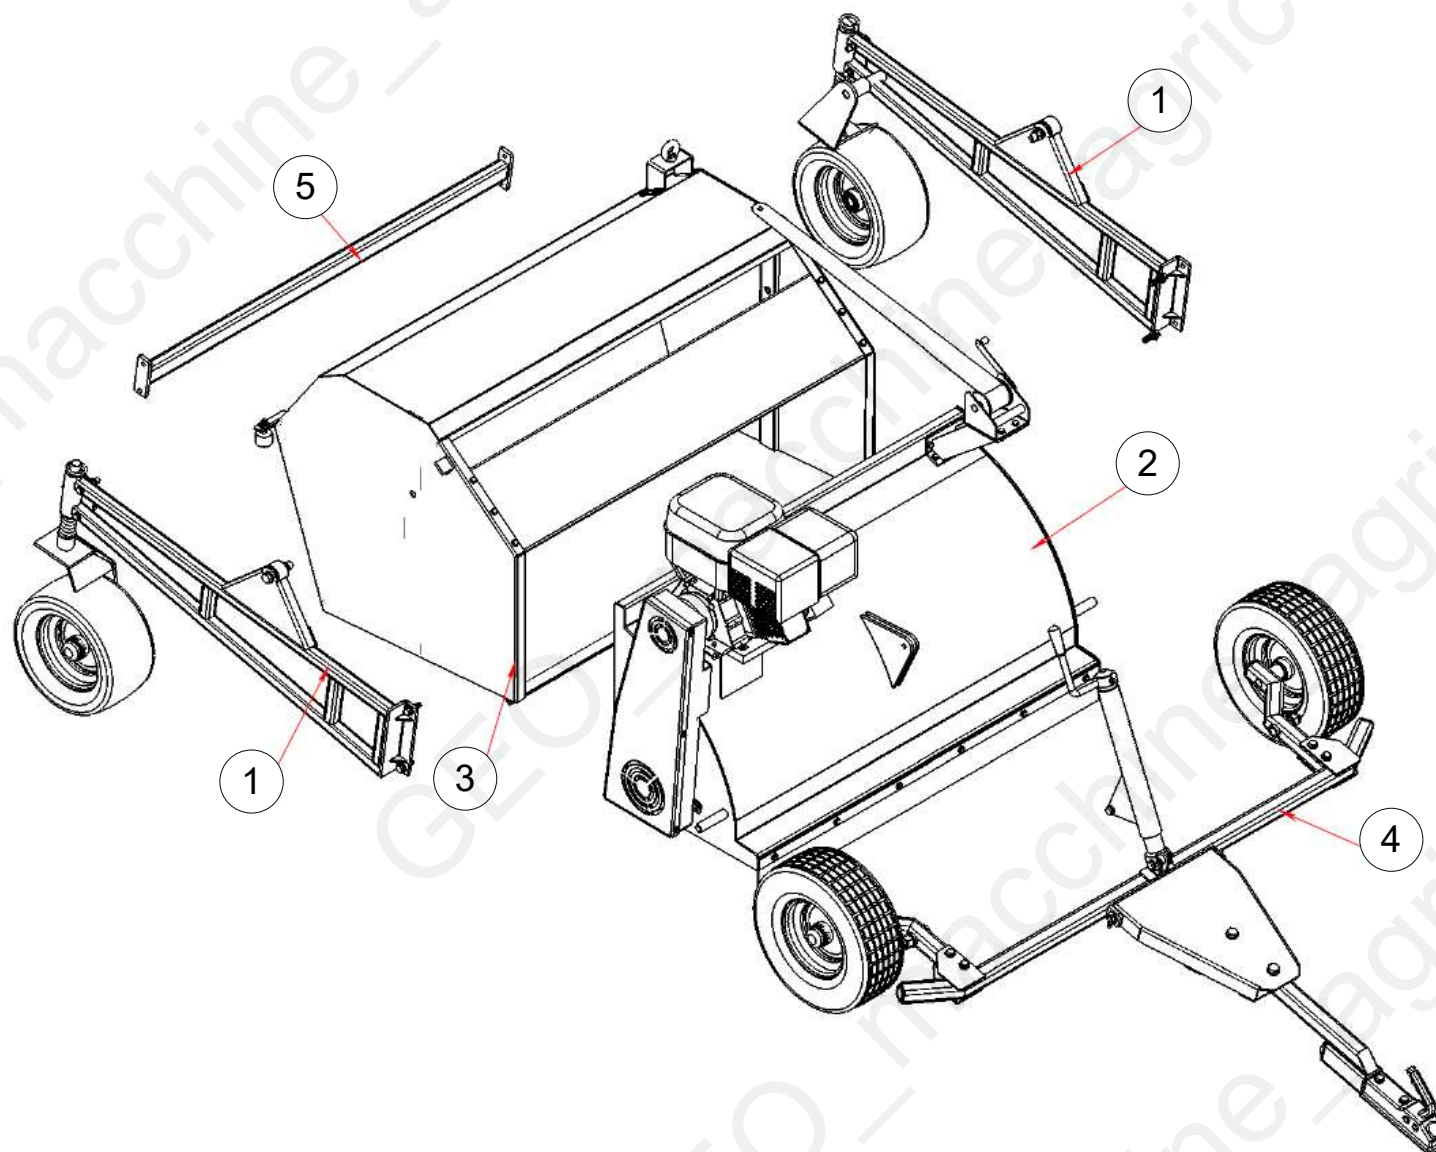


Machine: ATV SW

Assembly: ATV SW_parte 1



Pos	Code	Description	NOTE	Q.
5	KSP120.022	back connecting beam		1

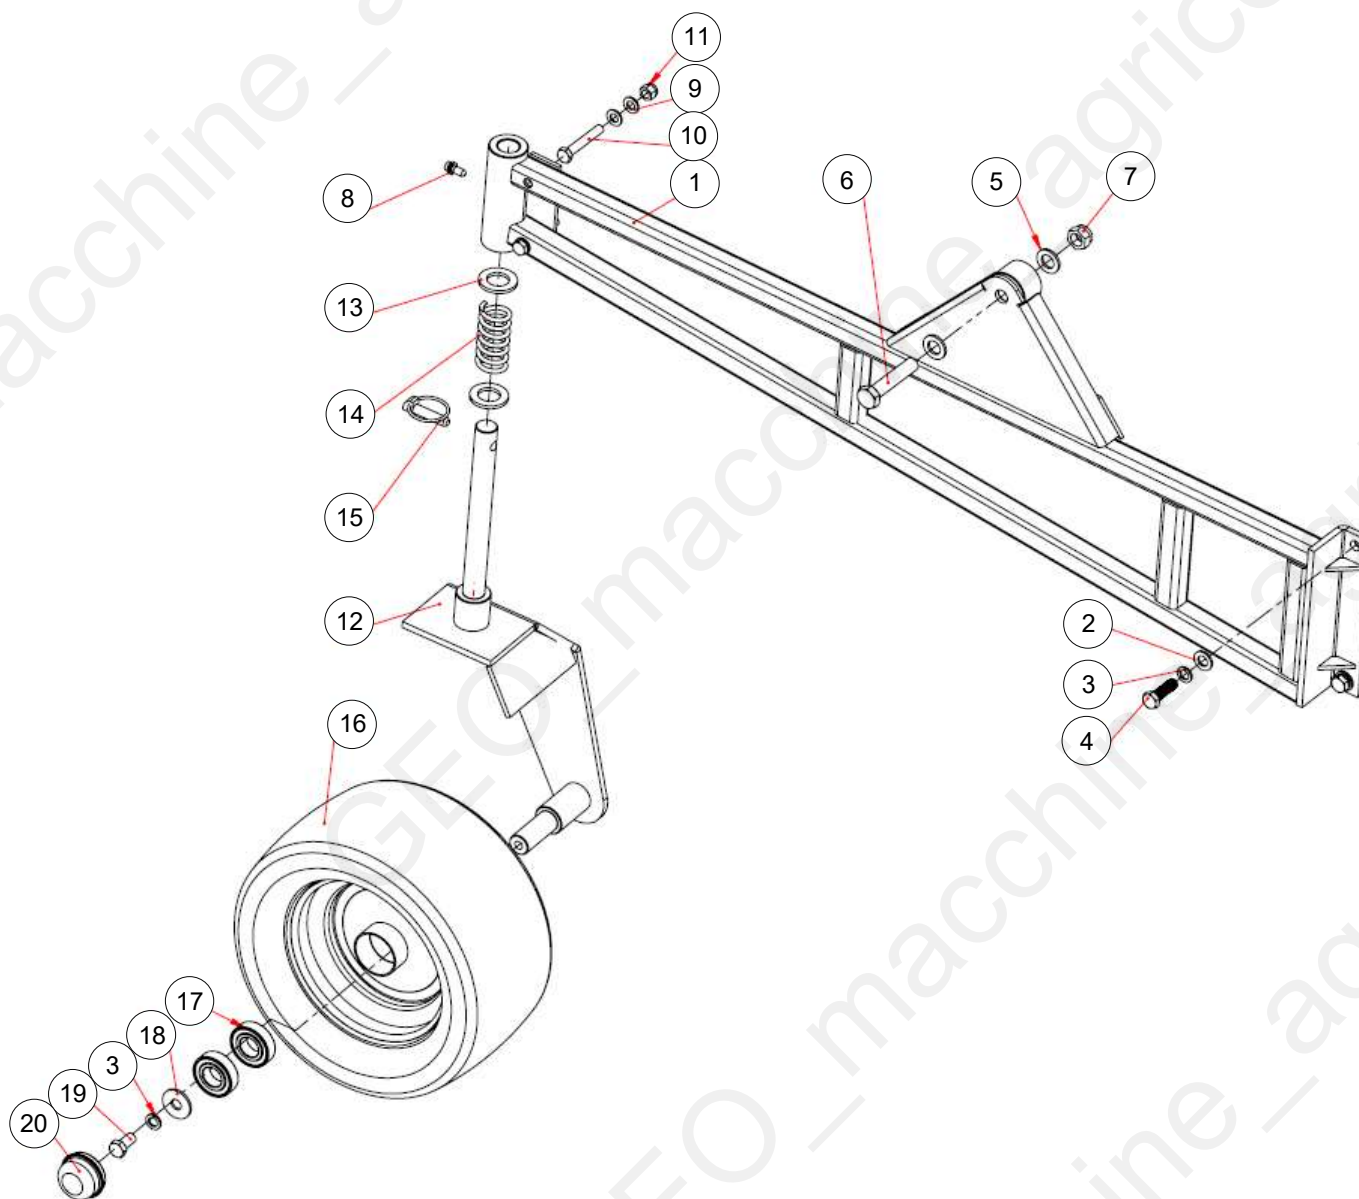


Machine: ATV SW

Assembly: ATV SW_parte 2



Pos	Code	Description	NOTE	Q.
1	KSP120.020	frame(left)/(right)		2
2	GB/T.95-2002-12	Flat washer 12 × 2.5		4
3	GB/T859-1987-12	spring washer 12		6
4	GB/T5783-2000-M12x40	Bolt M12x40		4
5	GB/T.95-2002-16	plain washer 16		4
6	GB/T.5781-2000-M16x85	outer hexagon head bolt M16*85		2
7	GB/T889.1-2000-16	Locking Nut M16		2
8	GB1152-89/M6	Grease nipple M6		2
9	GB/T.95-2002-10	Flat washer 10 × 2		8
10	GB/T.5780-2000-M10x65	outer hexagon head bolt M10*65		4
11	GB/T.6184-2000-10	locking nut M10		4
12	KSP120.012	wheel fork(left)		1
13	GB/T.95-2002-24	Flat washer 24 × 4		4
14	KSP120-120	wheel pressure spring		2
15	GB119-86	lock pin assembly diam 11		2
16	ATVSW.2.016	wheel 13x5.00-6		2
17	GB/T.276-94-6205-2Z	bearing 6205-2Z		4
18	GB/T.96.2-13.5x37	big plain washer 13.5*37*3		2
19	GB/T5783-2000-M12x25	Bolt M12x25		2
20	AT120-114	end cover		2

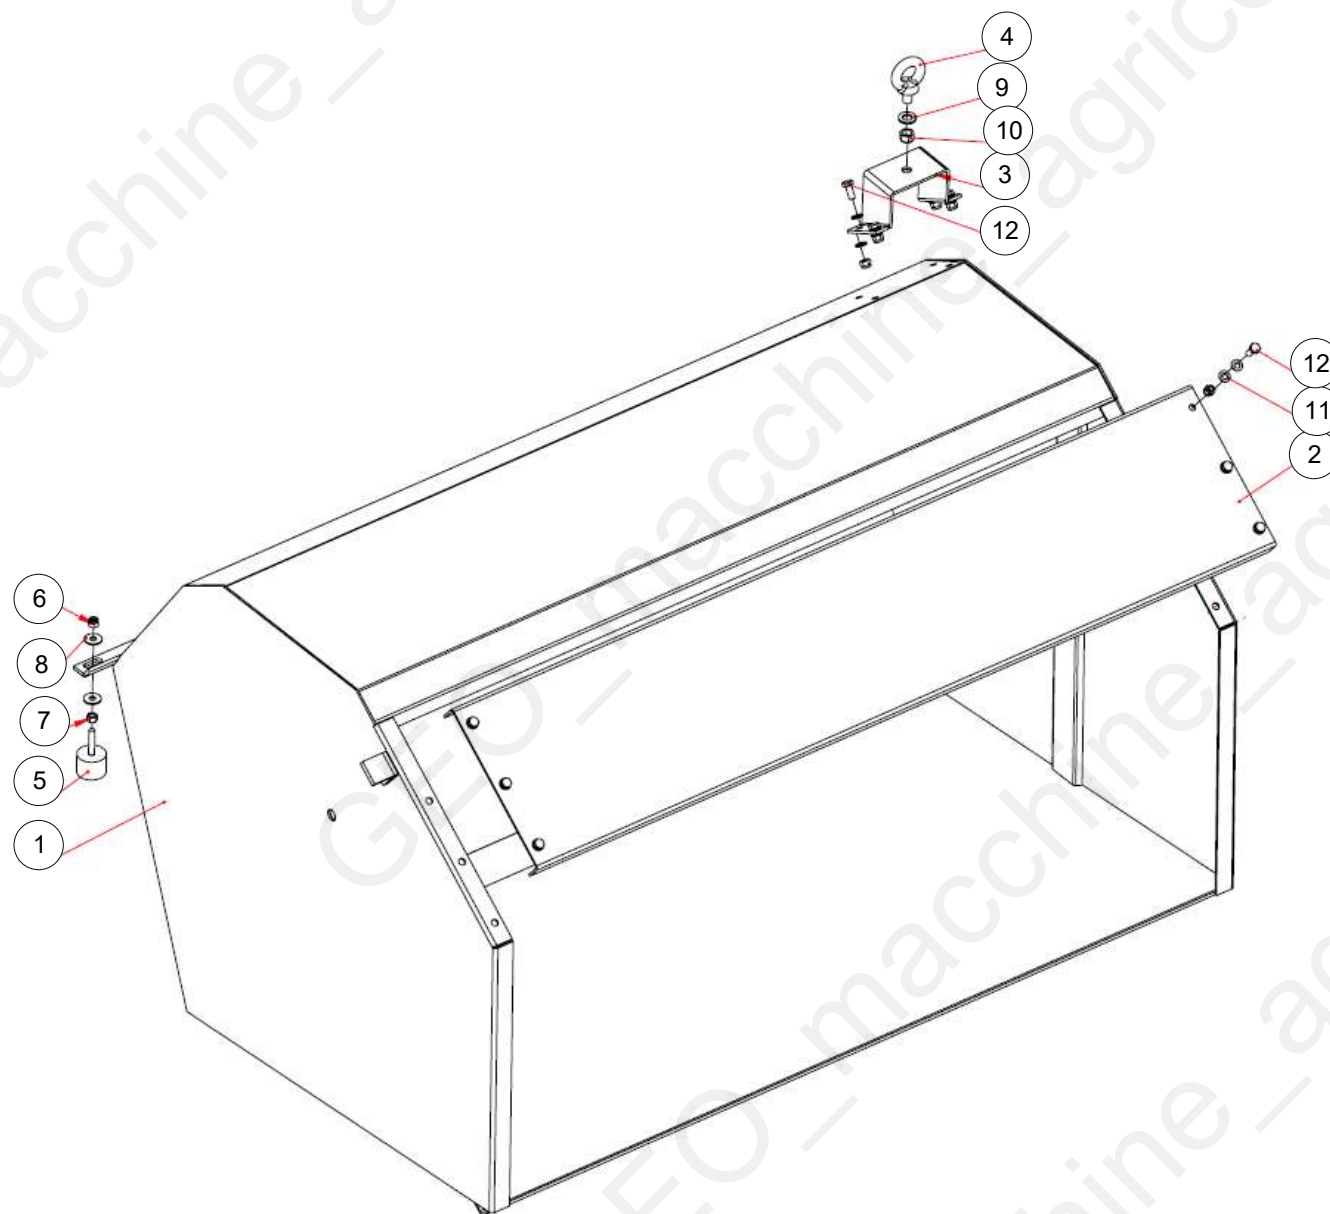


Machine: ATV SW

Assembly: ATV SW_parte 3




Pos	Code	Description	NOTE	Q.
1	KSP120.013	dump skip		1
2	KSP120.023	shrouding		1
3	KSP120.104	lug seat		1
4	GB.825-88-M12x22	lifting bolt M12*22		1
5	KSP120.114	adjust rubber		2
6	GB/T889.1-2000-8	Locking nut M8		12
7	GB/T.41-2000-8	Nut M8		2
8	GB/T.96.2-2002-9x24	big washer 9*24*2		4
9	GB/T.95-2002-12	Flat washer 12 × 2.5		1
10	GB/T889.1-2000-M12	Locknut M12		1
11	GB/T.95-2002-8	Flat washer 8 × 1.6		20
12	GB/T5783-2000-M8x20	Bolt M8x20		10

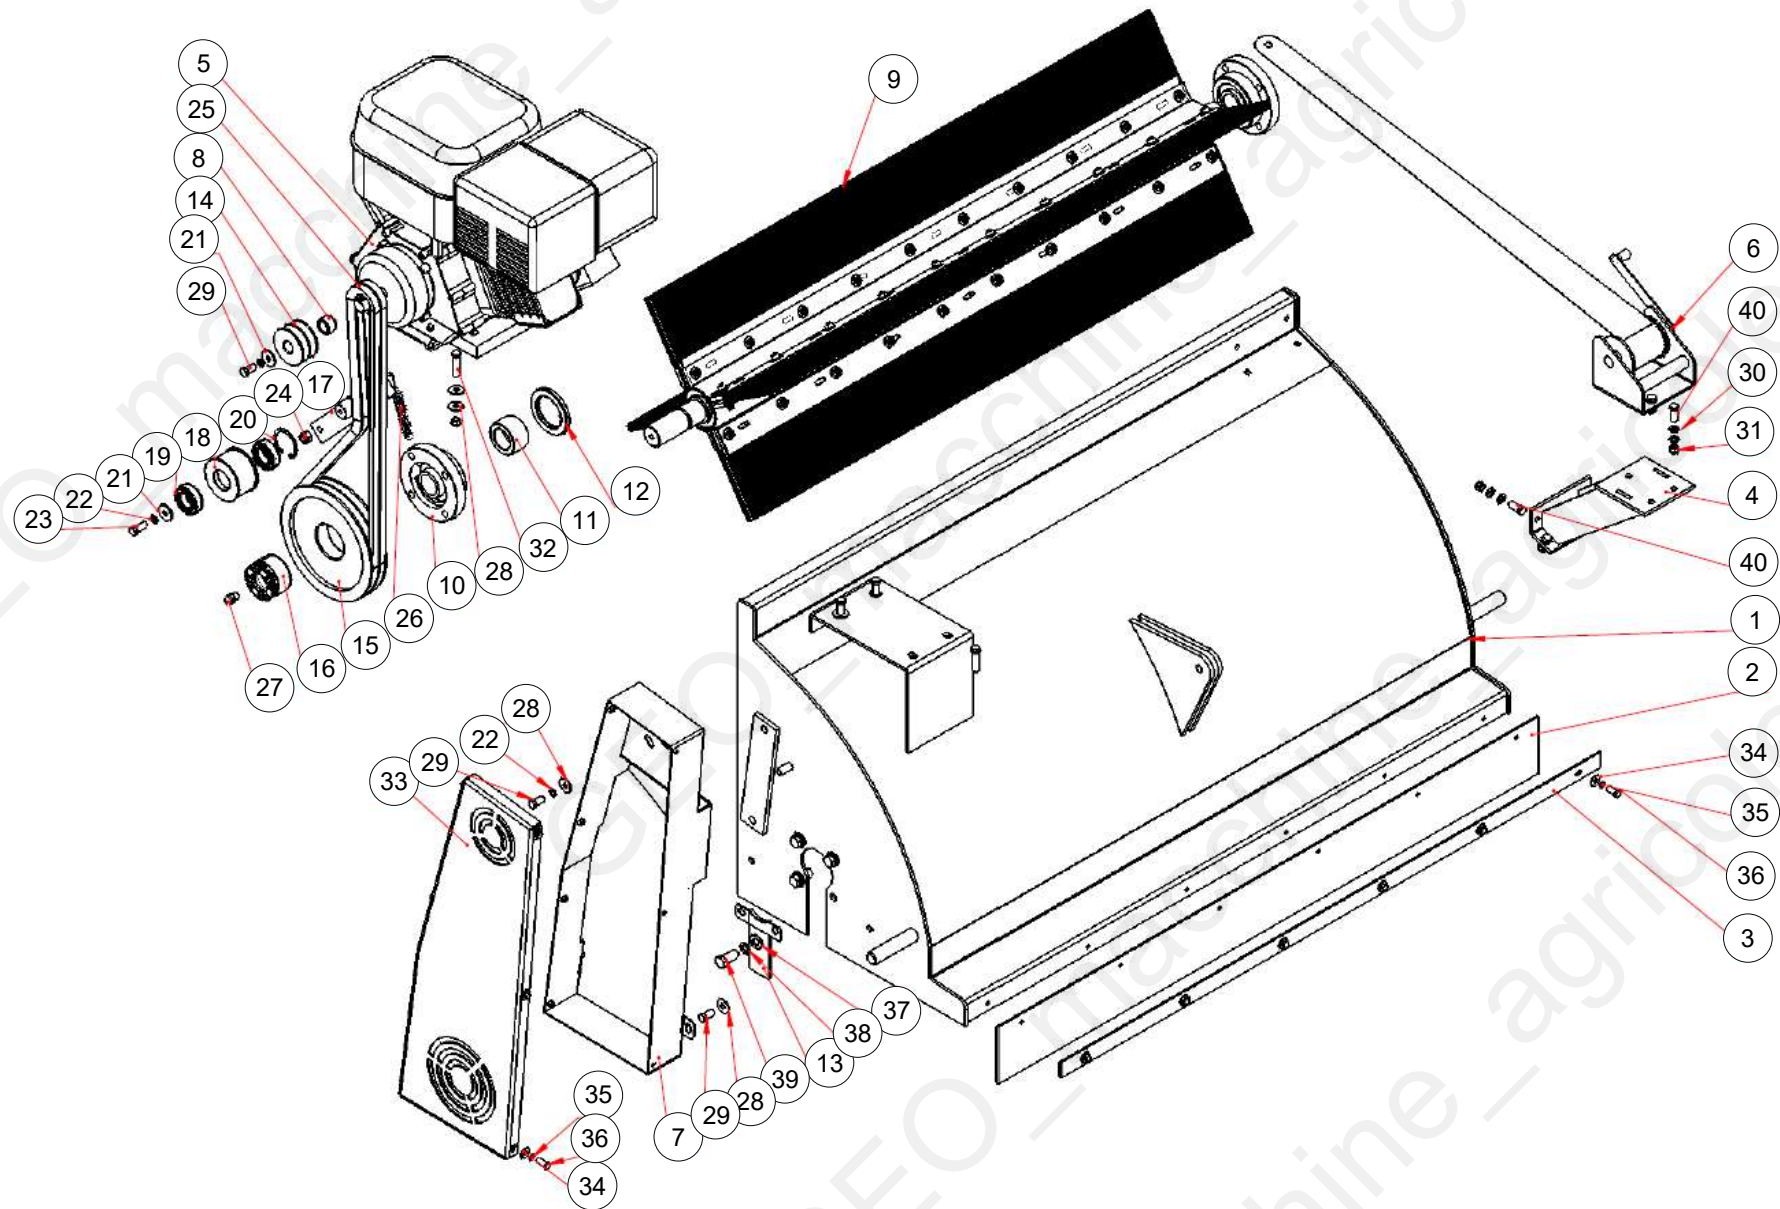

Pos	Code	Description	NOTE	Q.
1	KSP120.011	deck weldment		1
2	KSP120.250	rubber		1
3	KSP120.234	rubber cover plate		1
4	KSP120.015	cable support assembly		1
5	LC168F-B	engine		1
6	ATSW120.006	winch		1
7	KSP120.016	protecting for transmission		1
8	KSP120.251	spacer		1
9	KSP120.06	aluminum brush		1
10	GEO_UCF207	Bearing with flange UC207-Z		2
11	AT120-106	Sleeve for rotor		1
12	GB13871-1992-55x80x8	Oil Seal 55x80x8		1
13	KSP120.028	protecting baffle		1
14	KSP120.101	small pully		1
15	KSP120.120	driving pully		1
16	GBT.28701-2012	power lock 35*60		1
17	AT120-027	tensioning wheel bracket		1
18	KSP120.121	tensioning wheel		1
19	GB/T.276-94-6005	bearing 6005-2Z		2
20	GB893.1-86/47	Circlip 47		1
21	GB/T.5287-2002-28	big washer 9*28*3		2
22	GB/T859-1987-8	spring washer 8		6
23	GB/T5783-2000-M8x25	Bolt M8x25		1
24	GB/T.6184-2000-10	locking nut M10		1
25	A1346	belt A-1346		2

Pos	Code	Description	NOTE	Q.
26	AT120-116	extension spring		1
27	GB1152-89/M8X1	Grease nipple M8		2
28	GB/T.96.2-2002-9x24	big washer 9*24*2		12
29	GB/T5783-2000-M8x20	Bolt M8x20		7
30	GB/T.95-2002-8	Flat washer 8 × 1.6		18
31	GB/T889.1-2000-8	Locking nut M8		13
32	GB/T.5781-2000-M8x40	outer hexagon head bolt M8*40		4
33	KSP120.103	belt cover		1
34	GB/T.96.2-2002-7x18	big washer C level 7x18x2		13
35	GB/T859-1987-6	spring washer 6		13
36	GB/T5783-2000-M6x20	Bolt M6x20		13
37	GB/T.95-2002-12	Flat washer 12 × 2.5		9
38	GB/T859-1987-12	spring washer 12		8
39	GB/T5783-2000-M12x30	Bolt M12x30		8
40	GB/T5781-2000-M8x25	BOLT M8*25		7

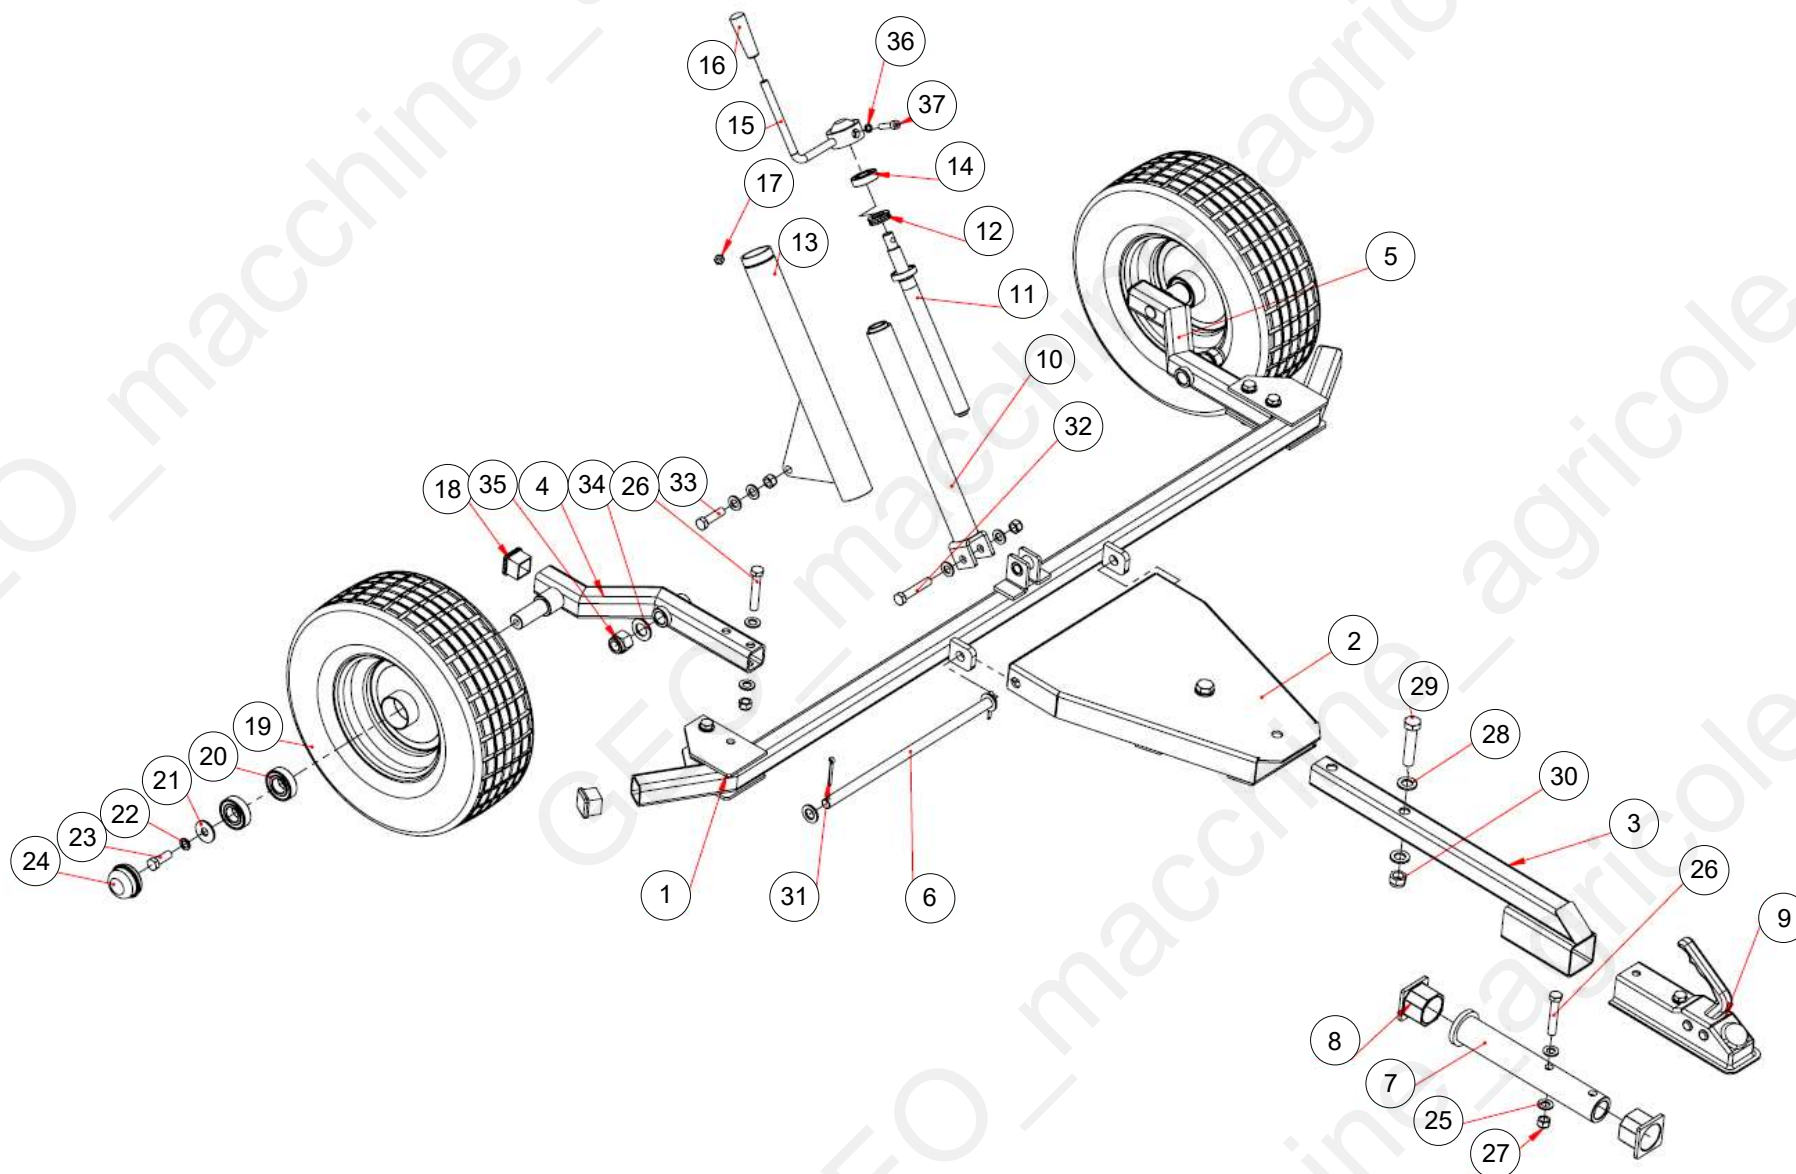


Pos	Code	Description	NOTE	Q.
1	KSP120.017-2	plunger arm		1
2	KSP120.019	traction arm		1
3	ATV120.014	traction square tube		1
4	KSP120.018	wheel bracket		2
5	KSP120.029	wheel fork(right)		1
6	KSP120-233	connecting pin		1
7	KSP120.017-1	connecting pipe		1
8	ATV120.113	Sleeve		2
9	QT50	Trailer coupler 2"		1
10	ATV120-013	inner pipe		1
11	AT120-014	thread rod		1
12	GB/T301-1995	thrust ball bearing 51104		1
13	ATV120-012	outer pipe		1
14	GB/T.276-94-6004	bearing 6004-2Z		1
15	AT120-1011	Handlebar assembly		1
16	AT120-101	grip		1
17	GB1152-89/M8X1	Grease nipple M8		1
18	EF175-155	pipe plug 40*40		4
19	ATVSW.5.019	big wheel 16*6.5-8		2
20	GB/T.276-94-6205-2Z	bearing 6205-2Z		4
21	GB/T.96.2-13.5x37	big plain washer 13.5*37*3		2
22	GB/T859-1987-12	spring washer 12		2
23	GB/T5783-2000-M12x35	Bolt M12x35		2
24	AT120-114	end cover		2
25	GB/T.95-2002-12c	plain washer C level 12		16

Machine: ATV SW

Assembly: ATV SW_parte 5



Pos	Code	Description	NOTE	Q.
26	GB/T5781-2000-M12x70	BOLT M12*70		6
27	GB/T889.1-2000-M12	Locknut M12		8
28	GB/T.95-2002-12c	plain washer C level 12		6
29	GB/T5780-2000-M16x75	Bolt M16x75		2
30	GB/T889.1-2000-16	Locking Nut M16		2
31	GB/T91-2000/5x40	split pin 5x40		2
32	GB/T5781-2000-M12x65	BOLT M12x65		1
33	GB/T5783-2000-M12x45	Bolt M12x45		1
34	GB/T.95-2002-20c	plain washer C level 20*3		2
35	GB/T889.1-2000-M20	Lock Nut M20		2
36	GB/T.859-1987-8	spring washer M8		1
37	GB/T.70.1-2000-M8x35	crew with inner six cylindrical hea M8*35		1

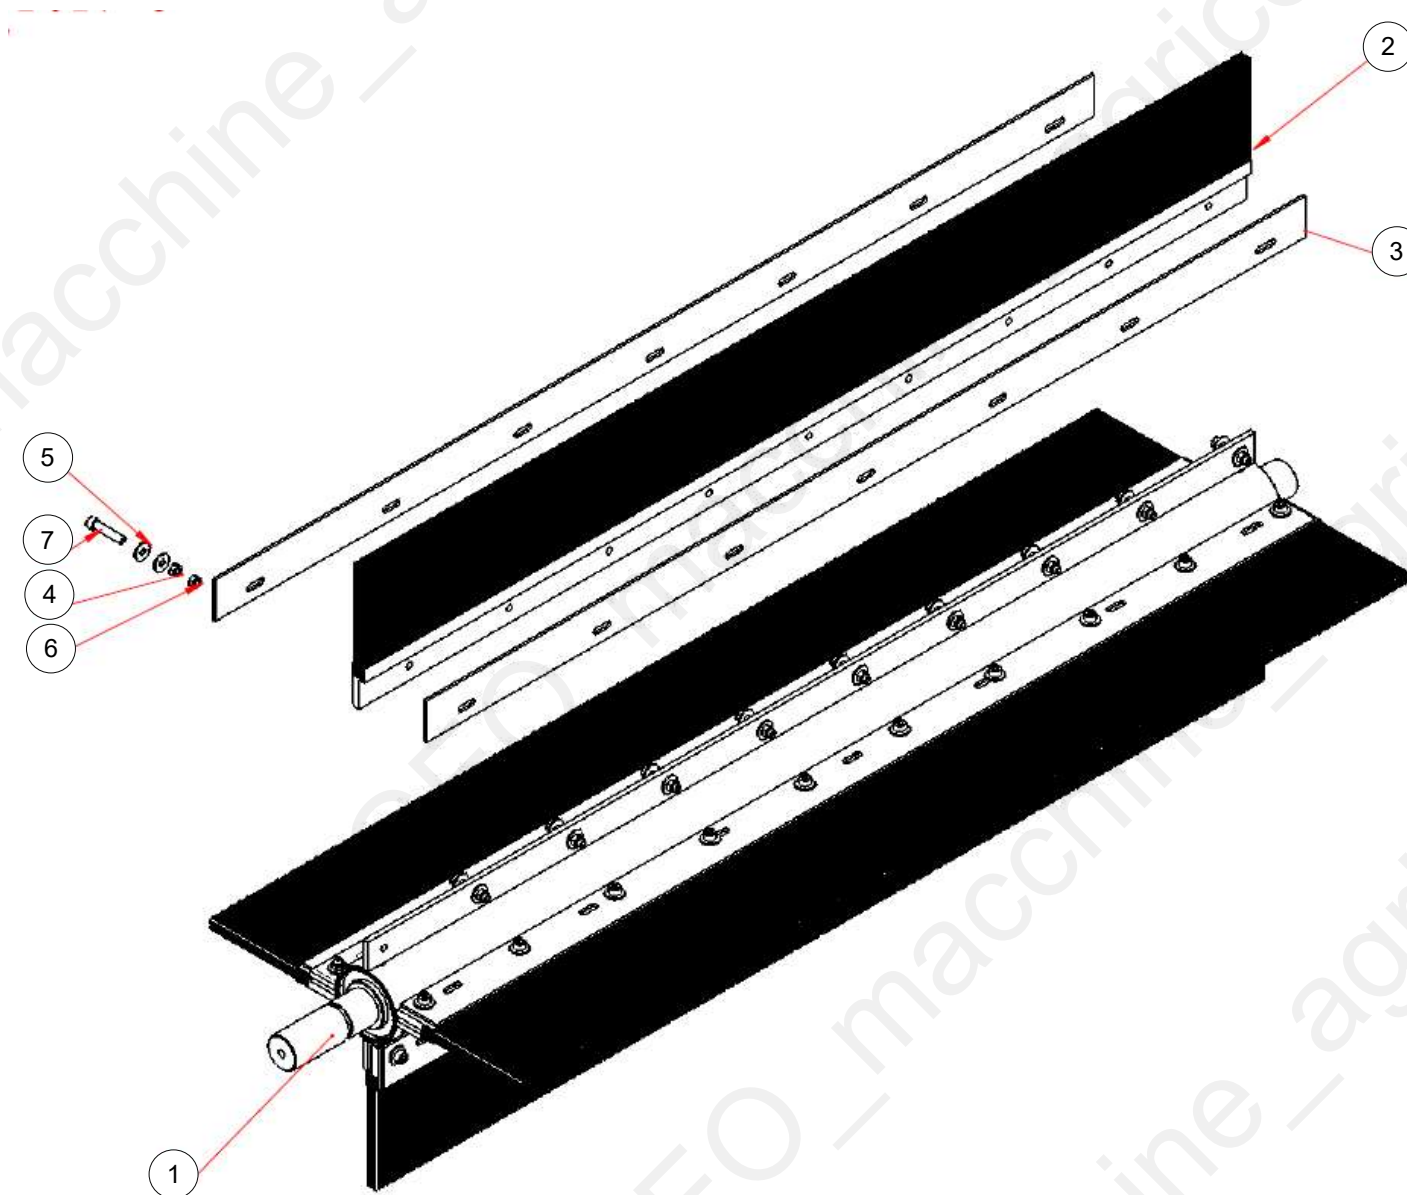

Machine: ATV SW

Assembly: ATV SW_parte 6



Pos	Code	Description	NOTE	Q.
1	KSP120.025	broom shaft		1
2	ATVSW.06.001	brush		4
3	KSP120.235	broom reinforcement board		8
4	GB/T.6170-2000-6	NUT 6		40
5	GB/T.96.2-2002-7x18	big washer C level 7x18x2		80
6	GB/T6182-2000-M6	locking nut M6		40
7	GB/T.70.1-2000-M6x35	screw with inner six cylindrical head M6x35		40

Motore JF168-200




GEO Italy S.R.L.


Latest release: 16/03/2021

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT

Page 17

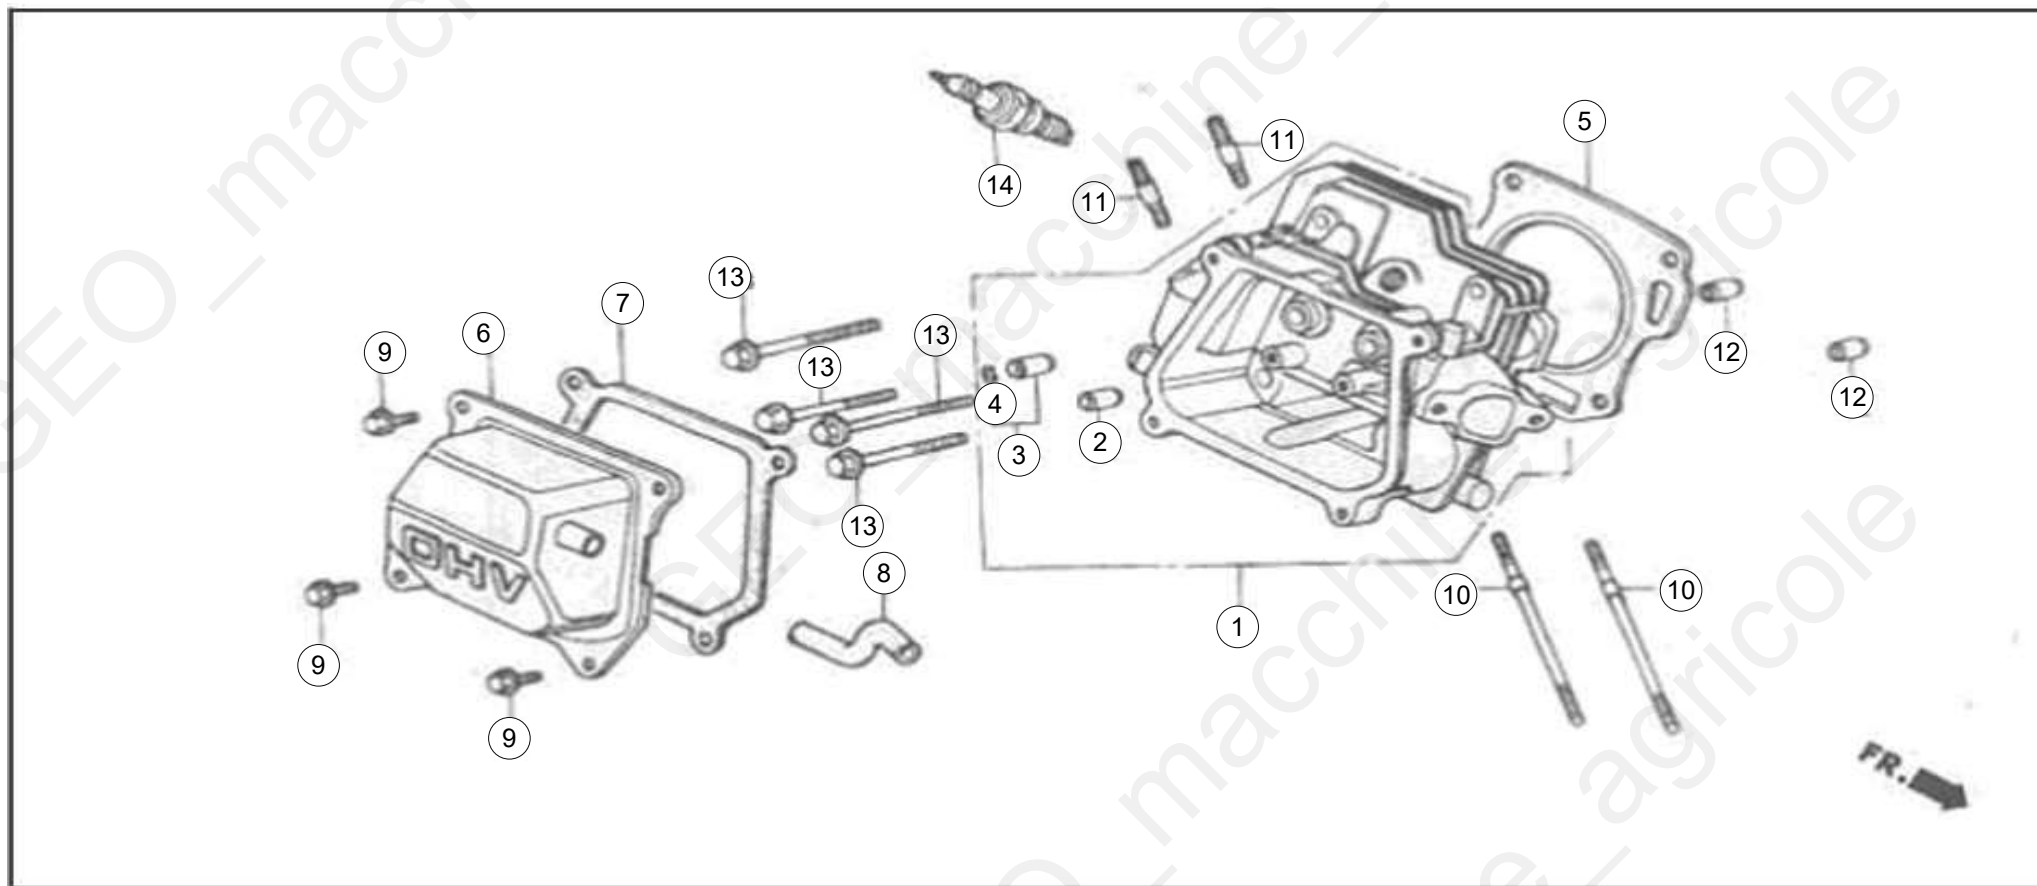

Pos	Code	Description	NOTE	Q.
1	JF200.1-1	CYLINDER HEAD COMP		1
2	JF168.1.2-5A	IN. VALVE GUIDE		1
3	JF168.1.2-5B	VALVE GUIDE		1
4	JF168.1.2-6	VALVE GUIDE CLIP		2
5	JF200.2-3	CYLINDER HEAD GASKET		1
6	JF168.1.1.1	HEAD COVER COMP		1
7	JF168.1.1-3	HEAD COVER PACKING		1
8	JF168.1.1-2	BREATHER TUBE		1
9	GB/T5787-86(6x12)	FLANGE BOLT 6X12		4
10	JF168.1-2	STUD BOLT 6X109		2
11	GB900-88(8x32)	STUD BOLT 8X32		2
12	JF168.2-5	DOWEL PIN 10X16		2
13	JF168.2-4	FLANGE BOLT 8X60		4
14	JF168.10-1	SPARK PLUG(LD NGK)		1

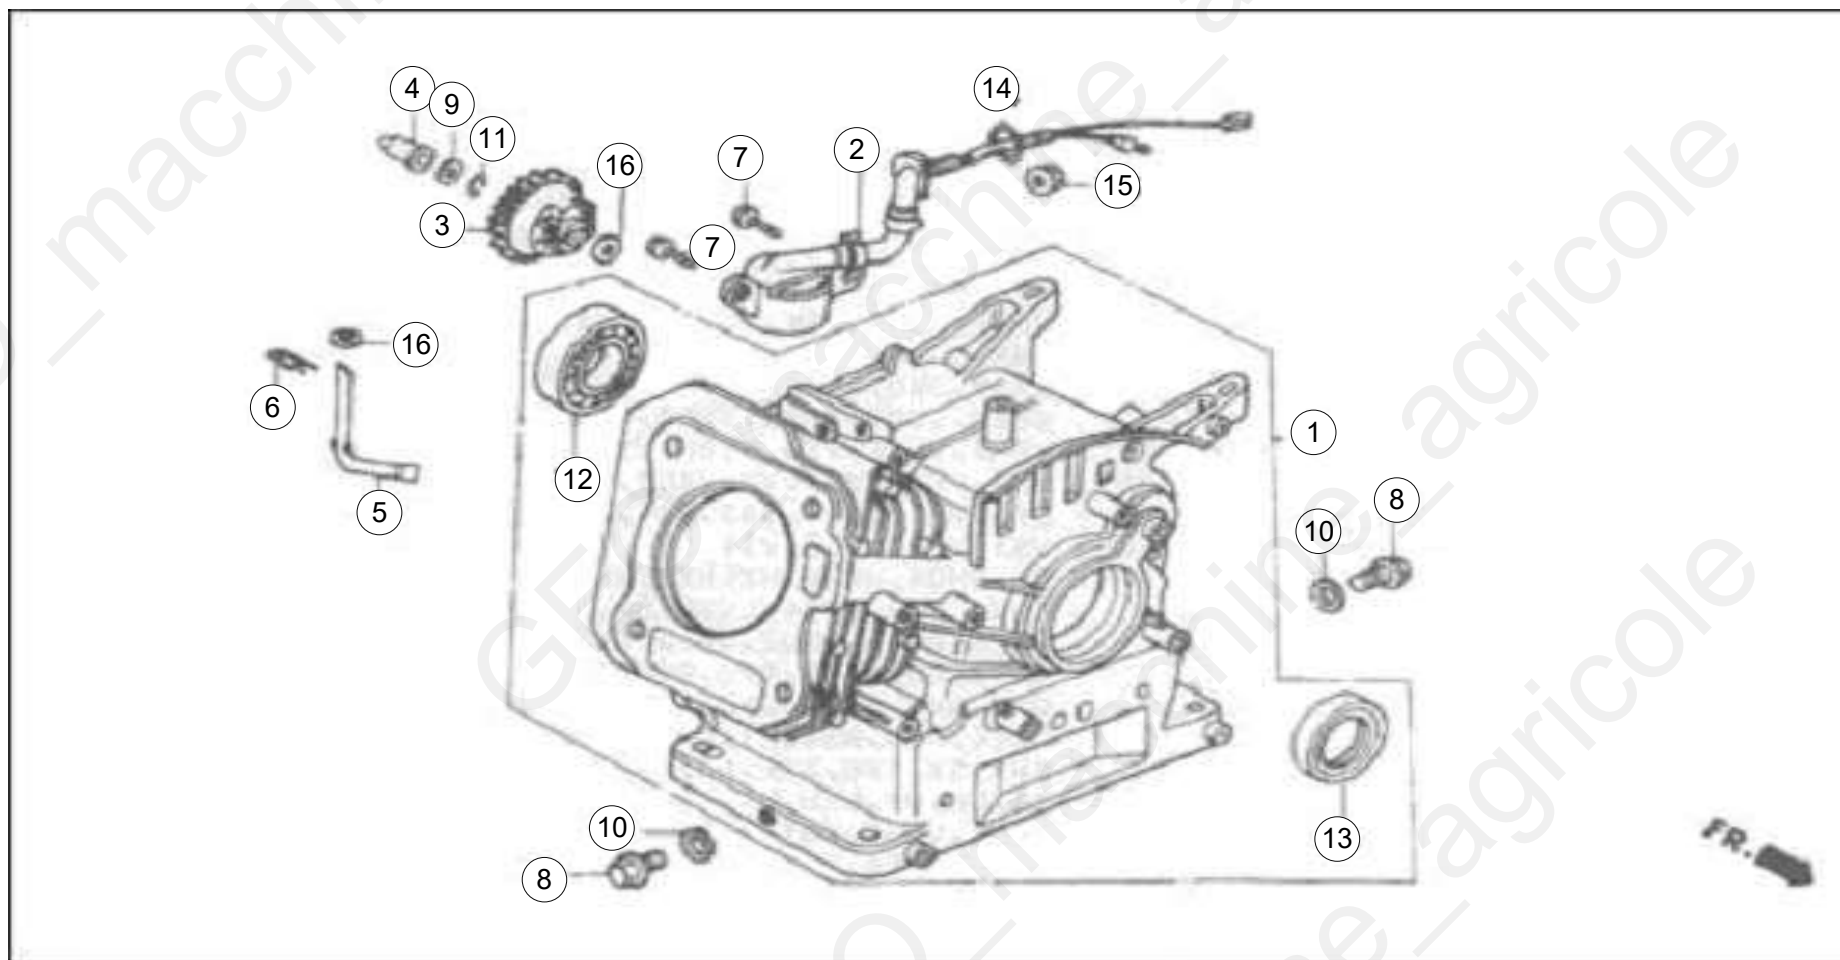


Machine: Motore JF168-200


Assembly: JF200 part2



Pos	Code	Description	NOTE	Q.
1	JF200.2	CYLINDER ASSY.		1
2	JF168.14	OIL LEVEL SWITCH ASSY.		1
3	JF168.11.1	GOVERNOR ASSY.		1
4	JF168.11.1-7	GOVERNOR SLIDER		1
5	JF168.11.2-1	GOVERNOR ARM SHAFT		1
6	JF168.11.2-2	LOCK PIN 8mm		1
7	GB/T5787-86(6x20)	BOLT-WASHER 6X20		2
8	JF168.2-6	DRAIN PLUG BOLT		2
9	JF168.11.1-5	THRUST WASHER 6mm		1
10	GB95-85	DRAIN PLUG WASHER10.2mm		2
11	JF168.11.1-8	GOVERNOR HOLDER CLIP		1
12	GB276-89(6205)	RADIAL BALL BEARING 6205		1
13	GB13817-92-25x41.25x6	OIL SEAL 25X41.25X6		2
14	JF168.14.2-10	O-RING 14mm		1
15	GB6177-86(10mm)	FLANGE NUT 10mm		1
16	JF168.11.1-6	PLAIN WASHER 6mm		1

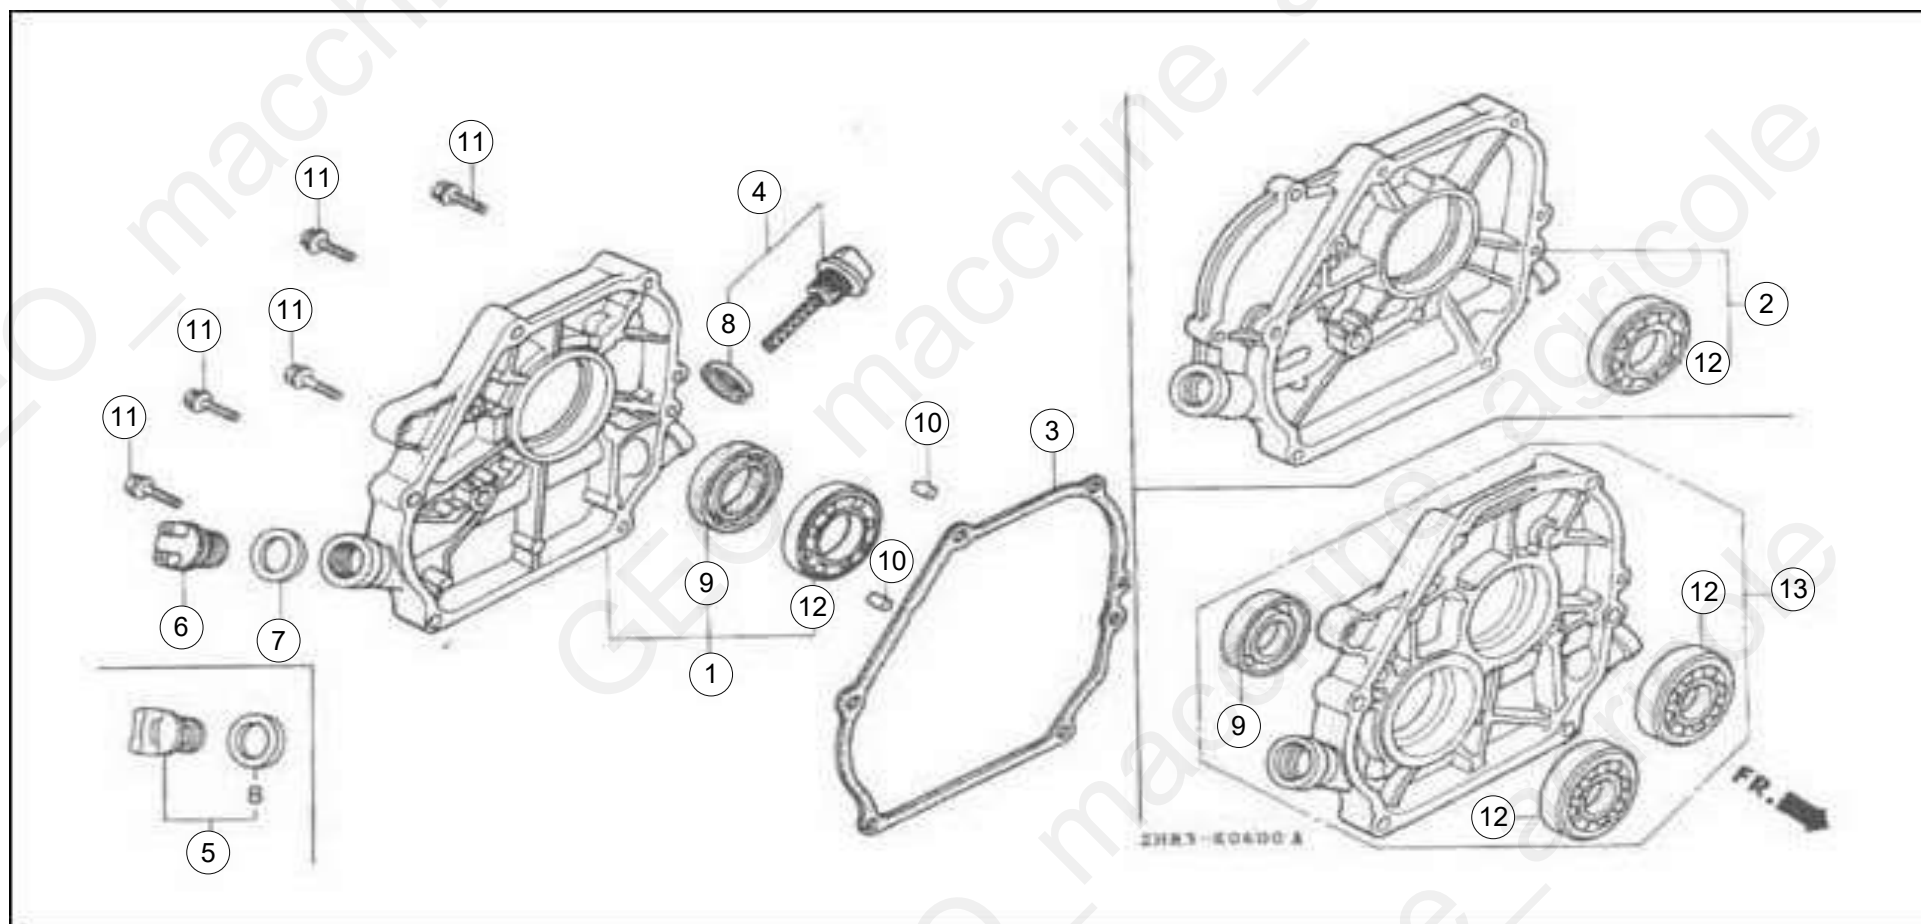

Pos	Code	Description	NOTE	Q.
1	JF168.15-1A	CRANKCASE COVER ASSY		1
2	JF168.15-1B	CRANKCASE COVER ASSY		1
3	JF168.15-2	PACKING?CASE COVER		1
4	JF168.15-3	OIL FILLER CAP ASSY		1
5	JF168.15-5A	OIL FILLER CAP ASSY		1
6	JF168.15-5B	OIL FILLER CAP ASSY		1
7	JF168.15-6A	OIL FILLER CAP ASKET		1
8	JF168.15-6B	OIL FILLER CAP GASKET		2
9	GB13817-92-25x41.25x6	OIL SEAL 25X41.25X6		1
10	JF168.15-4	DOWEL PIN 8X14		2
11	GB/T5787-86(8x32)	FLANGE BOLT 8X32		6
12	GB276-89(6205)	RADIAL BALL BEARING 6205		1
13	JF168.15-1C	CRANKCASE COVER ASSY.		1

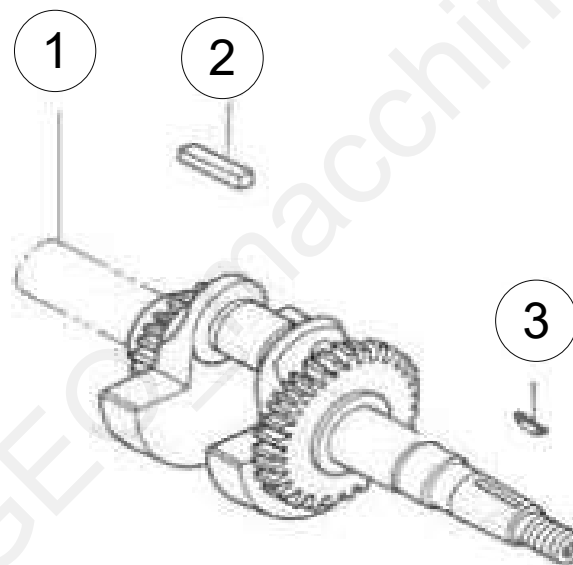


Machine: Motore JF168-200

Assembly: JF200 part5



Pos	Code	Description	NOTE	Q.
1	JF200.4	CRANKSHAFT COMP		1
2	GB1096-79(5x5x30)	KEY 5X5X30		1
3	JF168.4.2-2	SPECIAL WOODRUFF KEY		1

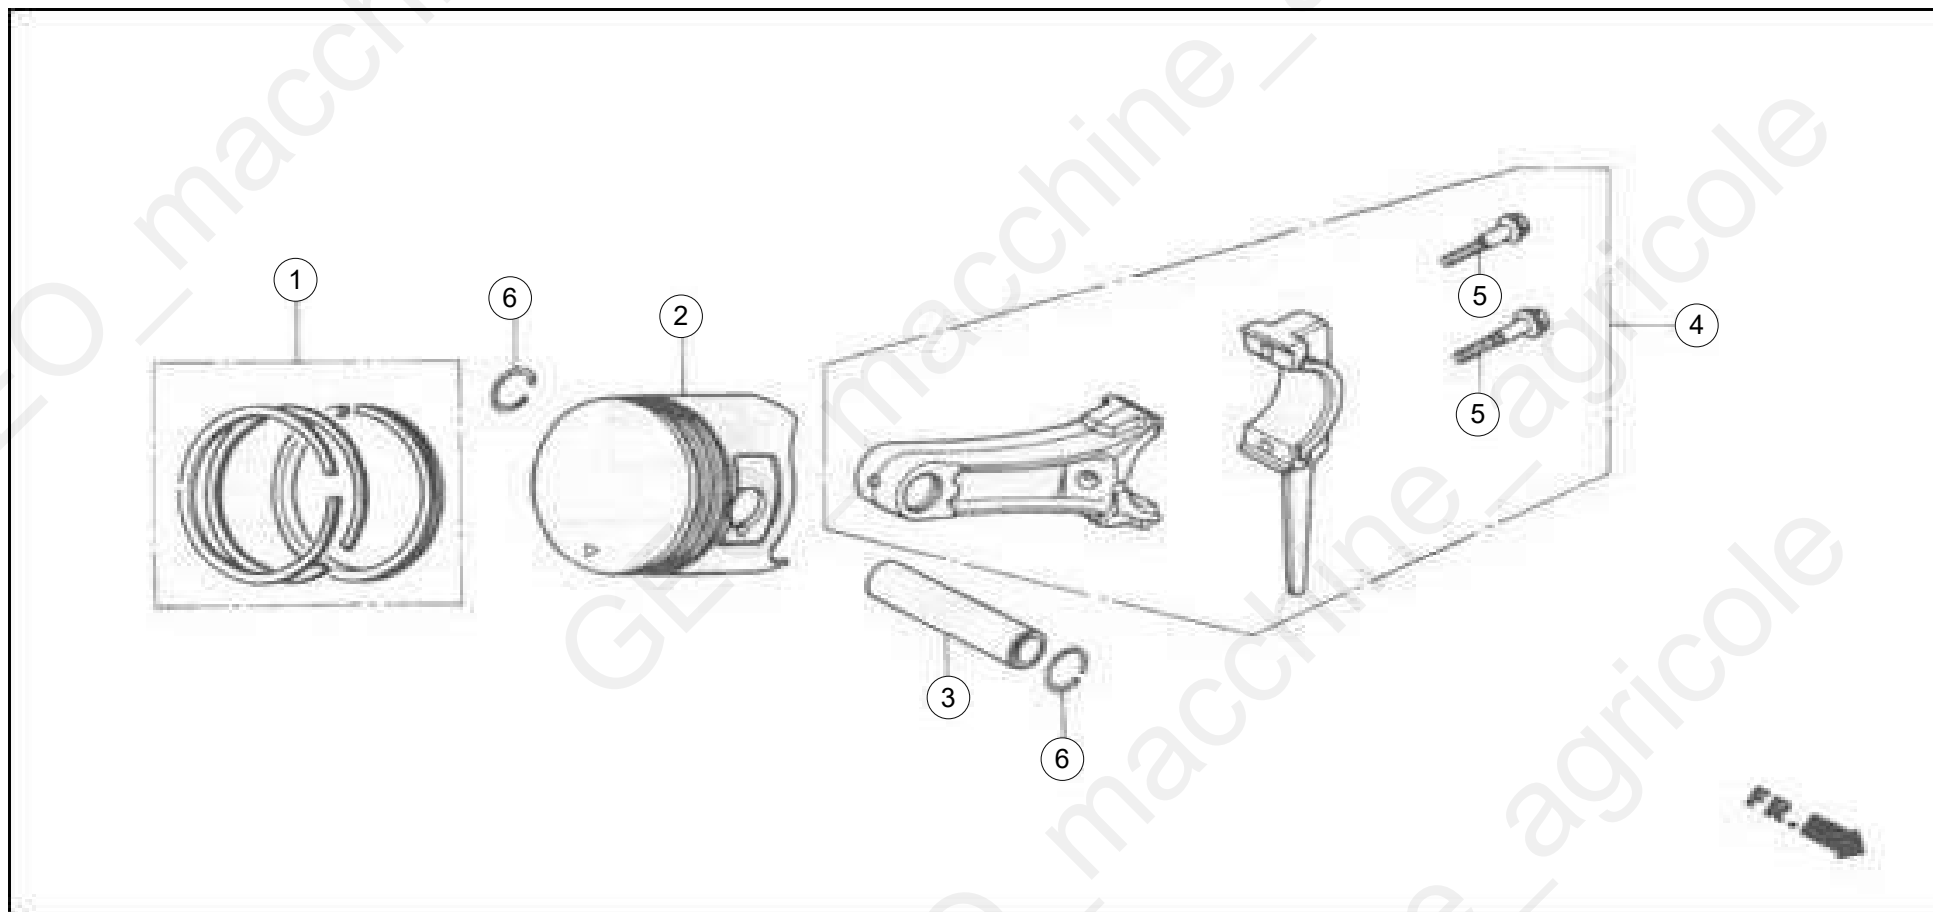


Machine: Motore JF168-200


Assembly: JF200 part6




Pos	Code	Description	NOTE	Q.
1	JF168.3-1	PISTON RING SET		1
2	JF200.3-5	PISTON		1
3	JF168.3-4	PISTON PIN		1
4	JF168.3-6	CONNECTING ROD ASSY.		1
5	JF168.3-8	CONNECTION ROD BOLT		2
6	JF168.3-9	PISTON PIN CLIP 18MM		2

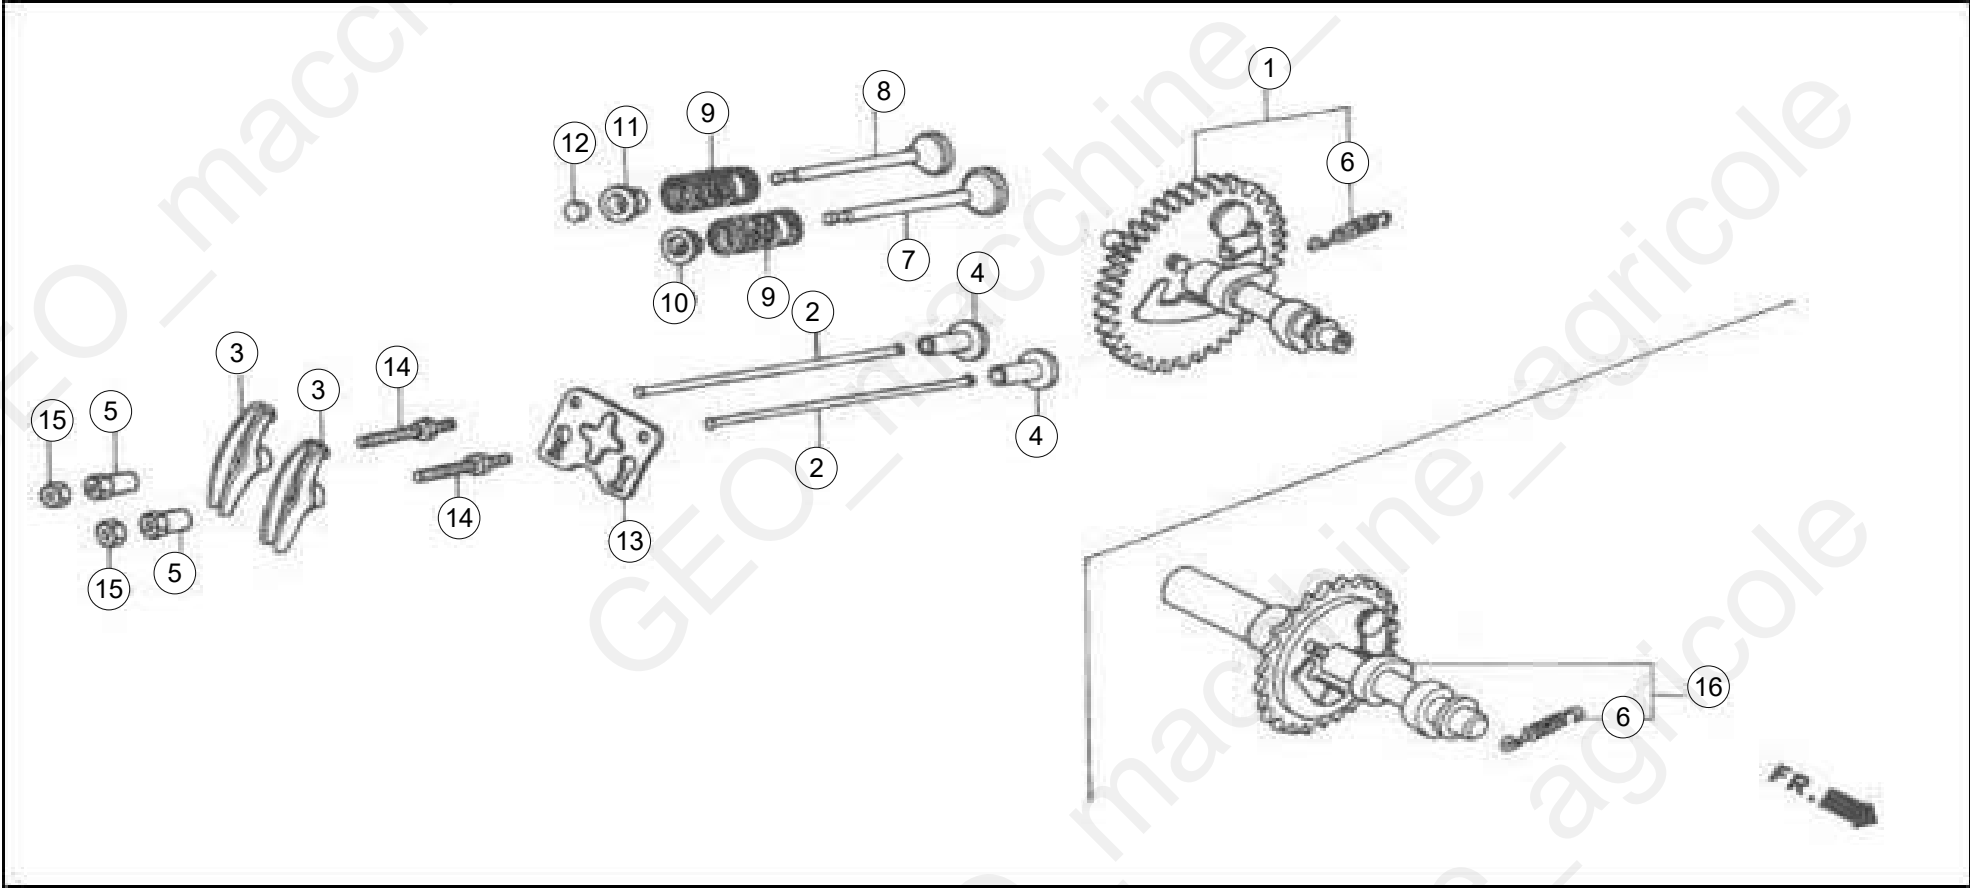

Pos	Code	Description	NOTE	Q.
1	JF200.5-1A	CAMSHAFT ASSY.		1
2	JF200.1.2-14	PUSH ROD		2
3	JF168.1.2-9	VALVE ROCKER ARM		2
4	JF200.1.2-15	VALVE LIFTER		2
5	JF168.1.2-8	ROCKER ARM PIVOT		2
6	JF168.5-5	WEIGHT RETURN SPRING		1
7	JF168.1.2-3	IN. VALVE		1
8	JF168.1.2-4	EX. VALVE		1
9	JF168.1.2-10	VALVE SPRING		2
10	JF168.1.2-1	IN.VALVE SPRING RETAINER		1
11	JF168.1.2-2	EX.VALVE SPRING RETAINER		1
12	JF168.1.2-13	VALVE RATATOR		1
13	JF168.1.2-16JF200.1.2			1
14	JF168.1.2-7	PIVOT BOLT(8mm)		2
15	JF168.1.2-17	PIVOT ADJUSTING NUT		2
16	JF200.5-1B	CAMSHAFT ASSY.		1

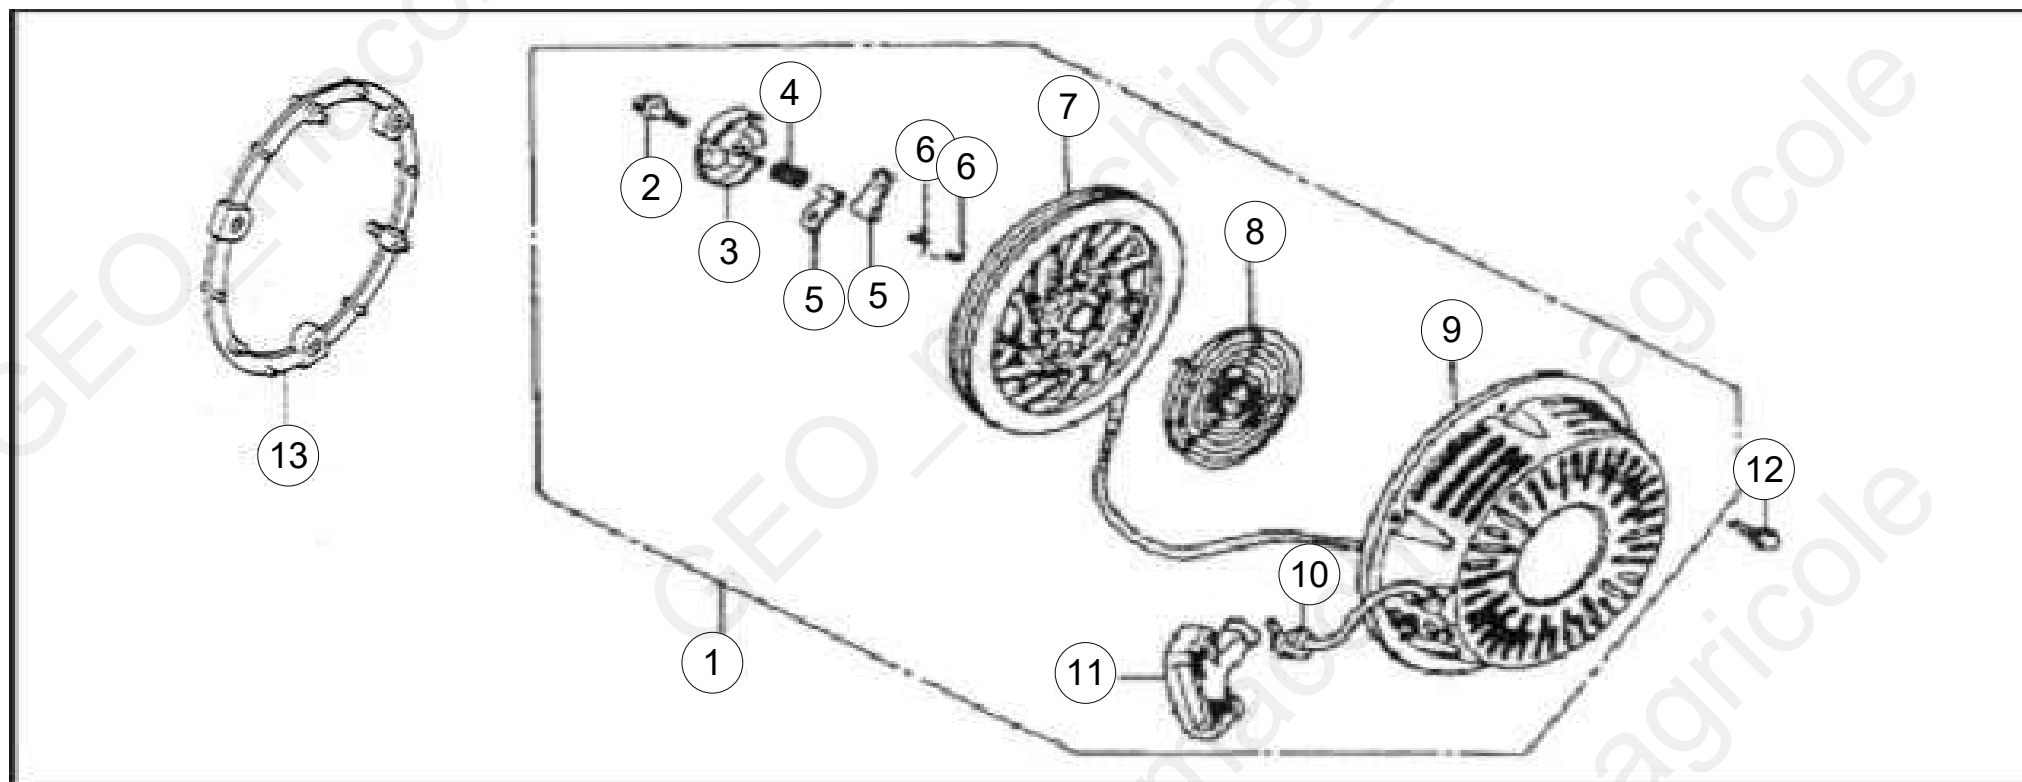

Pos	Code	Description	NOTE	Q.
1	JF168.13	RECOIL STARTER ASSY.		1
2	JF168.13-7	SETTING SCREW.		1
3	JF168.13-6	RATCHET GUIDE		1
4	JF168.13-8	SPRING FRICTION		1
5	JF168.13-5	STARTER RATCHET		2
6	JF168.13-4	RATCHET SPRING		2
7	JF168.13-3	RECOIL STARTER REEL		1
8	JF168.13-10	RECOIL STARTER SPRING		1
9	JF168.13.1	RECOIL STARTER CASE COMP		1
10	JF168.13-2	RECOIL STARTER ROPE		1
11	JF168.13-1	RECOIL STARTER KNOB		1
12	GB/T5787-86(6x8)	FLANGE BOLT 6X8		3
13	JF200.13.2-1	RECOIL STARTER SPACER		1

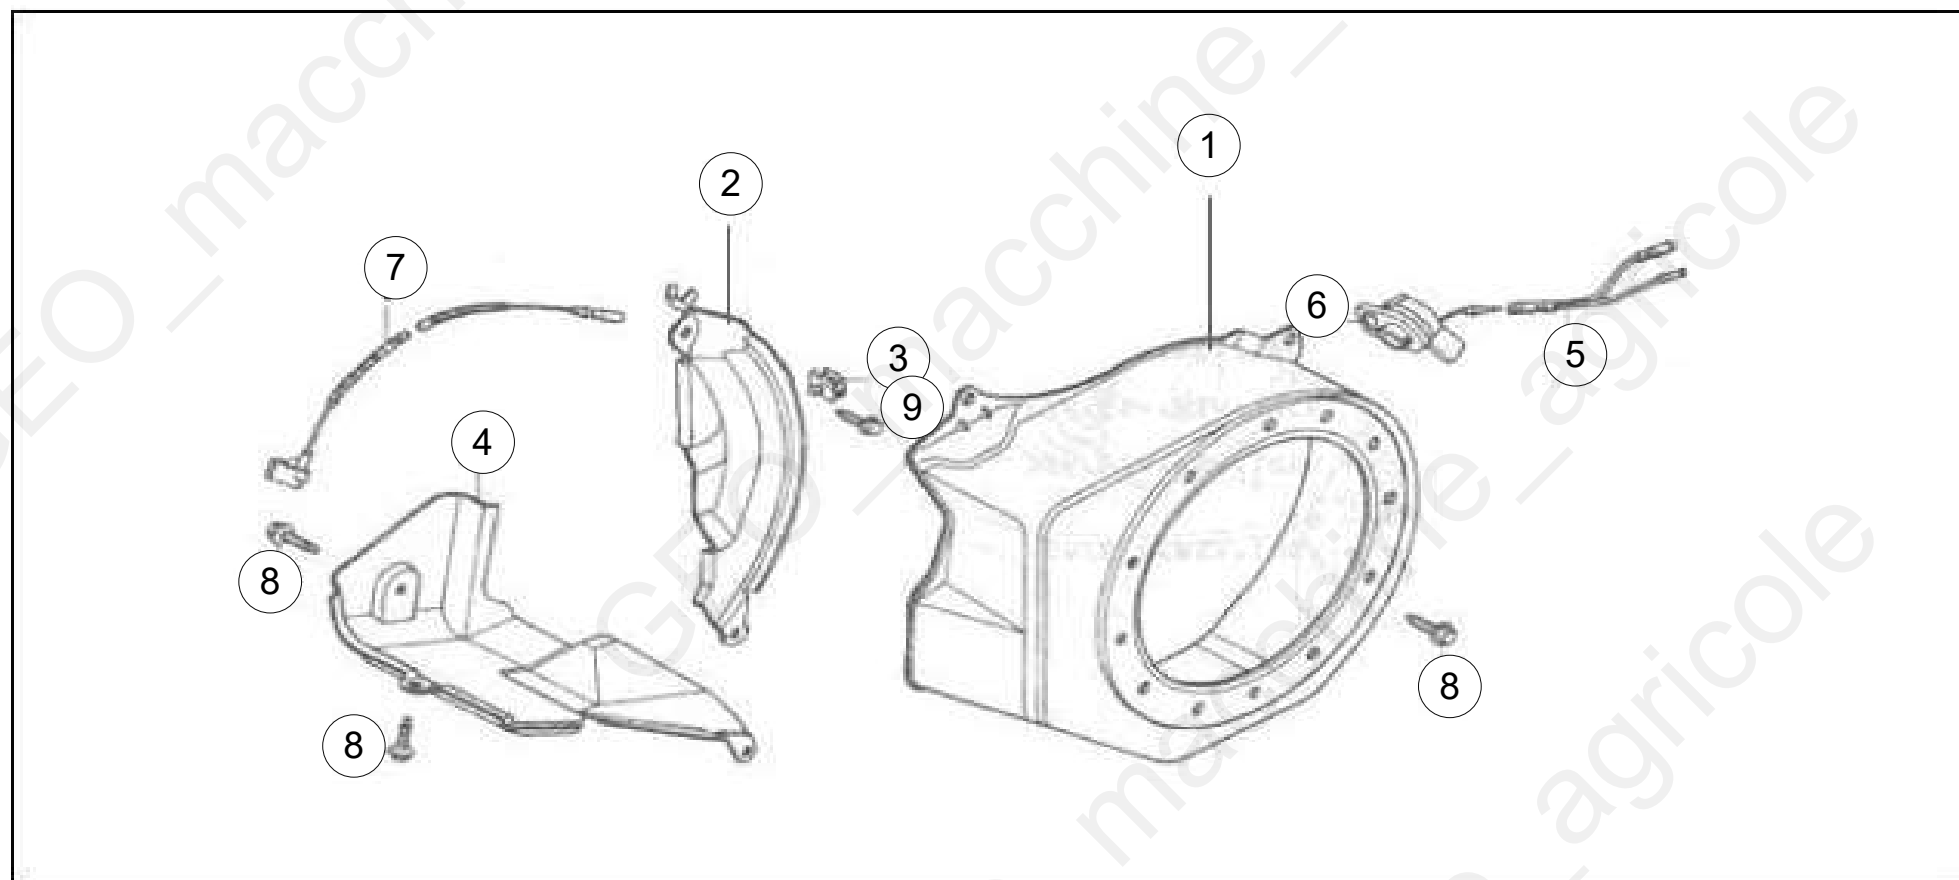


Machine: Motore JF168-200

Assembly: JF200 part10



Pos	Code	Description	NOTE	Q.
1	JF200.13-11	FAN COVER COMP		1
2	JF168.12.1-1	SIDE PLATE		1
3	JF168.12.1-2	CORD CLAMPER		1
4	JF168.12.-2	SHROUD COMP		1
5	JF168.10.3	SUB-HARNESS		1
6	JF168.10.1	ENGINE STOP SWITCH ASSY		1
7	JF168.10.2-2	STOP SWITCH WIRE		1
8	GB/T5787-86(6x12)	FLANGE BOLT 6X12		6
9	GB/T5787-86(6x16)	FLANGE BOLT 6X16		1


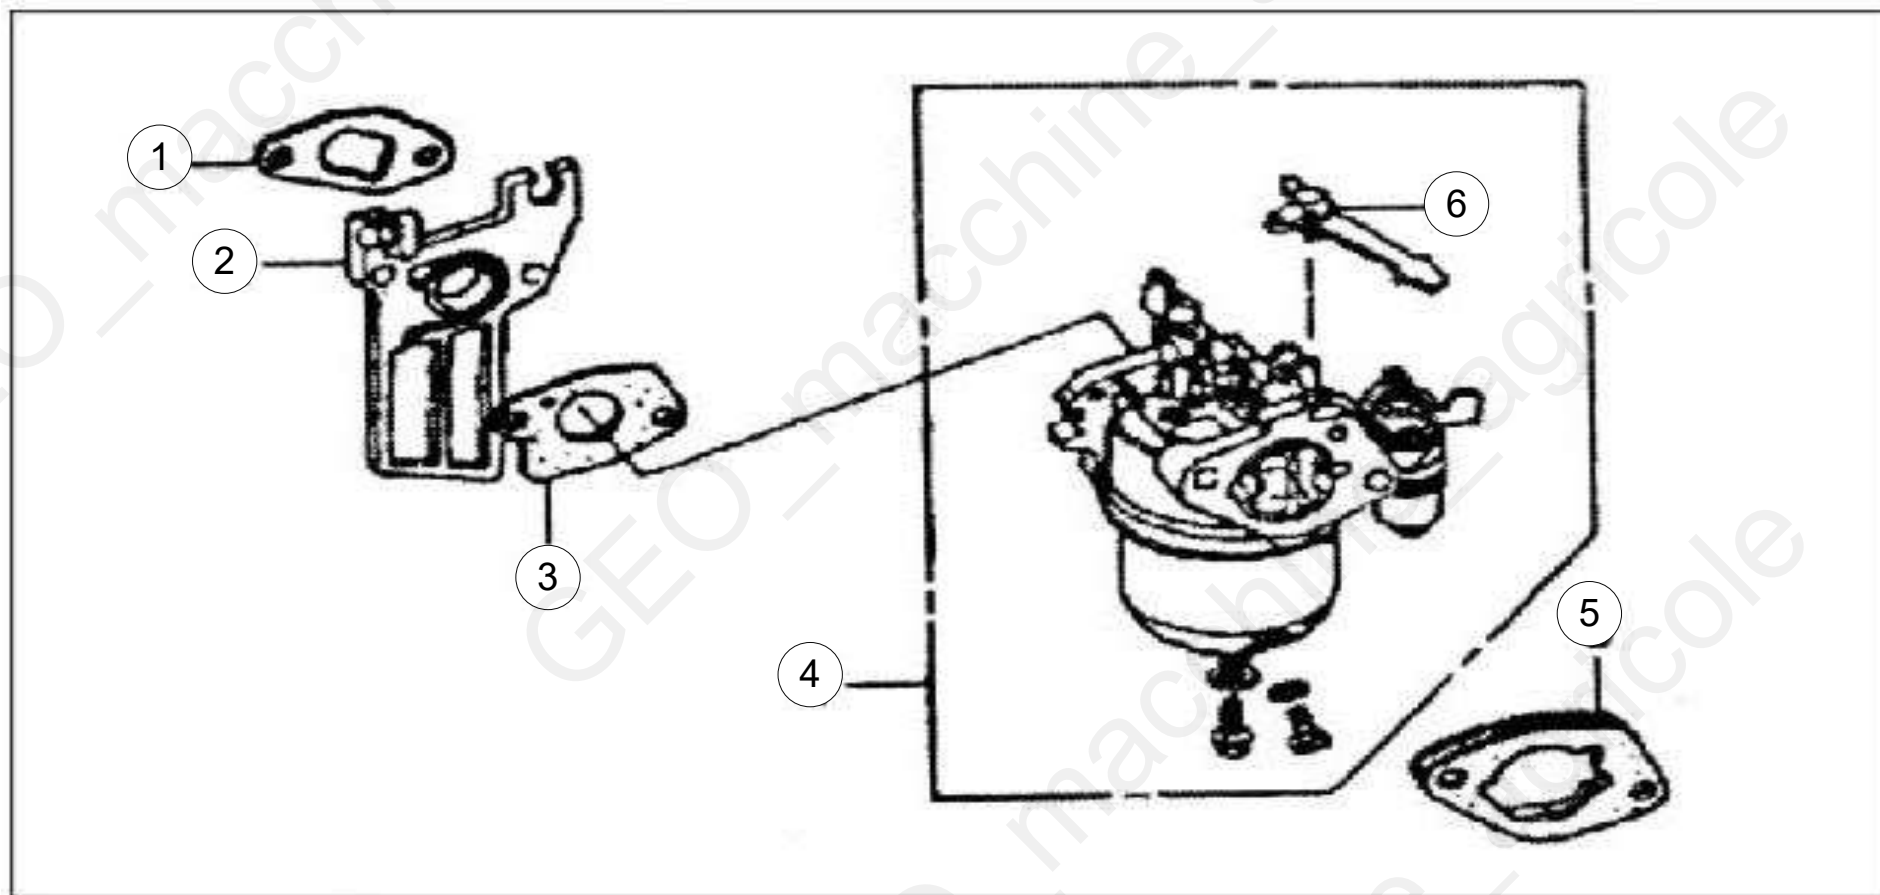


Machine: Motore JF168-200

Assembly: JF200 part11



Pos	Code	Description	NOTE	Q.
1	JF168.1.1-4	INSULATOR GASKET		1
2	JF200.9-1	CARBURETOR INSULATOR		1
3	JF168.9-2	CARBURETOR GASKET		1
4	JF200.9-3	CARBURETOR		1
5	JF168.6-9	CARBURETOR SPACER COMP		1
6	JF168.9-4	CHOKE LEVER COMP		1

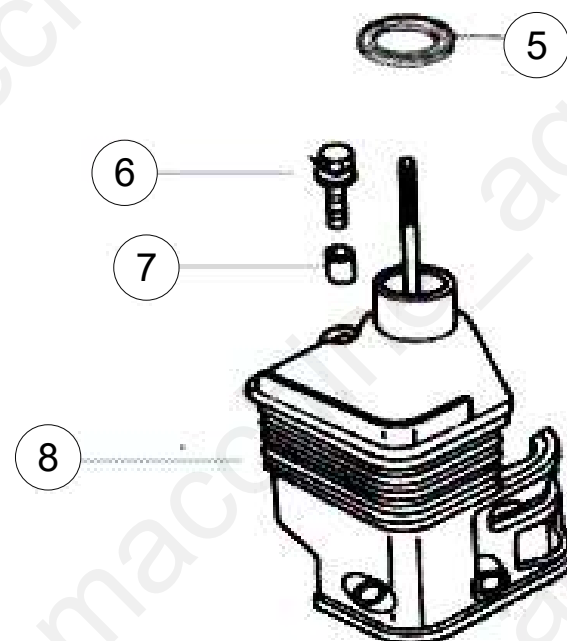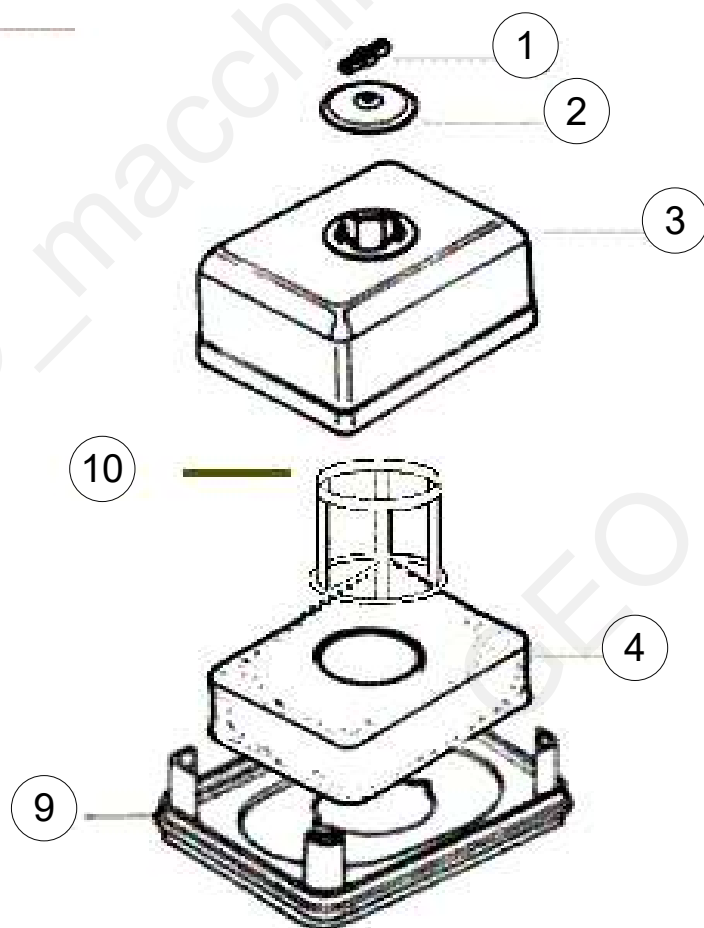


Machine: Motore JF168-200

Assembly: JF200 part12



Pos	Code	Description	NOTE	Q.
1	JF168.6-1	TOOL BOX SETTING WINGNUT		1
2	JF168.6.3-1	AIR CLEANER GROMMET		1
3	JF168.6.3-2	AIR CLEANER COVER		1
4	JF168.6.3-3	OUTER FILTER		1
5	JF168.6.3-4	ELBOW GASKET		1
6	GB/T5787-86(6x20)	BOLT-WASHER 6X20		1
7	JF168.6-11	AIR CLEANER COLLAR B		1
8	JF168.6-8	AIR CLEANER ELBOW COMP		1
9	JF168.6-5	SILENCER NOSE		1
10	JF168.6-10	BRACKET		1

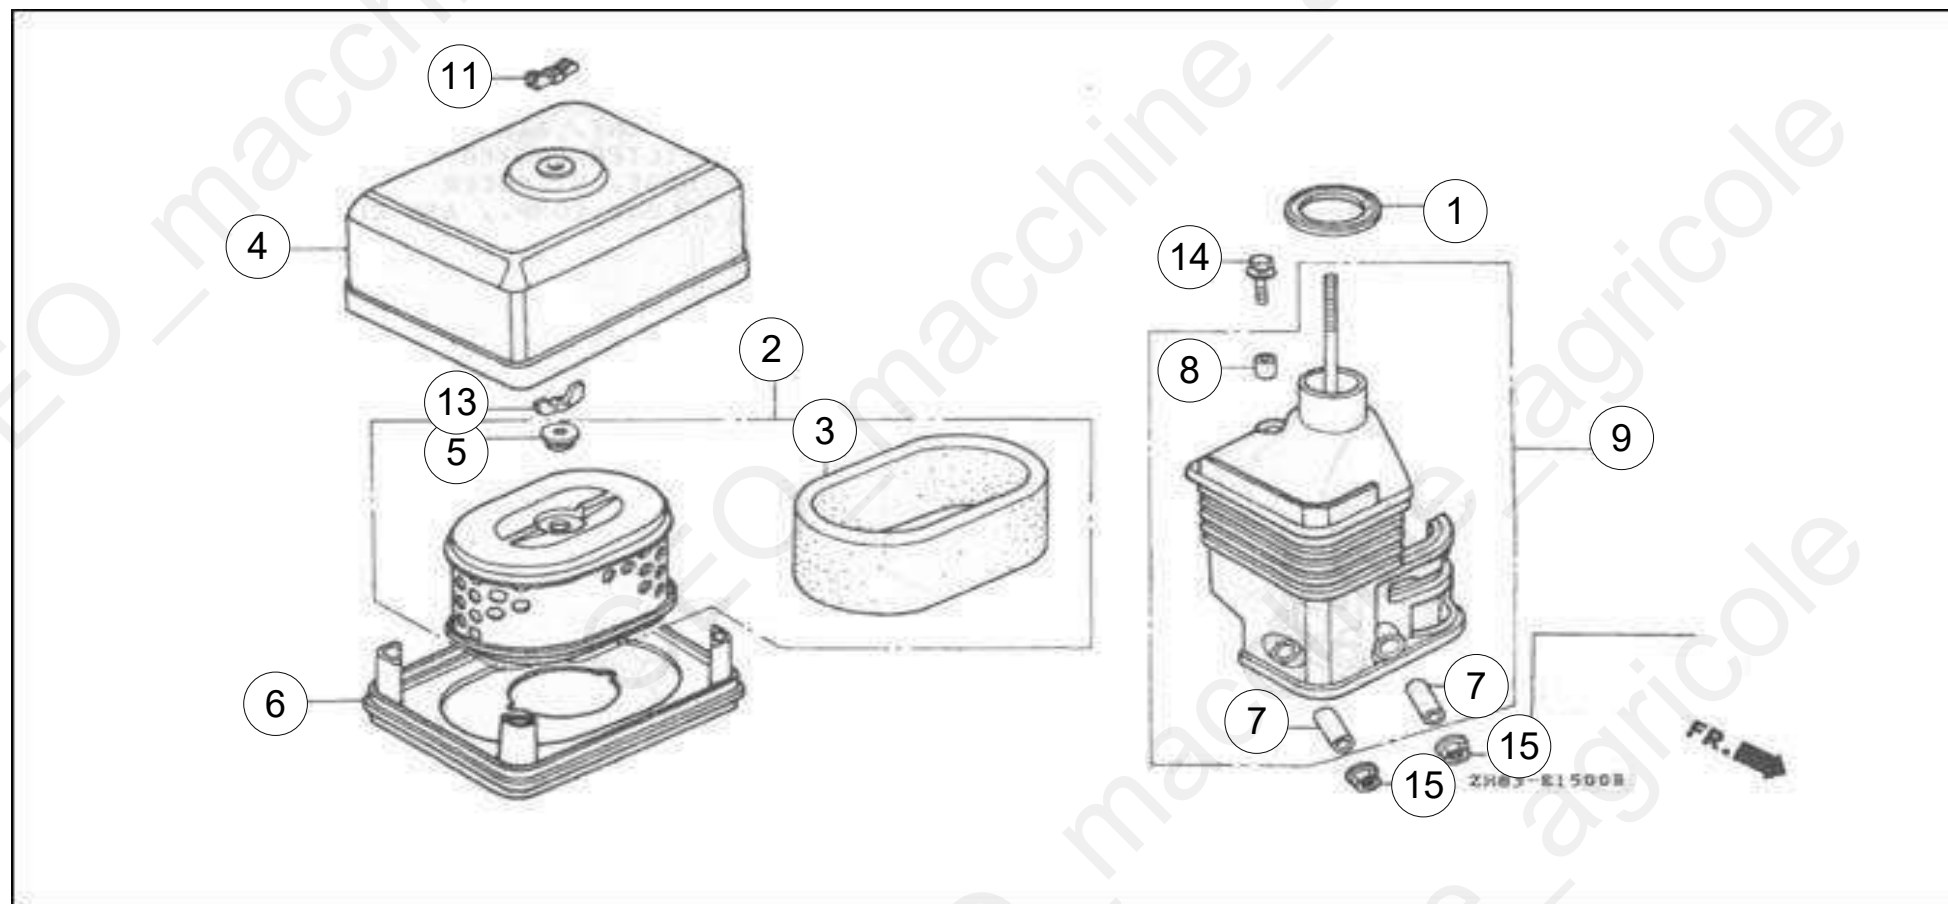


Machine: Motore JF168-200

Assembly: JF200 part13



Pos	Code	Description	NOTE	Q.
1	JF168.6-6	ELBOW GASKET		1
2	JF168.6-1	AIR CLEANER ELEMENT		1
3	JF168.6-4	OUTER FILTER		1
4	JF168.6-3	AIR CLEANERCOVER		1
5	JF168.6.1-7	AIR CLEANER GROMMET		1
6	JF168.6-5	SILENCER NOSE		1
7	JF168.6-12	AIR CLEANER COLLAR		2
8	JF168.6-11	AIR CLEANER COLLAR B		1
9	JF168.6-8	AIR CLEANER ELBOW COMP		1
11	JF168.6-1	TOOL BOX SETTING WINGNUT		1
13	JF168.6-1	TOOL BOX SETTING WINGNUT		1
14	GB/T5787-86(6x20)	BOLT-WASHER 6X20		1
15	GB6177-86(6mm)	SELF-LOCK NUT(6mm)		2

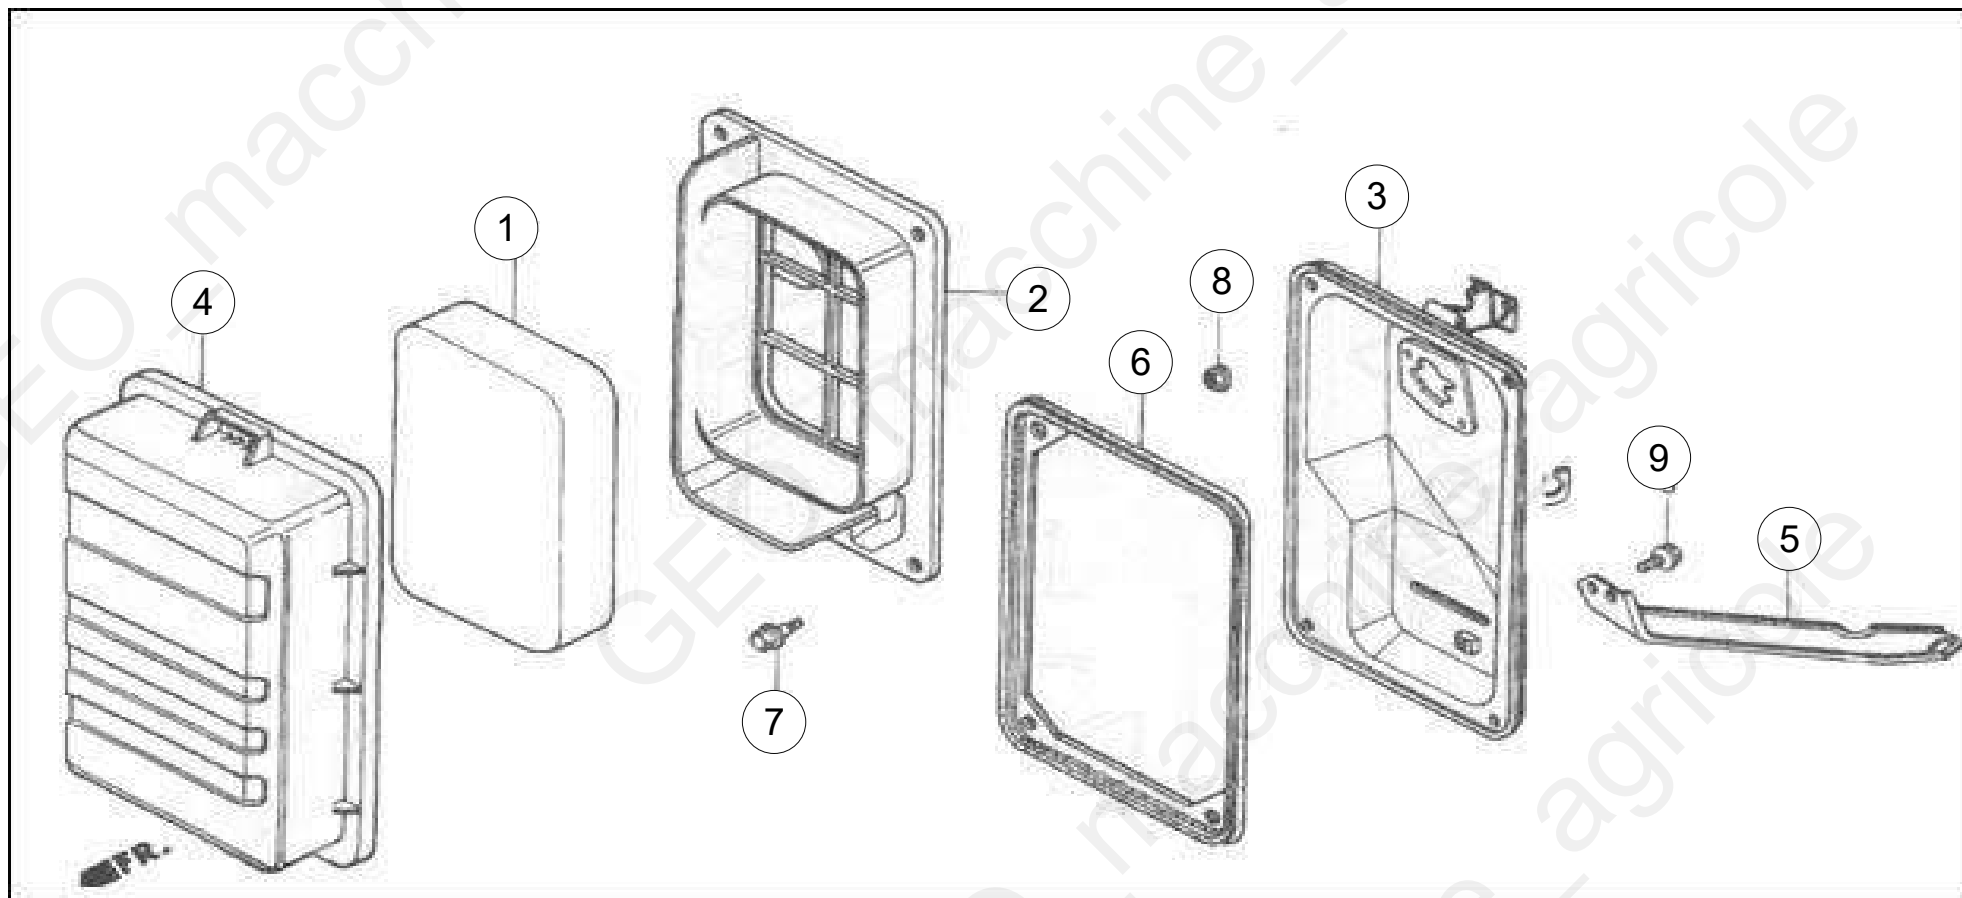


Machine: Motore JF168-200

Assembly: JF200 part14



Pos	Code	Description	NOTE	Q.
1	JF168.6.2-1	OUTER FILTER		1
2	JF168.6.2-2	AIR CLEANER PRINCIPAL PART		1
3	JF168.6.2-3	AIR CLEANER CASE COMP		1
4	JF168.6.2-4	AIR CLEANER COVER		1
5	JF168.6.2-5	AIR CLEANER STAY		1
6	JF168.6.2-6	AIR CLEANER SEAL		1
7	GB/T5787-86	WINKER SETTING BOLT		4
8	GB6177-86(6mm)	SELF-LOCK NUT(6mm)		4
9	GB/T5787-86(6X10)	FLANGE BOLT 6X10		2

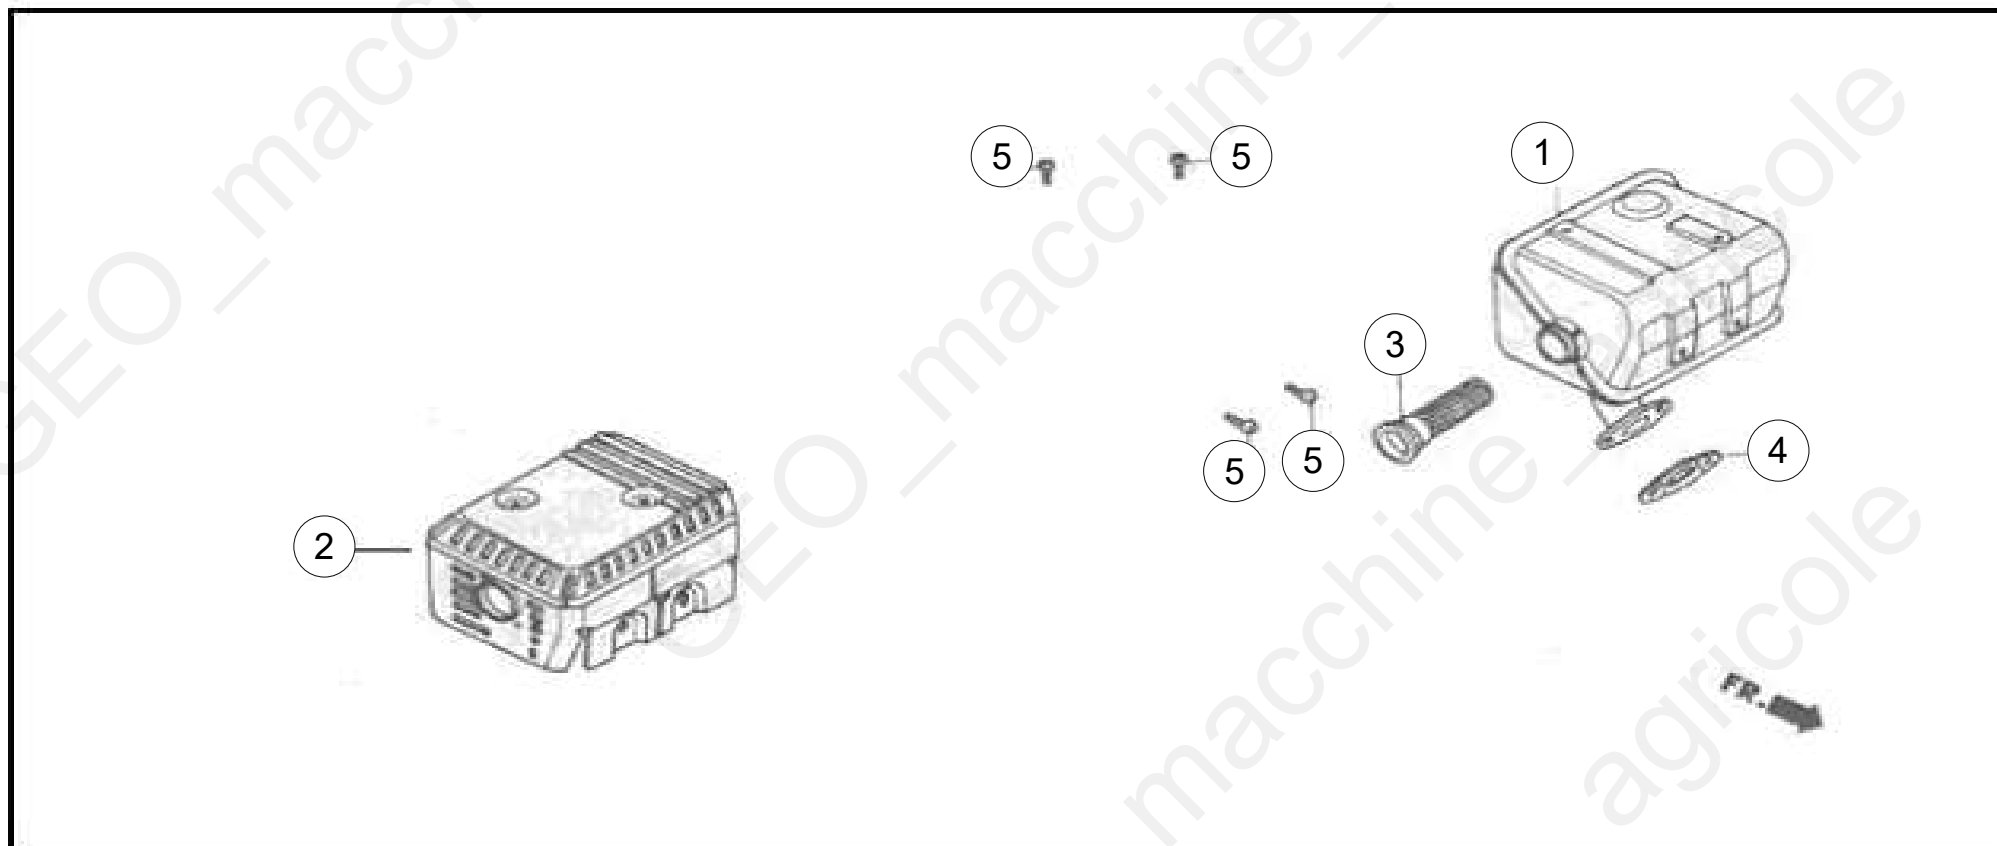


Machine: Motore JF168-200

Assembly: JF200 part15



Pos	Code	Description	NOTE	Q.
1	JF168.7.6	MUFFLER COMP		1
2	JF168.7.2-3	MUFFLER OUUTER PROTECT		1
3	JF168.7.2	SPARK ARRESTER		1
4	JF168.7-9	MUFFLER GASKET		1
5	Q235A(GB700-88)	TAPPING SCREW 5X8		4

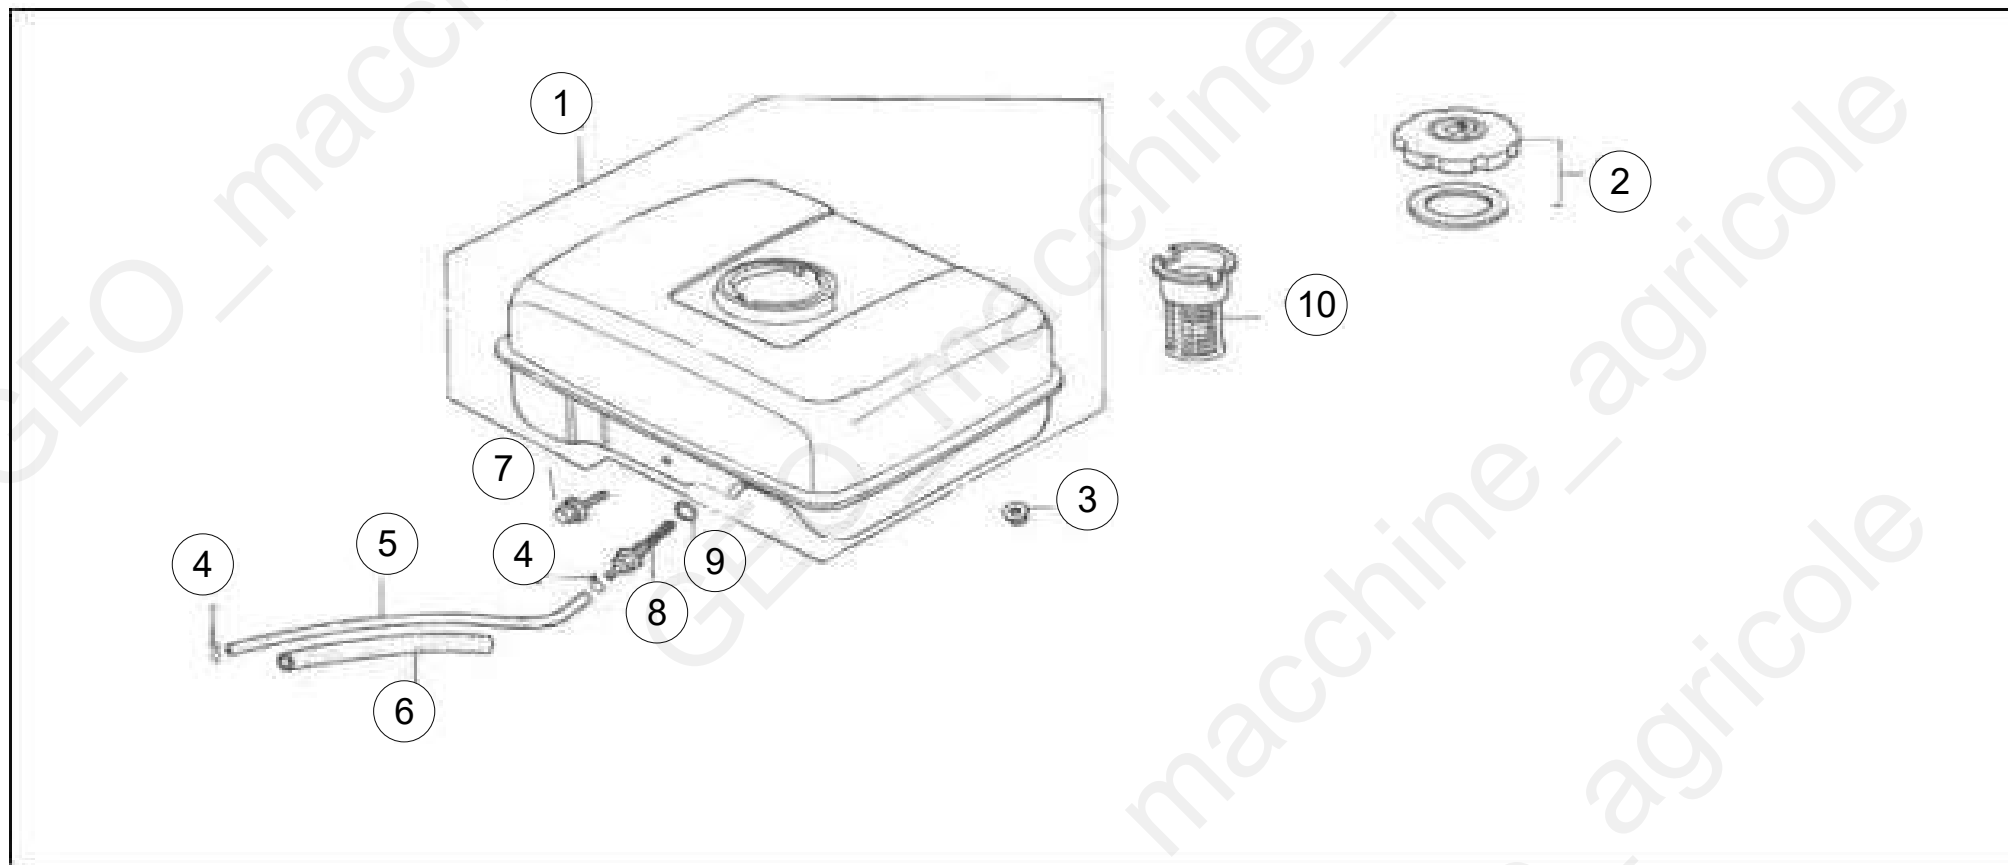


Machine: Motore JF168-200

Assembly: JF200 part16



Pos	Code	Description	NOTE	Q.
1	JF168.8..2	FUEL TANK COMP		1
2	JF168.8.1	FUEL FILLER CAP COMP		1
3	GB6177-86(6mm)	SELF-LOCK NUT(6mm)		2
4	JF168.8.3-4	TUBE CLIP		1
5	JF168.8.3-2	BULK HOSE FUEL		1
6	JF168.8.3-3	SUPPORTER RUBBER		1
7	GB/T5787-86(6x25)	FLANGE BOLT 6X25		1
8	JF168.8.3.1	FUEL TANK JOINT		1
9	JF168.8.3.1-3	O-RING		1
10	JF168.8.1.6	FUEL FILTER		1

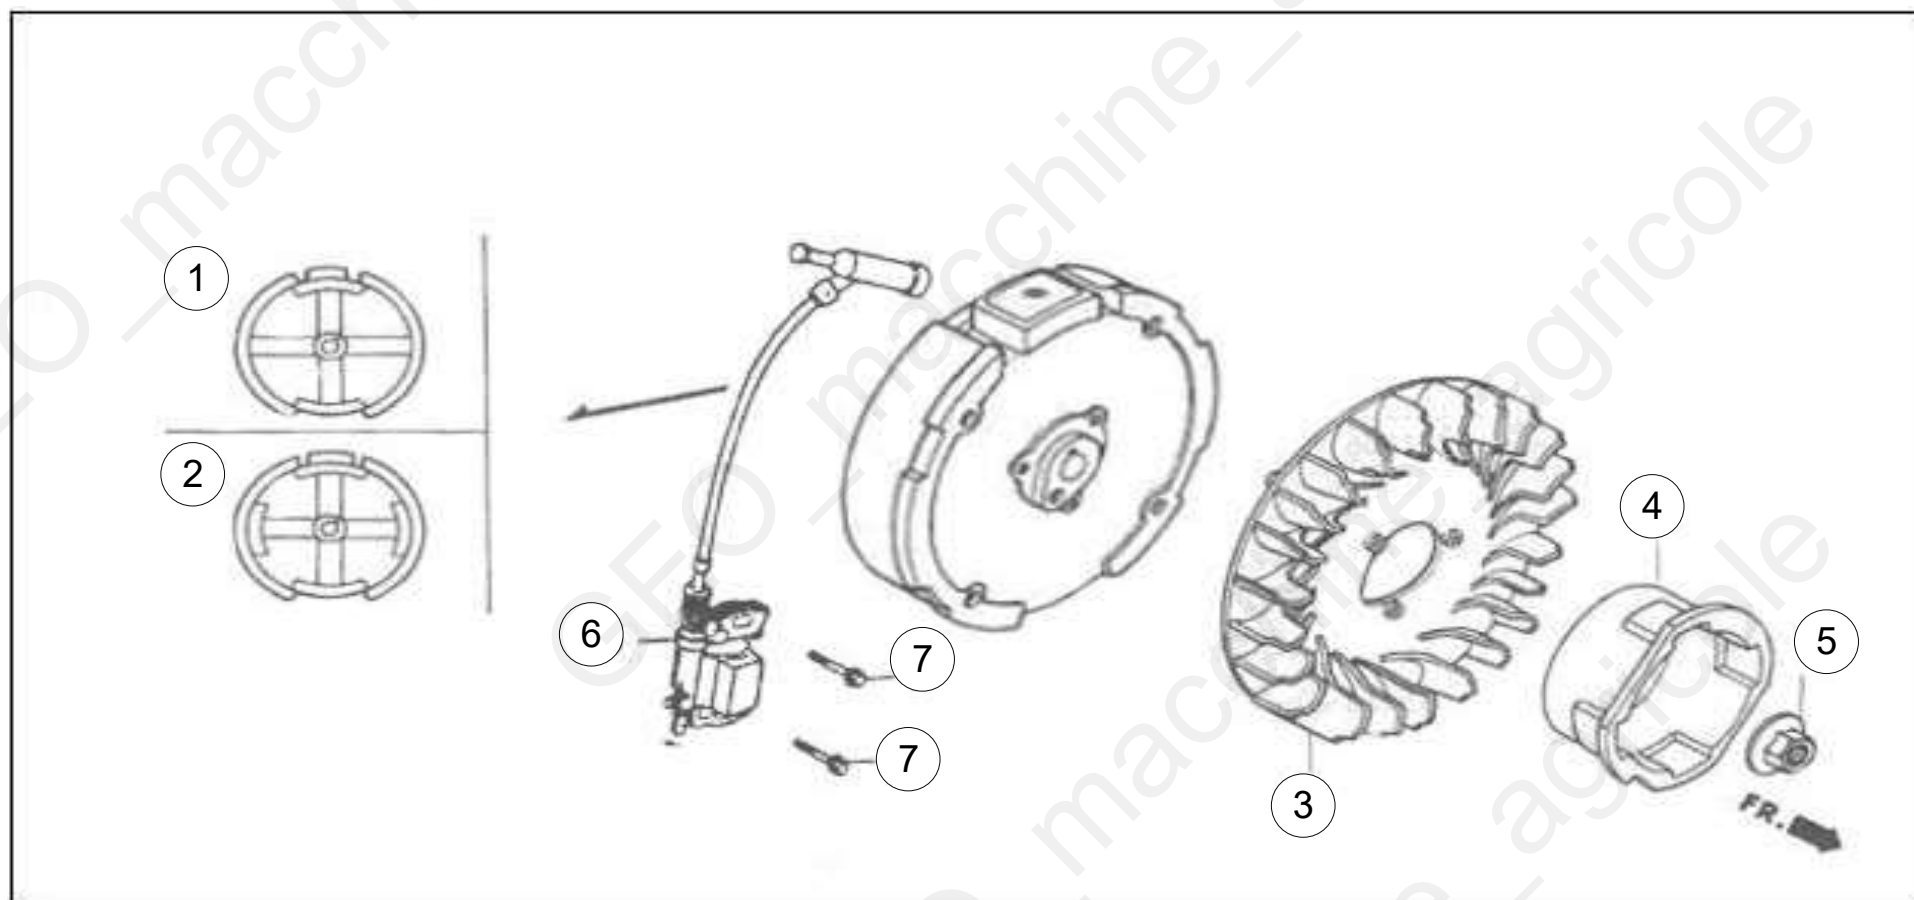


Machine: Motore JF168-200

Assembly: JF200 part17



Pos	Code	Description	NOTE	Q.
1	JF168.4.1A	FLYWHEEL COMP		1
2	JF168.4.1B	FLYWHEEL COMP		1
3	JF168.12-1	COOLING FAN		1
4	JF168.13-9JF200.13-9	STARTER PULLEY		1
5	JF168.4-5	SPECIAL NUT		1
6	JF168.10.2	IGNITION COIL ASSY.		2
7	GB/T5787-86(6x25)	FLANGE BOLT 6X25		2

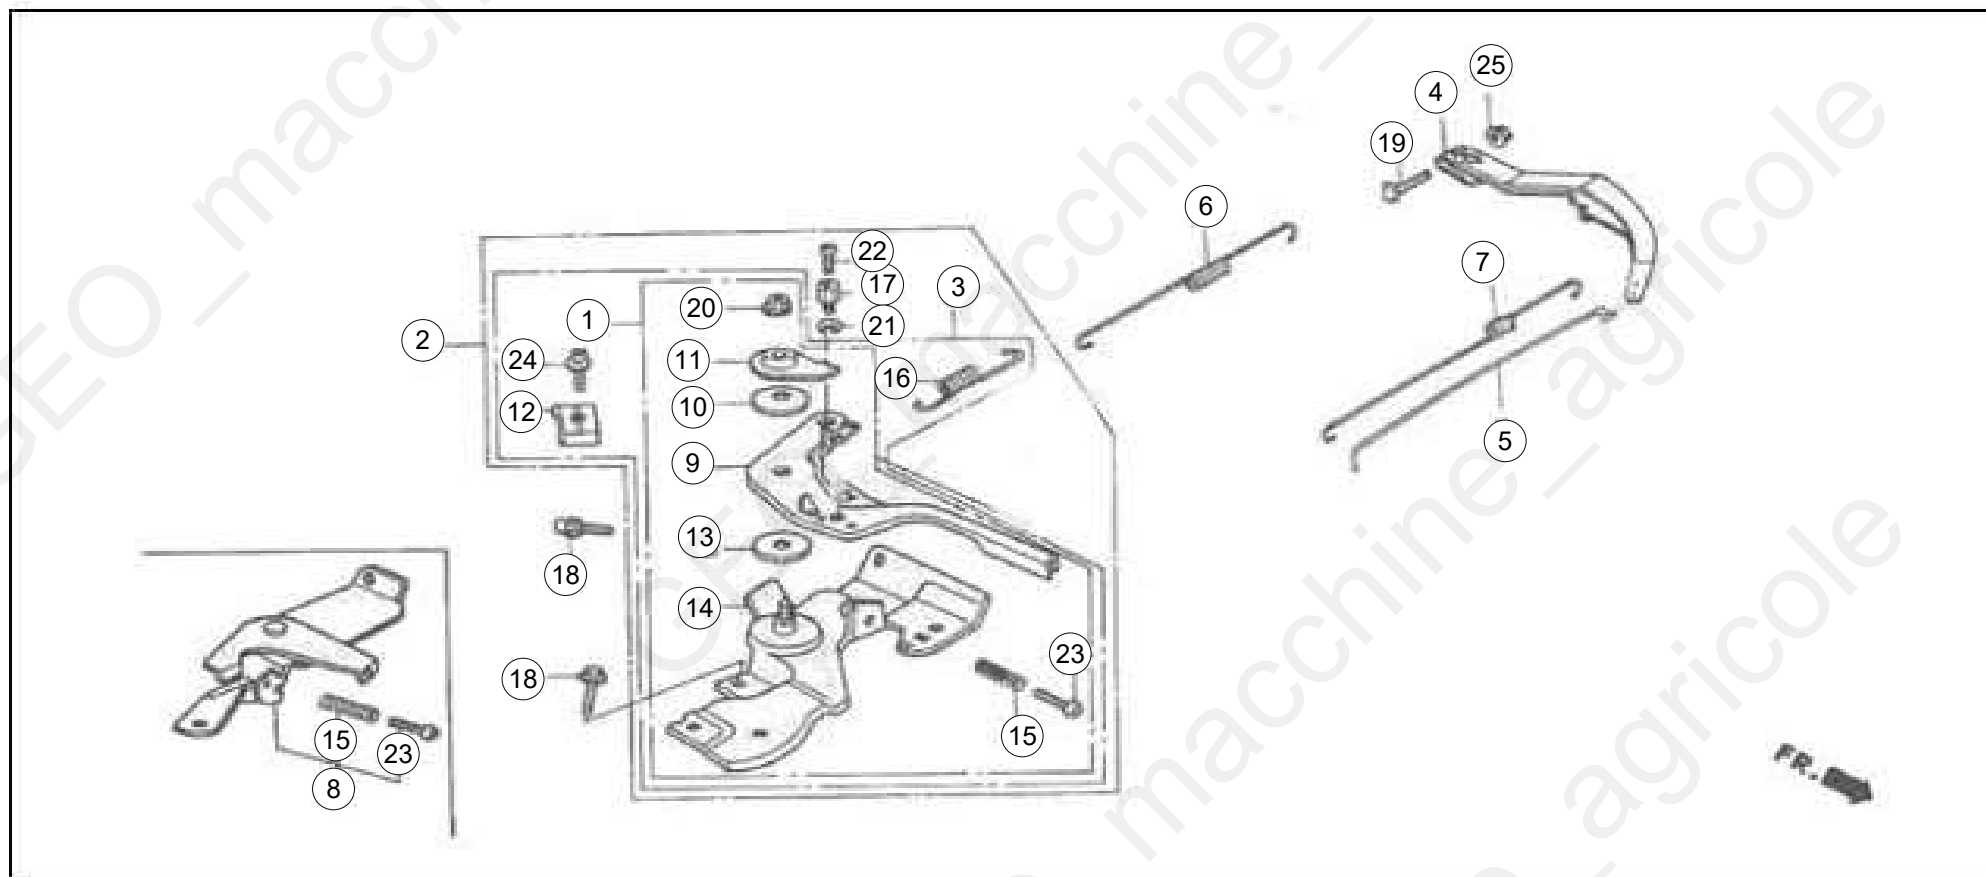

Pos	Code	Description	NOTE	Q.
1	JF168.11.4	CONTROL ASSY		1
2	JF168.11	CONTROL ASSY.		1
3	JF168.11.2	CONTROL ASSY.		1
4	JF168.11.2-4	GOVERNOR ARM		1
5	JF168.11.2-7	GOVERNOR ROD		1
6	JF168.11.2-5	GOVERNOR SPRING		1
7	JF168.11.2-6	THROTTLE RETURN SPRING		1
8	JF168.11.3	CONTROL ASSY.		1
9	JF168.11.4-2	CONTROL LEVER		1
10	JF168.11.4-5	LEVER SPRING		1
11	JF168.11.4-6	CONTROL LEVER WASHER		1
12	JF168.11.4-8	CABLE HOLDER		1
13	JF168.11.4-4	CONTROL LEVER SPACER		1
14	JF168.11.4-1	CONTROL BASE COMP		1
15	JF168.11.3-3	CONTROL ADJUSTING SPRING		1
16	JF168.11.4-7	CABLE RETURN SPRING		1
17	JF168.11.4-9	WIRE HOLDER		1
18	GB/T5787-86(6x12)	FLANGE BOLT 6X12		2
19	JF168.11.2-3	GOVERNOR ARM BOLT		1
20	GB6177-86(6mm)	SELF-LOCK NUT(6mm)		1
21	JF168.11.2-3.1	CIRCLIP(5mm)		1
22	GB6177-86(4x6)	PAN SCREW 4x6		1
23	GB818-85(2x25)	PAN SCREW 5x25		1
24	GB818-85(2x16)	PAN SCREW 5x16		1
25	JF168.11.4-11	FLANGE NUT(6mm)		1