

Spare Part Book



ECO 7



GEO Italy S.R.L.


Latest release: 16/03/2021

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT

Page 1

Table of Contents

Tavola	Page
ECO7_parte 1	3
MOTORE JF340-390-420	7

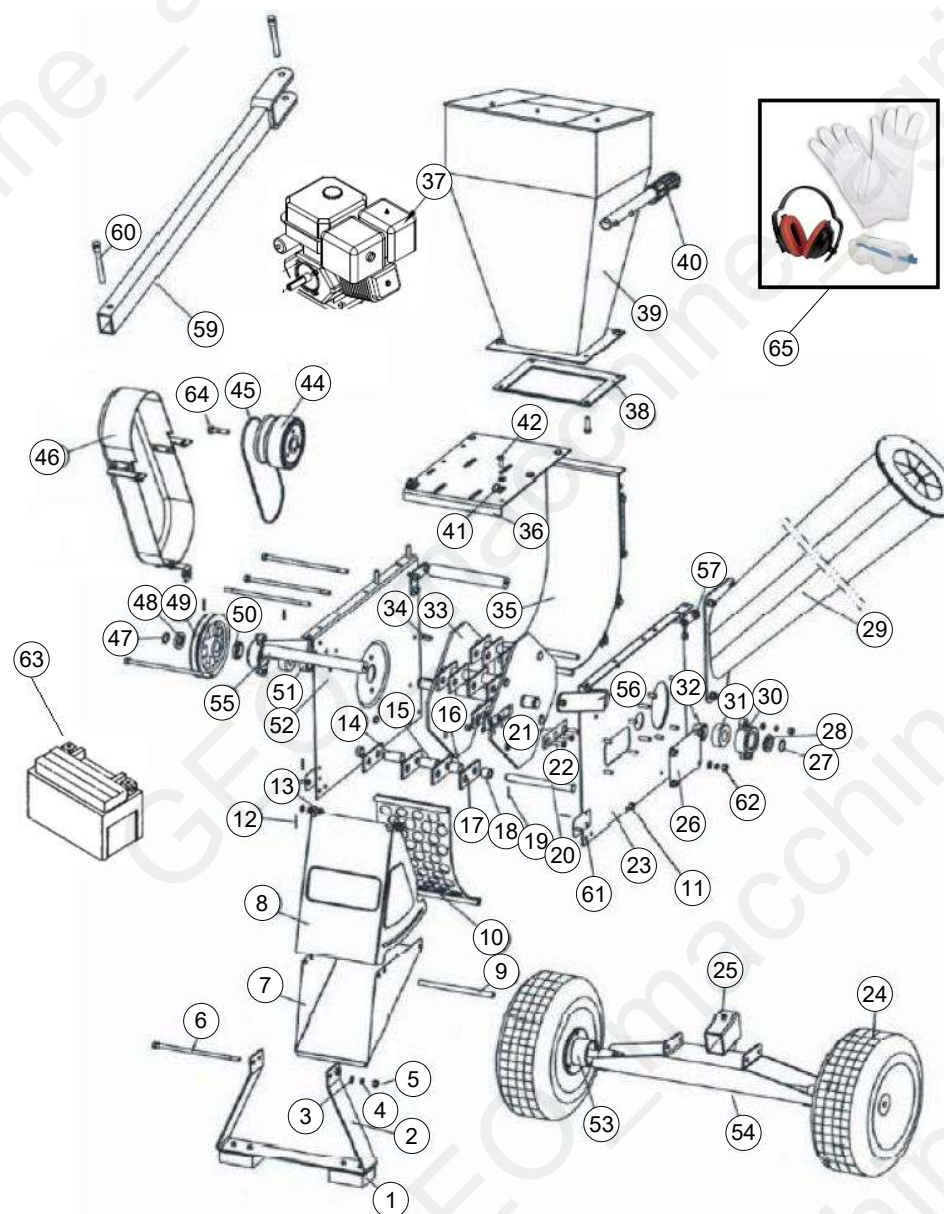

Pos	Code	Description	NOTE	Q.
1	ECO7.100.01	rubber foot		2
2	ECO7.100.02	front foot		1
3	GB.ECO7.01	flat washer		0
4	GB.ECO7.02	hex nut		0
5	GB.ECO7.03	lock washer		0
6	GB.ECO7.04	hex bol t		1
7	ECO7.100.03	discharge chuter		1
8	ECO7.100.04	movable door		1
9	GB.ECO7.05	tube		3
10	ECO7.100.05	screen		1
10	ECO7.101.05.1	screen with small holes		1
11	GB.ECO7.06	pin		2
12	GB.ECO7.07	hitch pin		2
13	GB.ECO7.08	door axle		4
14	GB.ECO7.09	spacer I		4
15	GB.ECO7.10	spacer II		4
16	GB.ECO7.11	spacer III		8
17	ECO7.100.06	hammer		16
18	GB.ECO7.12	spacer IV		4
19	GB.ECO7.13	roll pin		4
20	GB.ECO7.14	hammer axle		4
21	ECO7.100.07	blade		1
22	GB.ECO7.15	flat HD SCREW (8X25)		1
23	ECO7.100.08	box frame side left		2
24	ECO7.100.09	wheel		1

Pos	Code	Description	NOTE	Q.
25	ECO7.100.10	wheel support		1
26	ECO7.100.11	blade cover plate		1
27	GB.ECO7.16	wire circlip		1
28	GB.ECO7.17	washer(right)		1
29	GB.ECO7.18	chipping chute		2
30	GB.ECO7.19	bearing seat		2
31	GB.ECO7.20	ball bearing (UC205)		2
32	GB.ECO7.21	spacer (right)		1
33	ECO7.100.12	impeller		1
34	GB.ECO7.22	key		1
35	ECO7.100.13	rear board		1
36	ECO7.100.14	engine seat		1
37	ECO7.100.15	Engine		1
38	ECO7.100.16	rubber gasket		1
39	ECO7.100.17	hopper		1
40	ECO7.100.18	handles		2
41	GB.ECO7.23	hook		2
42	GB.ECO7.24	hex bolt		0
44	ECO7.100.20	Pulley + clutch		1
44	ECO7.100.20.2	Only clutch		1
45	ECO7.100.21	V-belt B1092		1
46	ECO7.100.22	pulley cover		1
47	GB.ECO7.25	belt cover bracket		1
48	GB.ECO7.26	spacer		1
49	ECO7.100.23	pulley		1

Machine: ECO 7

Assembly: ECO7_parte 1




Pos	Code	Description	NOTE	Q.
50	GB.ECO7.27	special washer (left)		1
51	GB.ECO7.28	washer (right)		1
52	ECO7.100.24	box frame side		1
53	ECO7.100.25	wheel tube		2
54	ECO7.100.26	wheel axel		1
55	ECO7.100.27	front handle		2
56	ECO7.100.28	handle part		2
57	ECO7.100.29	box holder		2
59	ECO7.100.30	hitch trailer		1
60	GB.ECO7.29	hitch pin		2
61	GB.ECO7.30	bolt		0
62	GB.ECO7.31	bolt		0
63	6MQ-9	Battery 6MQ-9 - ECO7		1
64	ECO7.01.127	Engine_bolt M8x40		1
65	ECO.00.01	KIT Protezione Cuffie		1

OTORE JF340-390-420




GEO Italy S.R.L.

Air cleaner

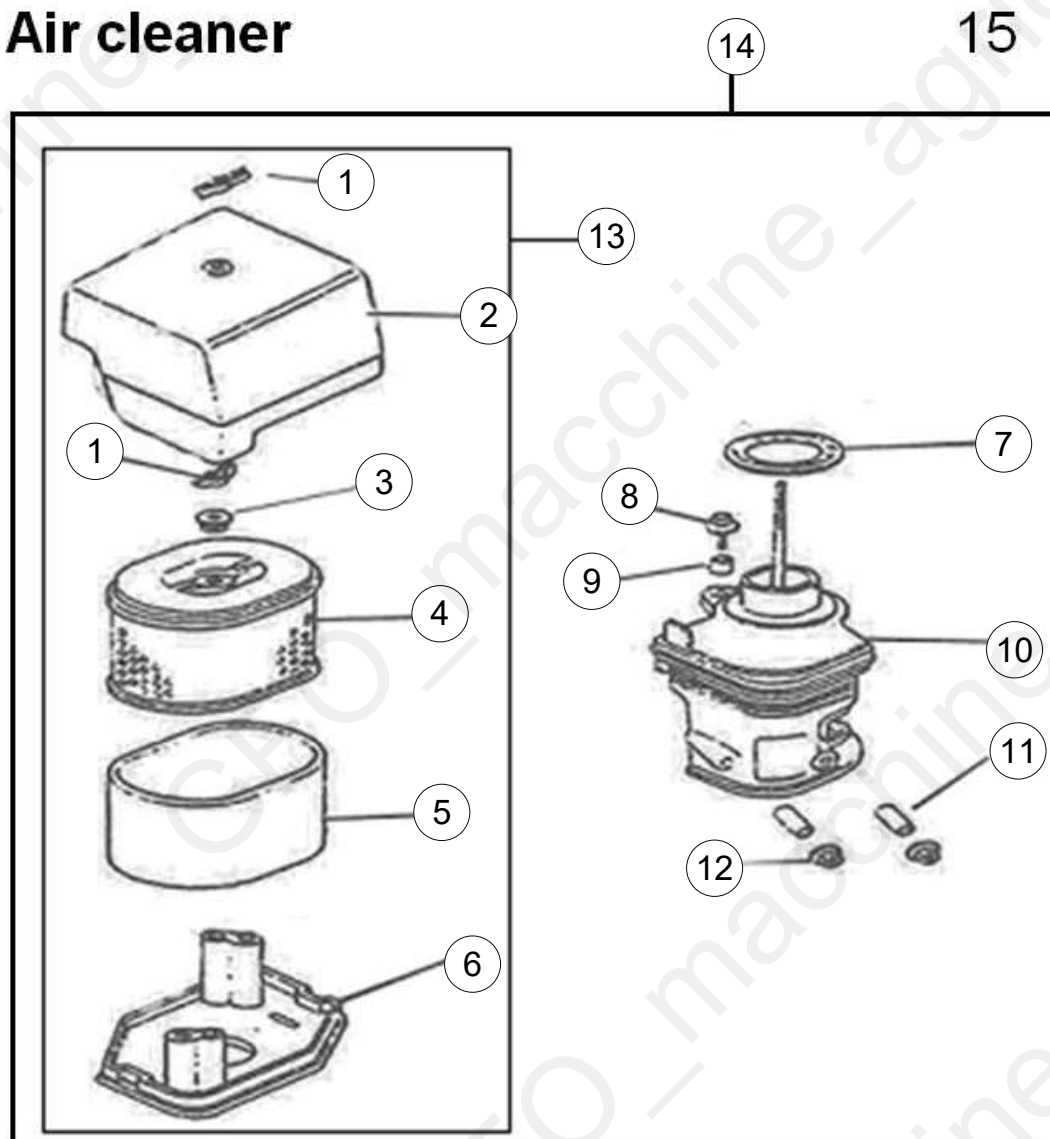

Pos	Code	Description	NOTE	Q.
1	JF340-O-01	AIR CLEANER COVER NUT		2
2	JF340-O-02	AIR CLEANER COVER		1
3	JF340-O-03	AIR CLEANER GROMMER		1
4	JF340-O-04	AIR CLEANER ELEMENT		1
5	JF340-O-05	OUTER FILTER		1
6	JF340-O-06	SILENCER NOSE		1
7	JF340-O-07	ELBOW PACKING		1
8	JF340-O-08	FLANGE BOLT (M6×20)		1
9	JF340-O-09	AIR CLEANER COLLAR		1
10	JF340-O-10	AIR CLEANER ELBOW COMP.		1
11	JF340-O-11	AIR CLEANER COLLAR		1
12	JF340-O-12	FLANGE NUT (M8)		2
13	JF340-O-13	AIR CLEANER ASSY.		1
14	JF340-O-14	COMPLETE AIR FILTER		1

Fan cover system assy.

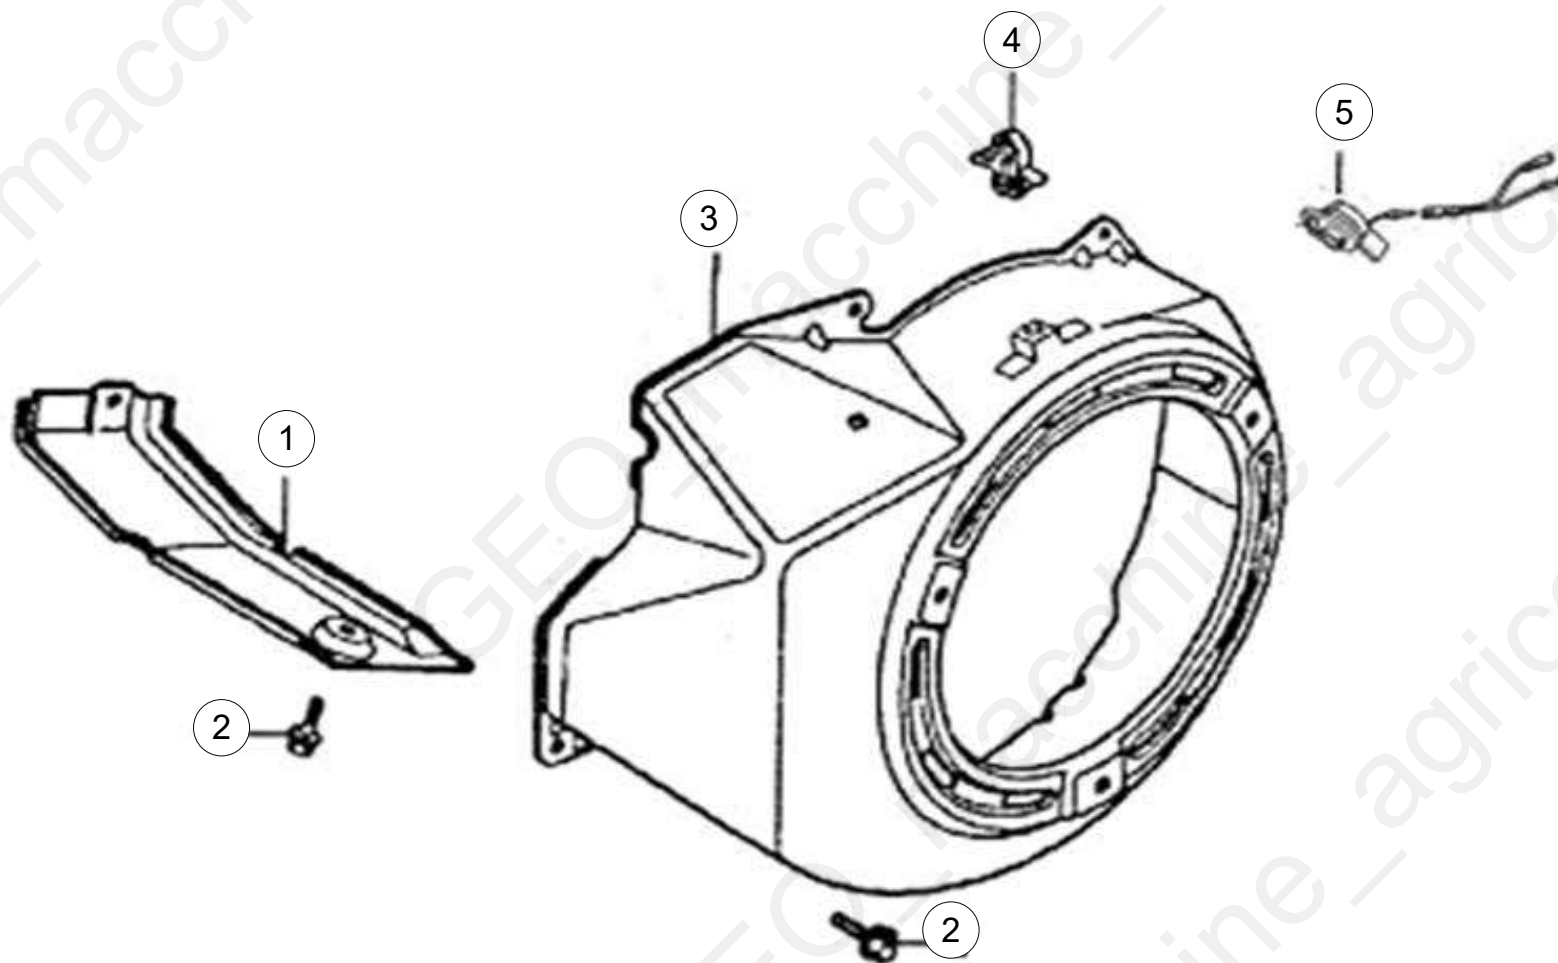


Machine: MOTORE JF340-390-420

Assembly: Motore_JD_parte 10



Pos	Code	Description	NOTE	Q.
1	JF340-H-01	SHROUD		1
2	JF340-H-02	FLANGE BOLT (M6×14)		6
3	JF340-H-03	FAN COVER COMP.		1
4	JF340-H-04	CORD CLAMPER		1
5	JF340-H-05	ENGINE STOP SWITCH ASSY.		1

Flywheel system Assy.

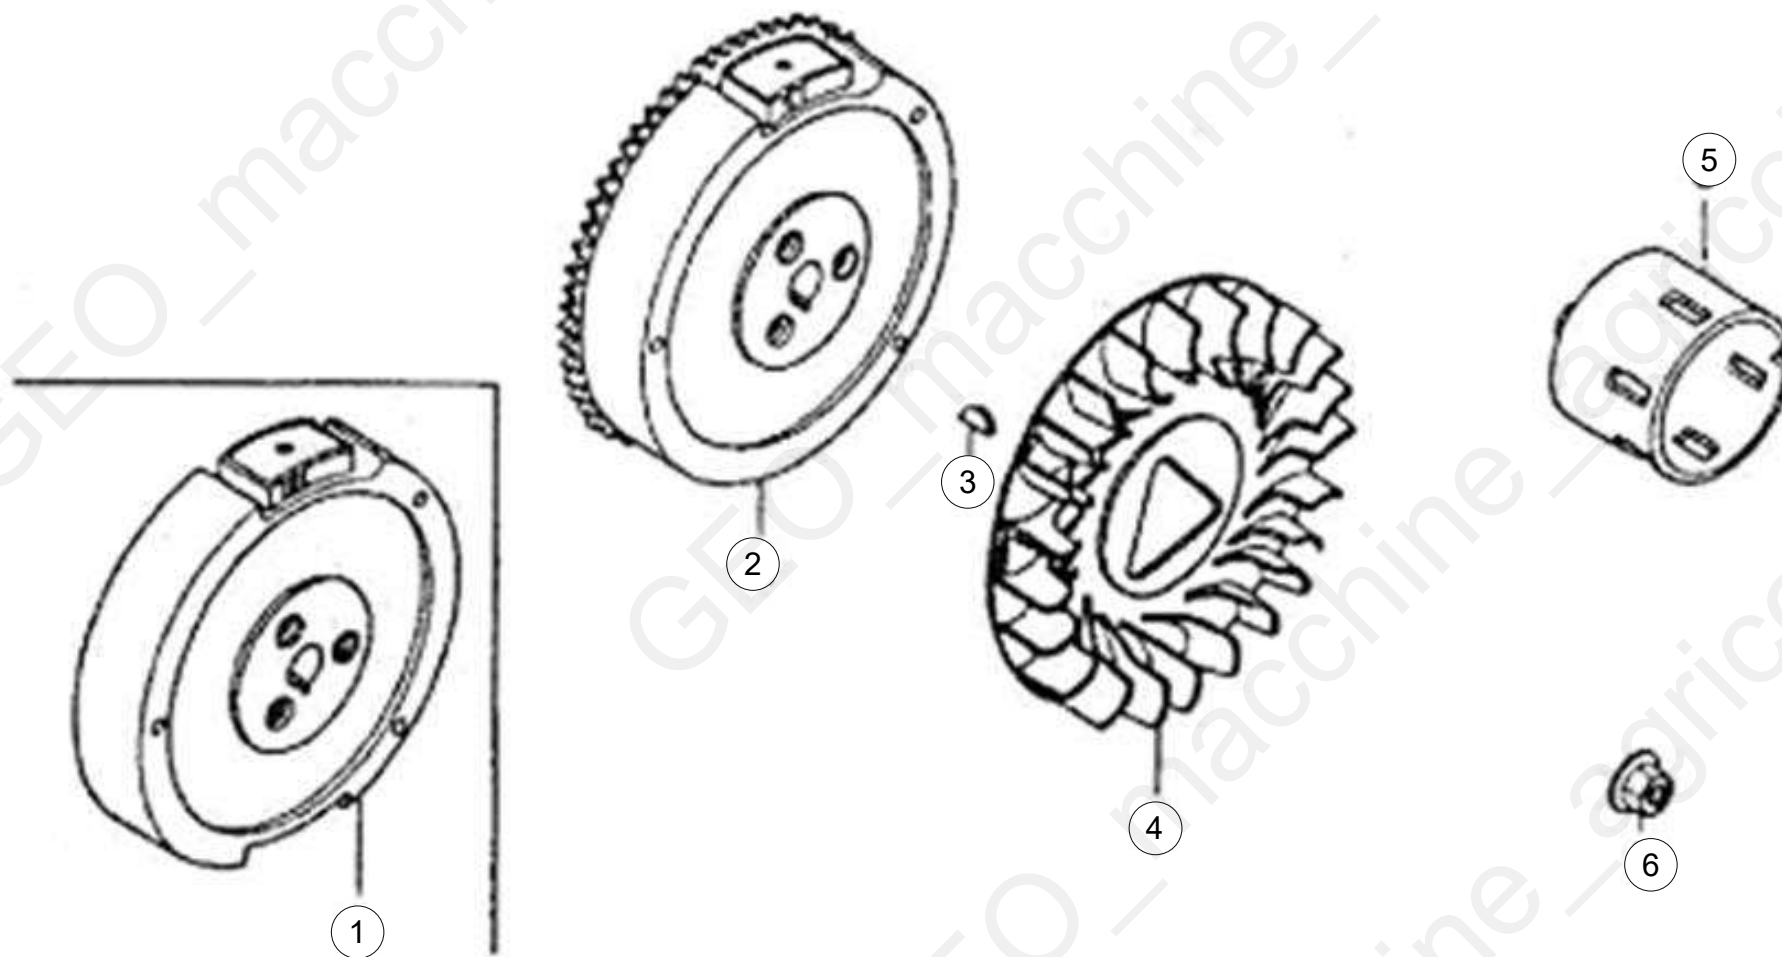

Machine: MOTORE JF340-390-420


Assembly: Motore_JD_parte 11



Pos	Code	Description	NOTE	Q.
1	JF340-J-01A	FLYWHEEL		1
2	JF340-J-01B	FLYWHEEL		1
3	JF340-J-02	SPECIAL WOODRUFF KEY		1
4	JF340-J-03	COOLING FAN		1
5	JF340-J-04	STARTER PULLEY		1
6	JF340-J-05	FLYWHEEL NUT (M16)		1

Fuel tank system assy.


16

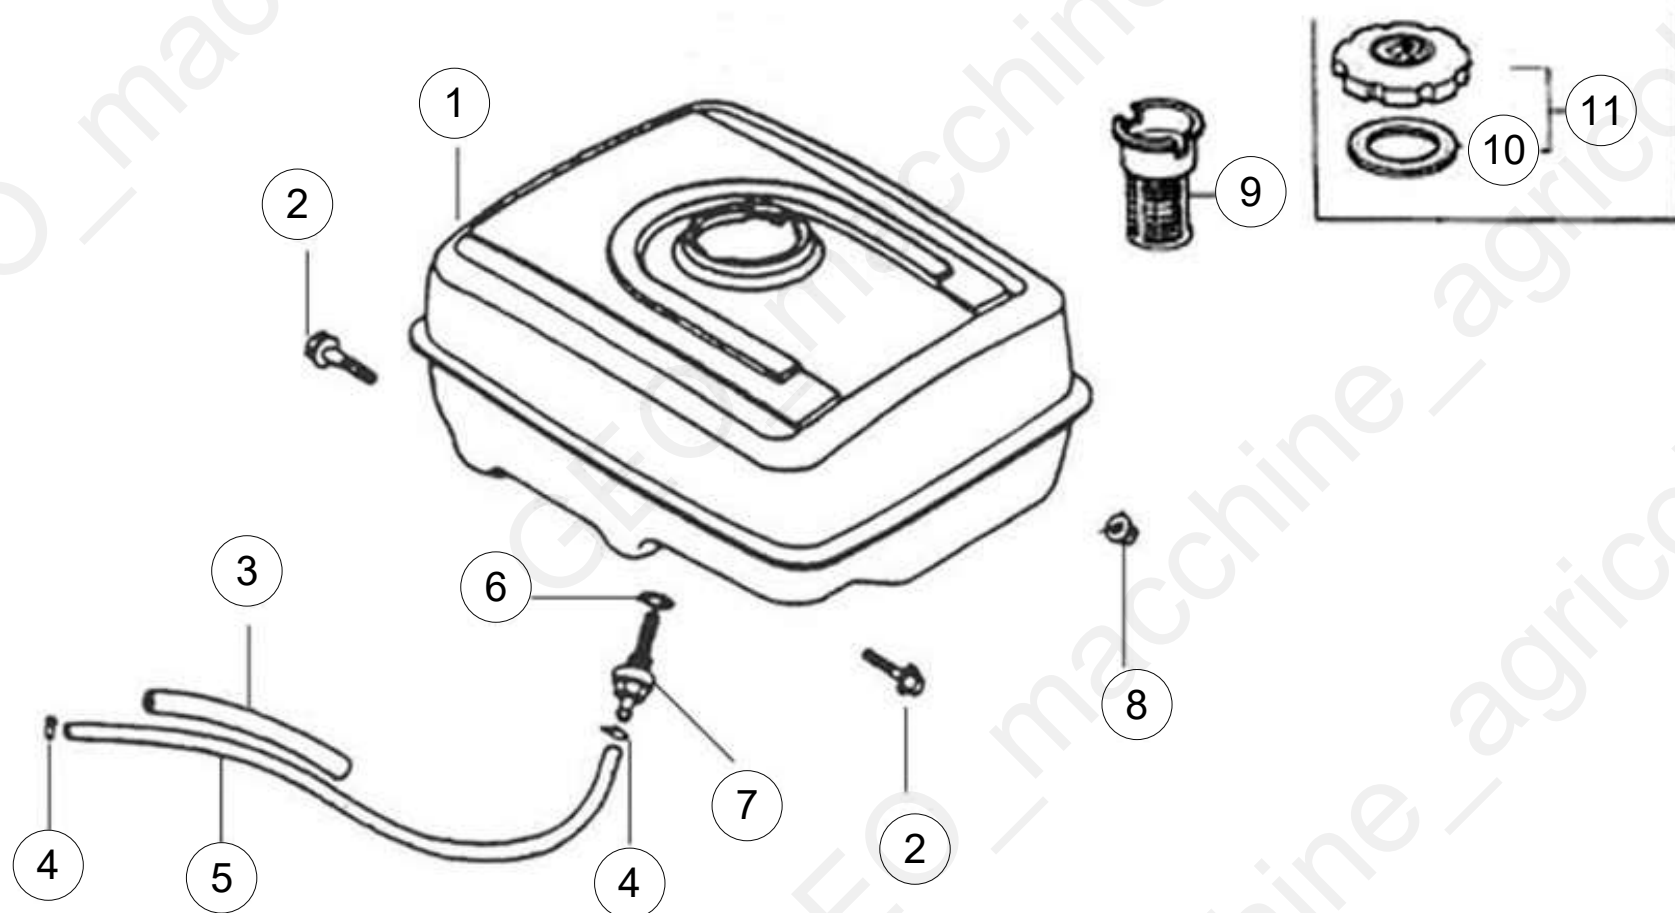

Pos	Code	Description	NOTE	Q.
1	JF340-P-01	FUEL TANK ASSY.		1
2	JF340-P-02	FLANGE BOLT (M8×25)		2
3	JF340-P-03	SUPPORTER RUBBER		1
4	JF340-P-04	TUBE CLIP		2
5	JF340-P-05	FUEL TUBE		1
6	JF340-P-06	O-RING (14mm)		1
7	JF340-P-07	FUEL TANK JOINT		1
8	JF340-P-08	FLANGE NUT (M6)		1
9	JF340-P-09	FUEL FILTER		1
10	JF168-N-11	FUEL FILLER CAP PACKING		1
11	JF340-P-10	FUEL FILLER CAP COMP.		1

Ignition System Assy.


11

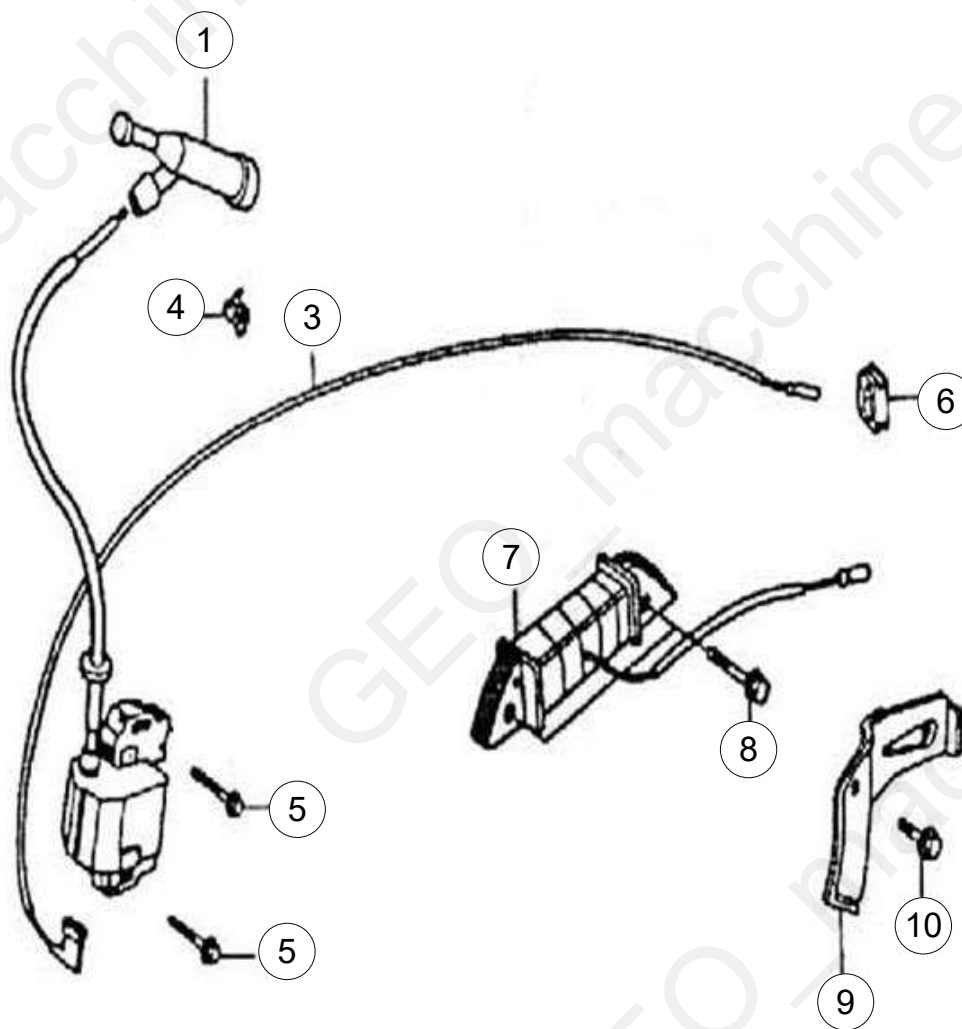

Pos	Code	Description	NOTE	Q.
1	JF340-K-01	PLENUM CAP		1
3	JF340-K-03	STOP SWITCH CORD		1
4	JF340-K-04	STOP SWITCH CORD HOLDER		1
5	JF340-K-05	FLANGE BOLT (M6×25)		2
6	JF340-K-06	CORD GROMMENT		1
7	JF340-K-07	CHARGE COIL ASSY.		1
8	JF340-K-08	FLANGE BOLT (M6×40)		2
9	JF340-K-09	CORD CLAMPER		1
10	JF340-K-10	FLANGE BOLT (M6×20)		1

Muffler System Assy.

14

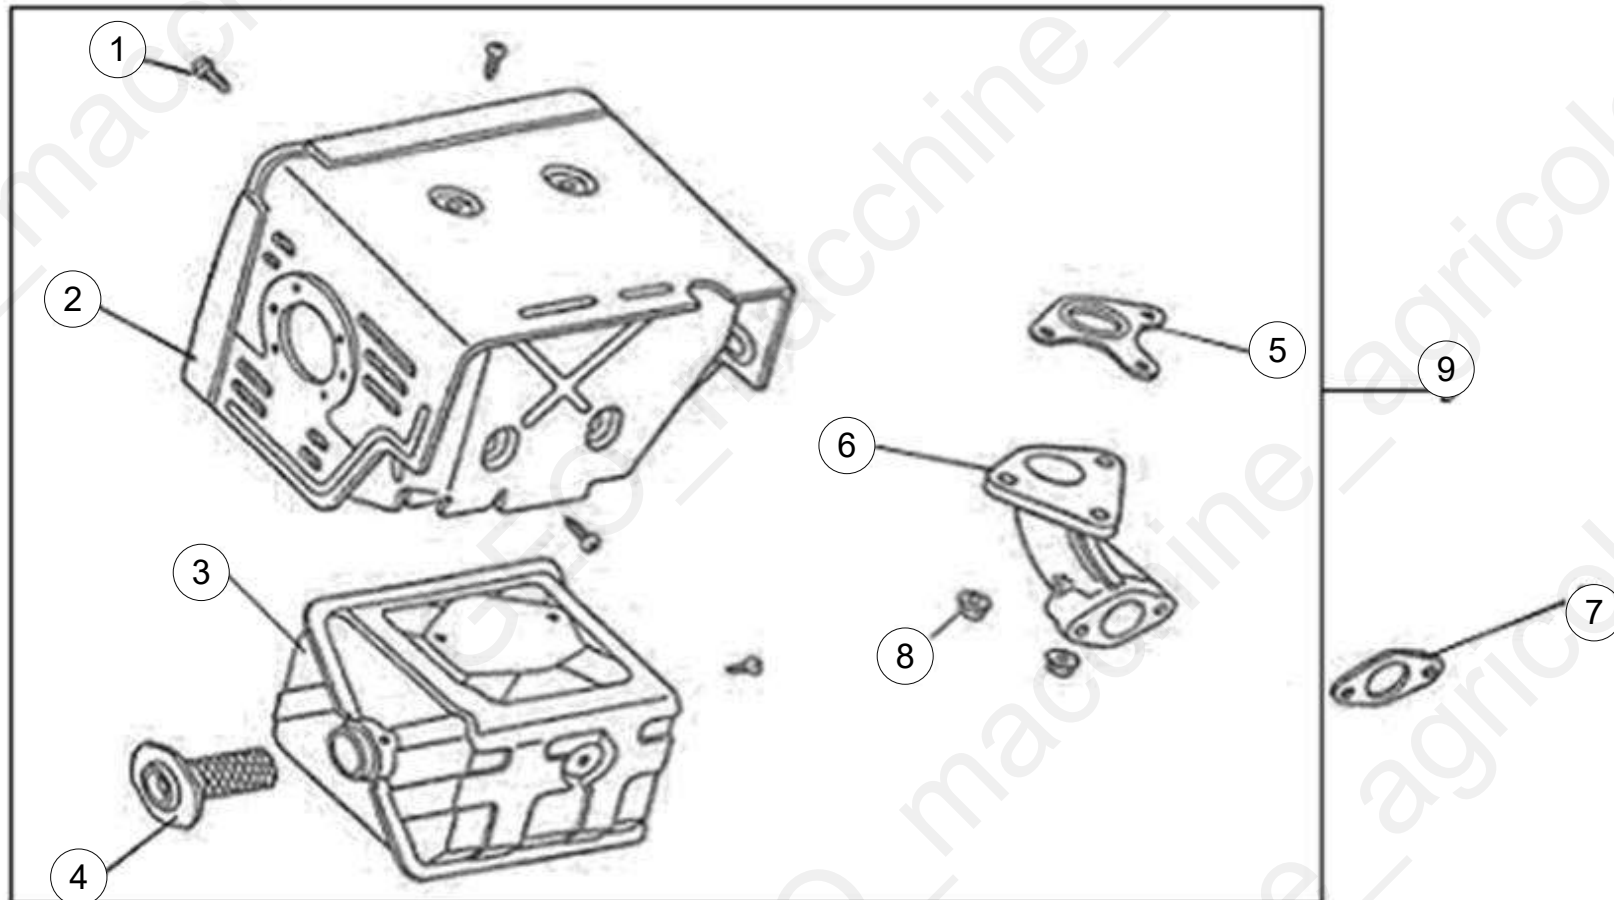

Machine: MOTORE JF340-390-420


Assembly: Motore_JD_parte 14



Pos	Code	Description	NOTE	Q.
1	JF340-N-01	TAPPING SCREW (M5×8)		4
2	JF340-N-02	MUFFLER PROTECTOR COMP.		1
3	JF340-N-03	MUFFLER COMP.		1
4	JF340-N-04	SPARK ARRESTER (SILENT)		1
5	JF340-N-05	EX. PIPE GASKET		1
6	JF340-N-06	EX. PIPE COMP.		1
7	JF340-N-07	MUFFLER GASKET		1
8	JF340-N-08	FLANGE NUT (M8)		2
9	JF240-N-09	MUFFLER ASSY.		1

Piston and connecting rod system assy.


5

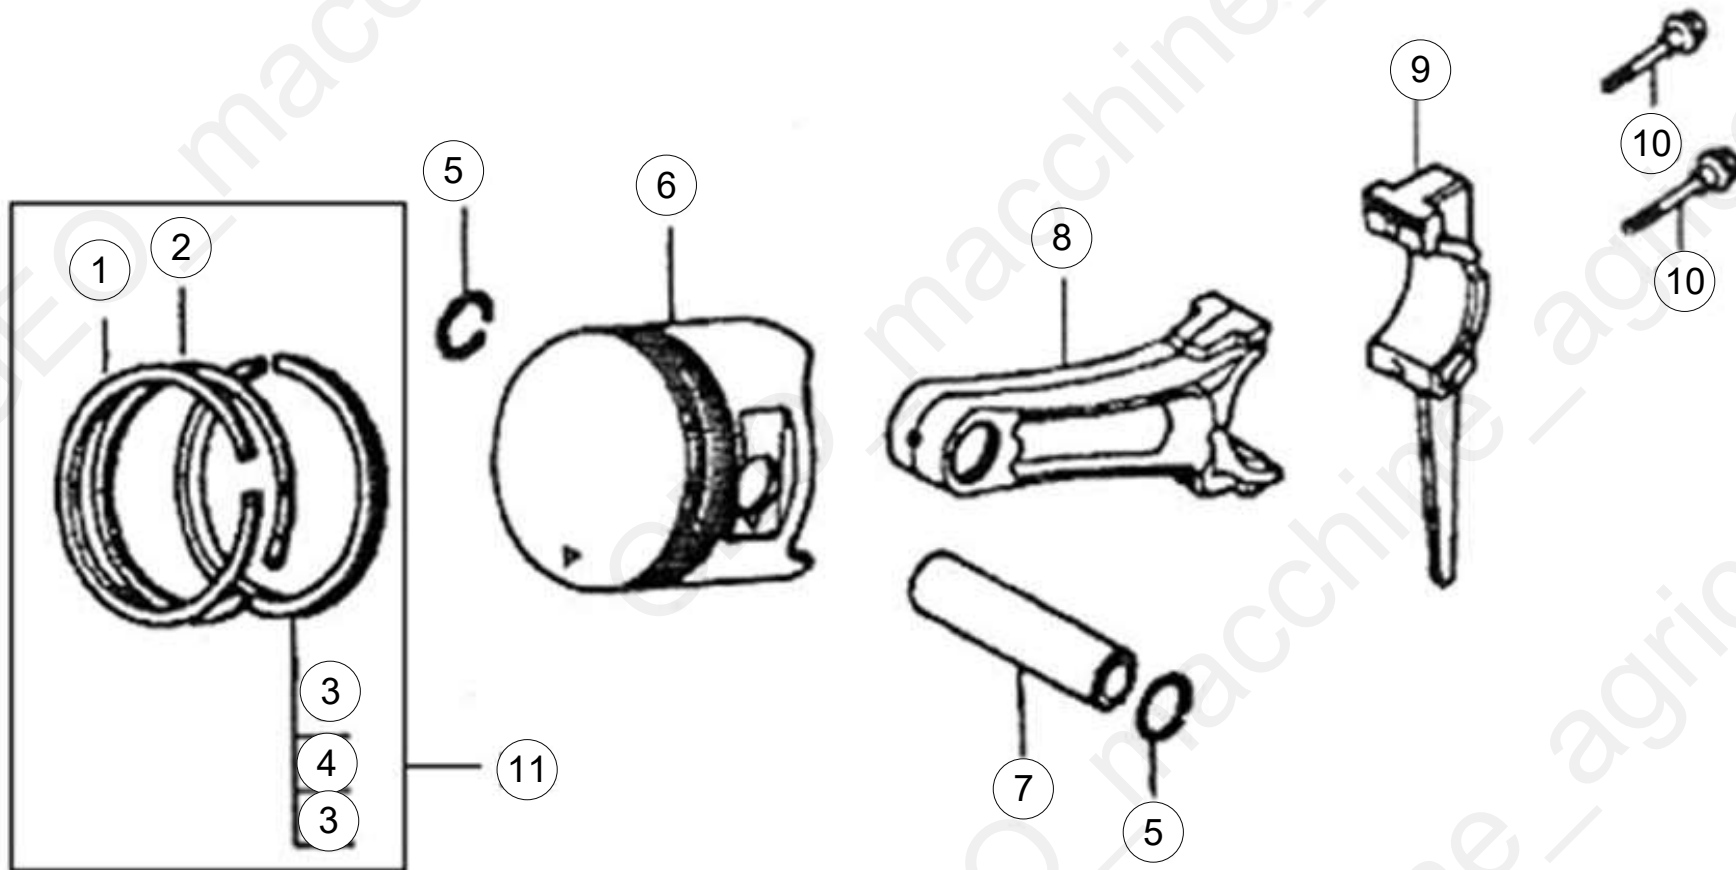

Pos	Code	Description	NOTE	Q.
1	JF340-E-01	COMPRESSION RING A		1
2	JF340-E-02	COMPRESSION RING B		1
3	JF340-E-03	OIL RING A		2
4	JF340-E-04	OIL RING B		1
5	JF240-E-05	PISTON PIN CLIP (20 mm)		2
6	JF340-E-05	PISTON		1
7	JF340-E-06	PISTON PIN		1
8	JF340-E-07	CONNECTING ROD		1
9	JF340-E-08	CONNECTING COVER		1
10	JF340-E-09	CONNECTING ROD BOLT		2
11	JF340-E-10	PISTON RING SET		1

Recoil starter system assy.


7

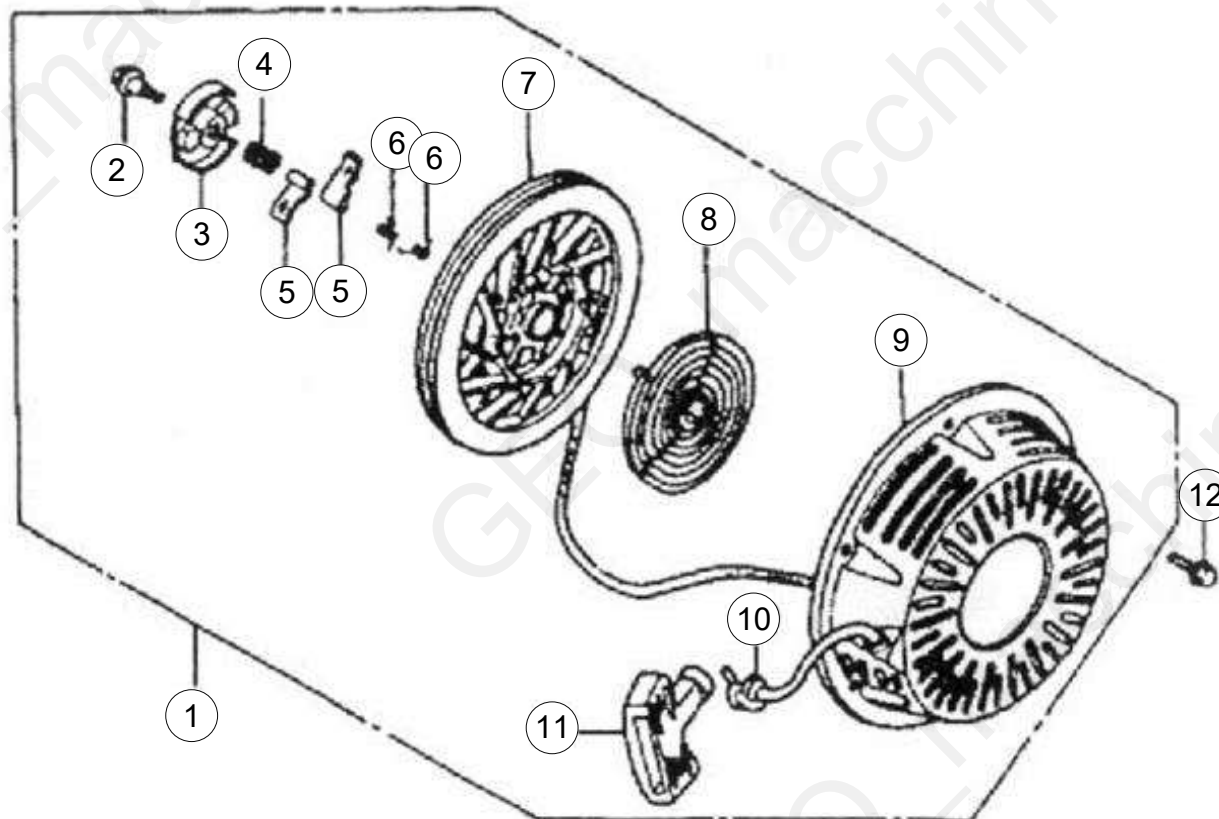

Pos	Code	Description	NOTE	Q.
1	JF340-G-01	RECOIL STARTER ASSY.		1
2	JF340-G-02	CENTER SCREW		1
3	JF340-G-03	SPRING RETAINER		1
4	JF340-G-04	FRICTION SPRING		1
5	JF340-G-05	STARTER RATCHET		2
6	JF340-G-06	RATCHET SPRING		2
7	JF340-G-07	RECOIL STARTER REEL		1
8	JF340-G-08	START RETURN SPRING		1
9	JF340-G-09	RECOIL STARTER CASE COMP.		1
10	JF340-G-10	RECOIL STARTER ROPE		1
11	JF340-G-11	STARTER GRIP		1
12	JF340-G-12	FLANGE BOLT (M6×8)		3

Starter motor System assy.

12

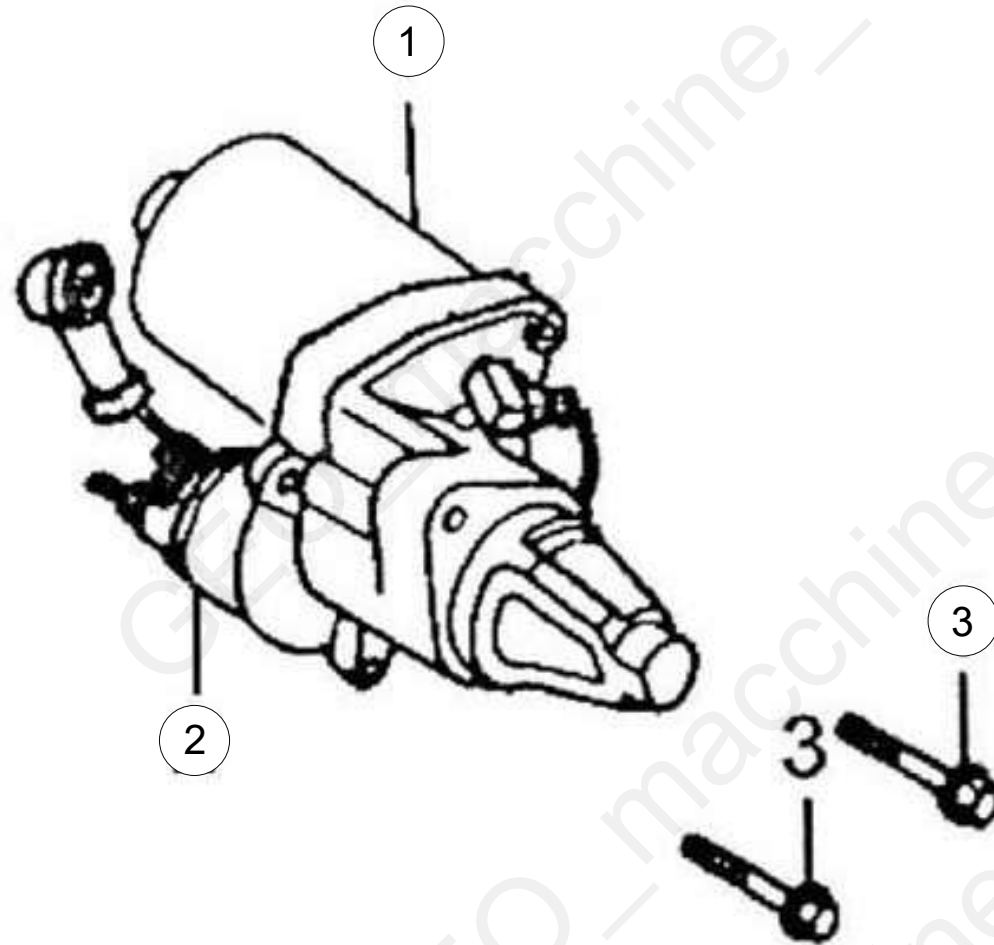

Machine: MOTORE JF340-390-420


Assembly: Motore_JD_parte 17



Pos	Code	Description	NOTE	Q.
1	JF340-L-01	UNIT STARTER MOTOR		1
2	JF340-L-02	CONTACTOR ASSY.		1
3	JF340-L-03	FLANGE BOLT (M8×35)		2

Camshaft system assy.

6

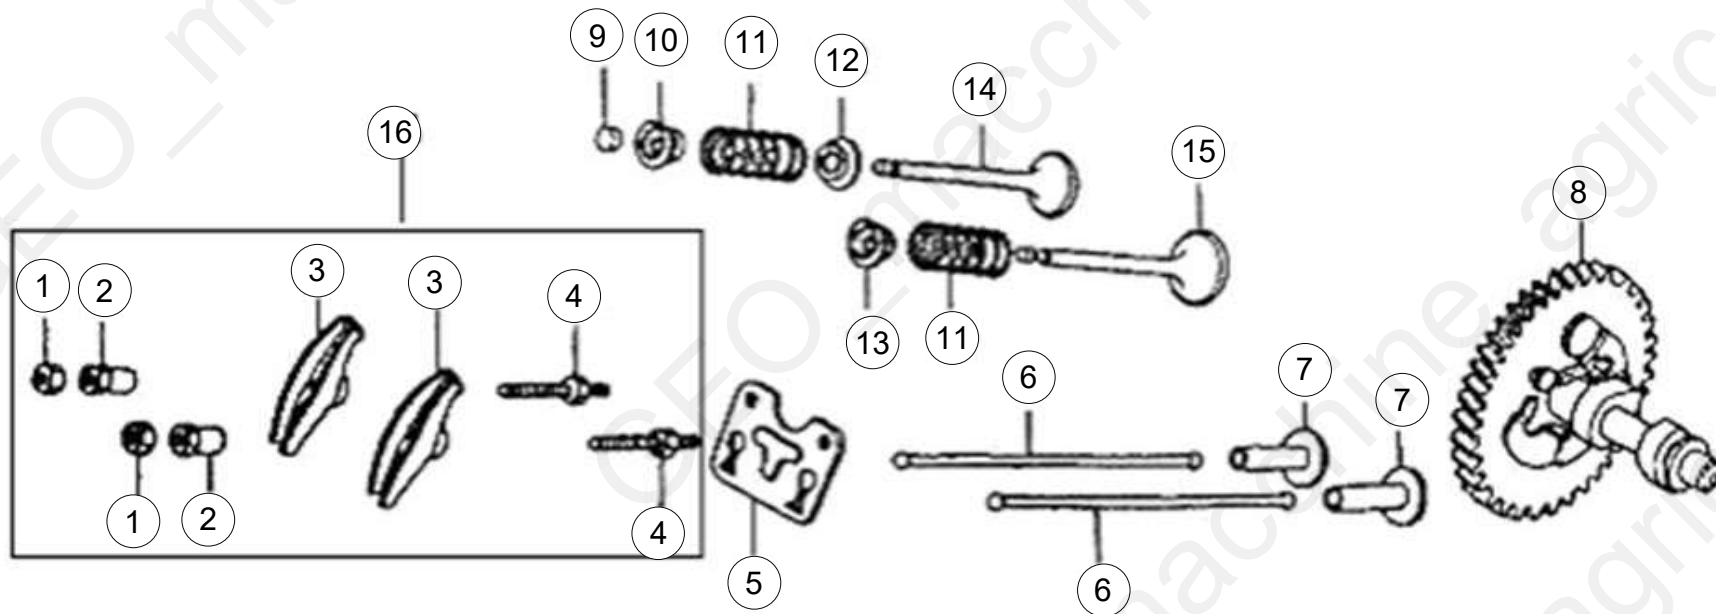

Machine: MOTORE JF340-390-420


Assembly: Motore_JD_parte 2



Pos	Code	Description	NOTE	Q.
1	JF340-F-01	LOCKNUT		2
2	JF340-F-02	ADJUSTING NUT		2
3	JF340-F-03	ROCKER ARM		2
4	JF340-F-04	ROCKER BOLT (8 mm)		2
5	JF340-F-05	PUSH ROD GUIDE PLATE		1
6	JF240-F-06	ROD PUSH		2
7	JF240-F-07	CAM FOLLOWER		2
8	JF270-F-08	CAMSHAFT		1
9	JF340-F-06	EX. VALVE HELMET		1
10	JF340-F-07	EX. VALVE SPRING RETAINER		1
11	JF340-F-08	VALVE SPRING		2
12	JF340-F-09	VALVE SPRING SEAT		2
13	JF340-F-10	IN. VALVE SPRING RETAINER		1
14	JF340-F-11	EX. VALVE		1
15	JF340-F-12	IN. VALVE		1
16	JF340-F-13	ROCKER ASSY.		1

Carburetor system assy.

9

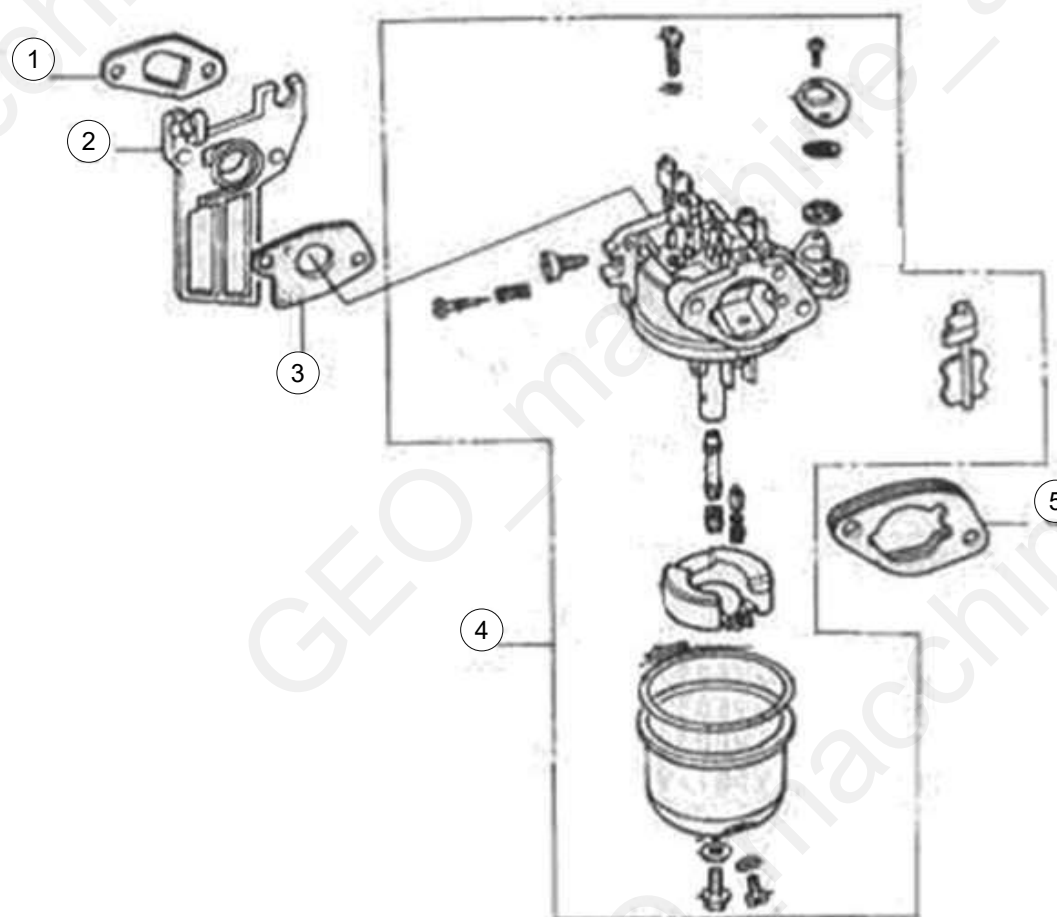

Machine: MOTORE JF340-390-420


Assembly: Motore_JD_parte 3



Pos	Code	Description	NOTE	Q.
1	JF340-I-01	INTAKE PIPE GASKET		1
2	JF340-I-02	CARBURETOR INSULATING PLATE		1
3	JF340-I-03	CARBURETOR PAPER GASKET		1
4	JF340-I-04A	CARBURETOR ASSY.		1
5	JF340-I-05	CARBURETOR IRON GASKET		1

Control box assy.

17

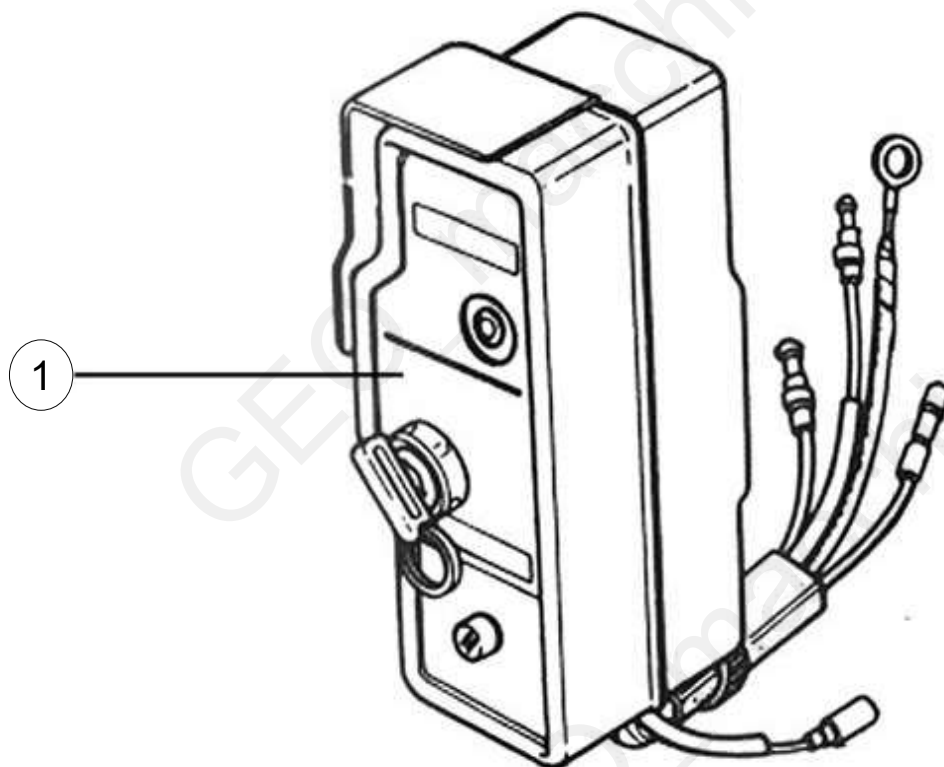

Machine: MOTORE JF340-390-420


Assembly: Motore_JD_parte 4



Pos	Code	Description	NOTE	Q.
1	JF390-Q-01	CONTROL BOX ASSY.		1

Control System Assy.


13

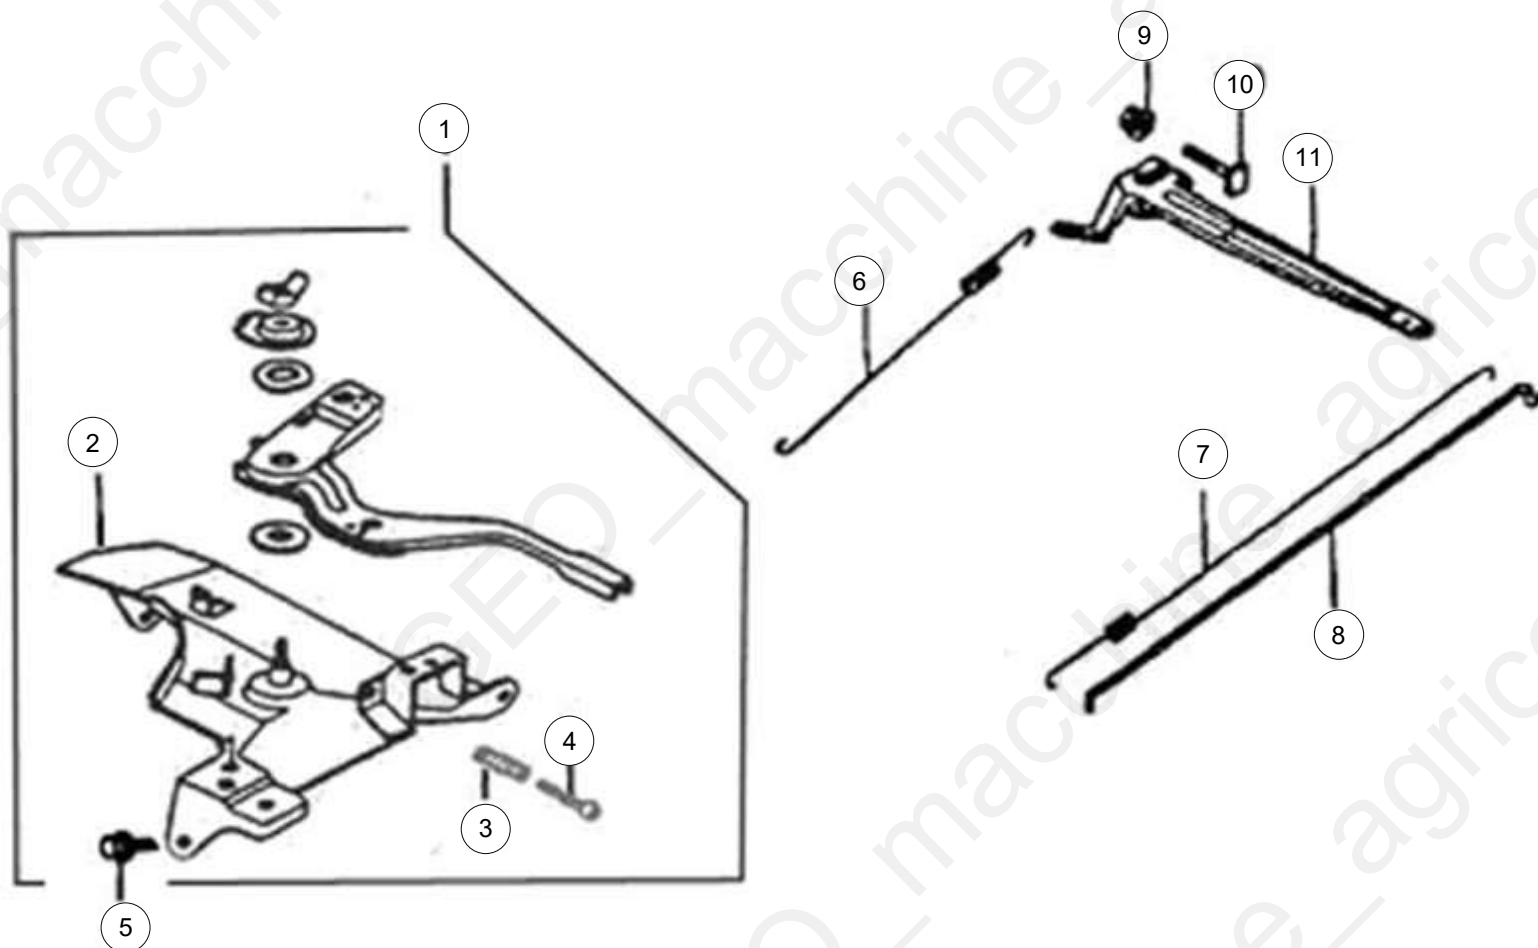

Pos	Code	Description	NOTE	Q.
1	JF340-M-01A	CONTROL ASSY.		1
2	JF340-M-02A	CONTROL BASE COMP.		1
3	JF340-M-03	CONTROL ADJUSTING SPRING		1
4	JF340-M-04	CROSS POND SCREW (M5×34)		1
5	JF340-M-05	FLANGE BOLT (M6×14)		1
6	JF340-M-06	GOVERNOR SPRING		1
7	JF340-M-07	THROTTLE RETURN SPRING		1
8	JF340-M-08	GOVERNOR ROD		1
9	JF340-M-09	FLANGE NUT (M6)		1
10	JF340-M-10	GOVERNOR ARM BOLT (M6)		1
11	JF340-M-11	CONTROL ARM		1

Crankcase cover system assy.

3

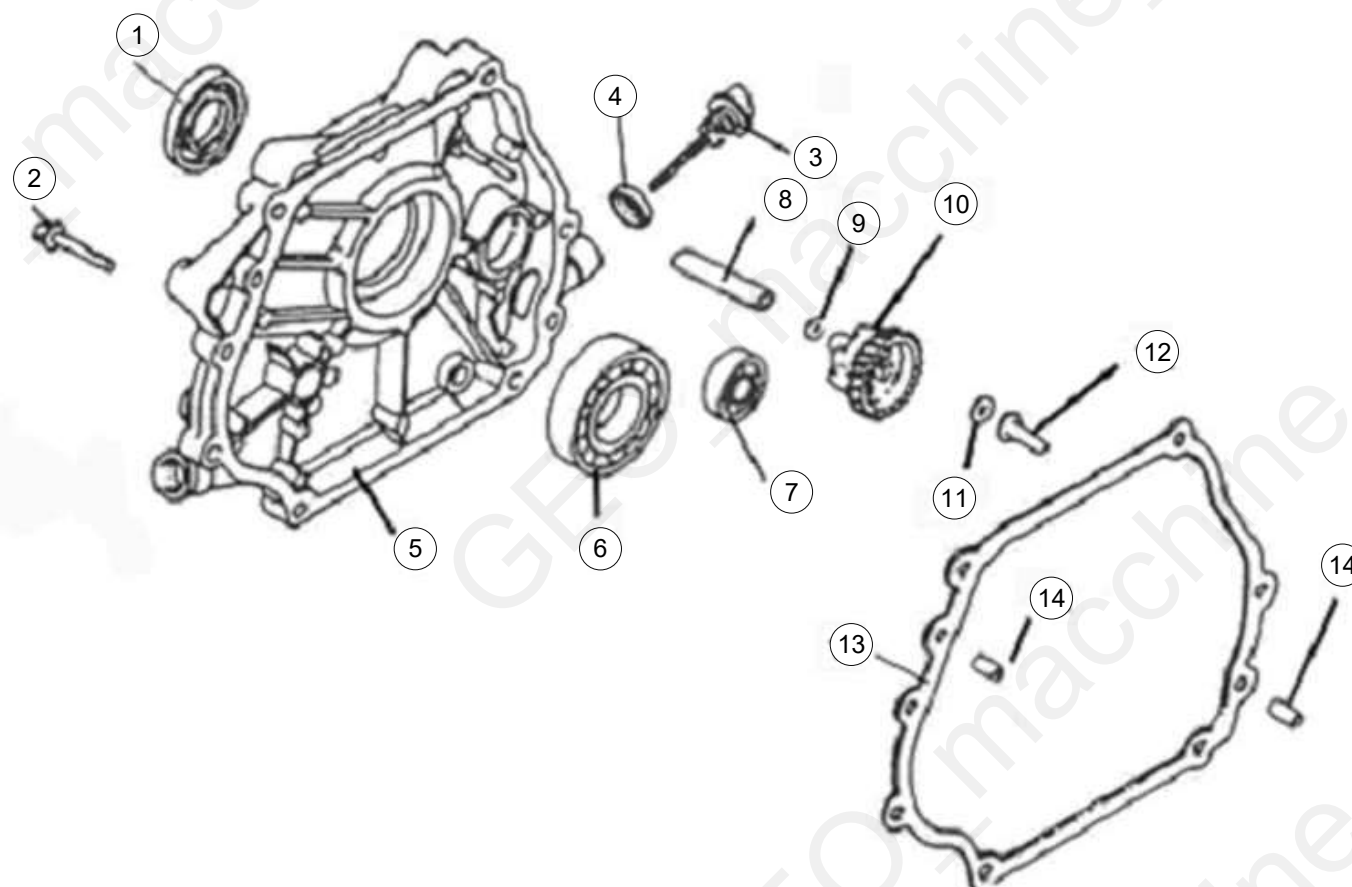

Machine: MOTORE JF340-390-420


Assembly: Motore_JD_parte 6



Pos	Code	Description	NOTE	Q.
1	JF340-B-11	OIL SEAL (diam 35× diam 52×8)		1
2	JF340-C-01	FLANGE BOLT (M8×35)		7
3	JF340-C-02A	OIL SCALE		2
4	JF340-C-03	OIL SCALE SEAL RING		2
5	JF340-C-04A	CRANKCASE COVER		1
6	JF340-B-04	BALL BEARING (6207)		1
7	JF340-B-13	BALL BEARING (6202)		1
8	JF340-C-05	SLIDER SHAFT		1
9	JF340-C-06	GOVERNOR GEAR WASHER (6 mm)		1
10	JF340-C-07	GOVERNOR GEAR		1
11	JF340-C-08	SLIDER WASHER (6 mm)		1
12	JF340-C-09	GOVERNOR SLIDER		1
13	JF340-C-10	CRANKCASE COVER PAD		1
14	JF240-C-11	DOWEL PIN (8×12)		2

Crankshaft system assy.

4

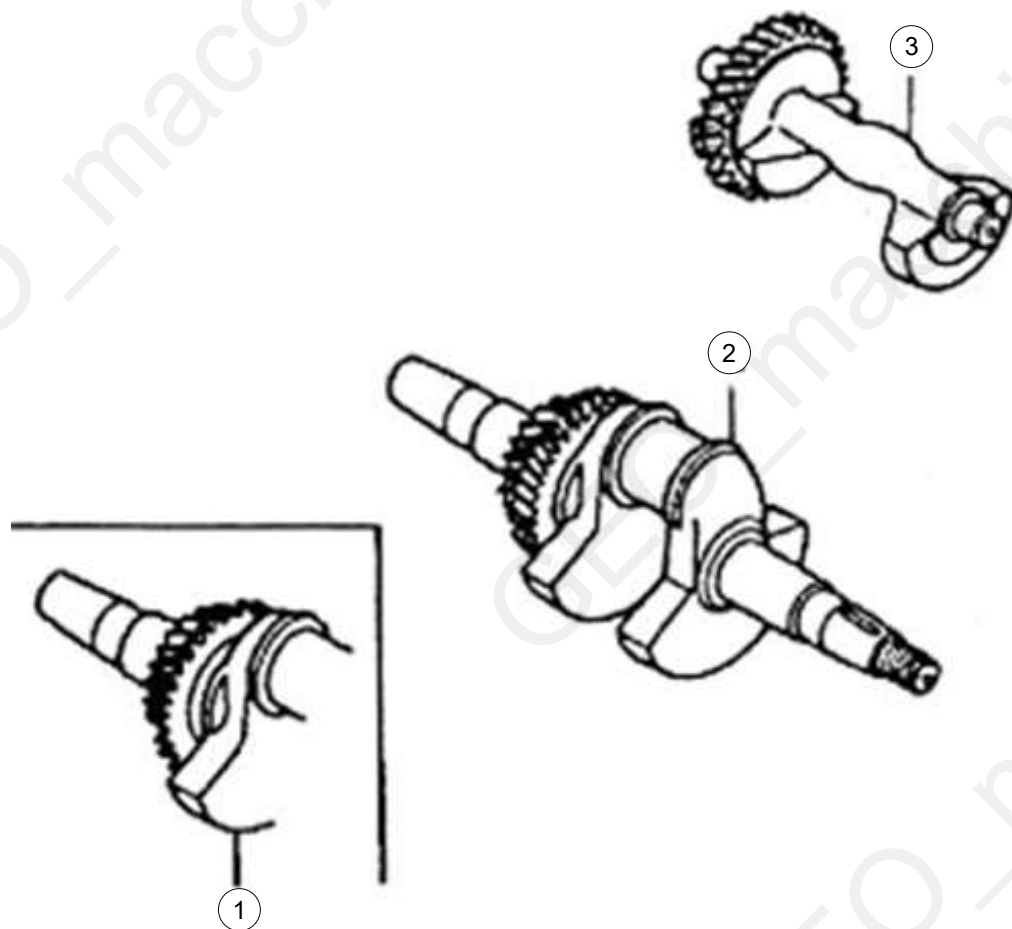

Machine: MOTORE JF340-390-420


Assembly: Motore_JD_parte 7



Pos	Code	Description	NOTE	Q.
1	JF340-D-01	CRANK		1
2	JF340-D-02	CRANKSHAFT COMP.		1
3	JF340-D-03	BALANCE SHAFT		1

Cylinder barrel

2

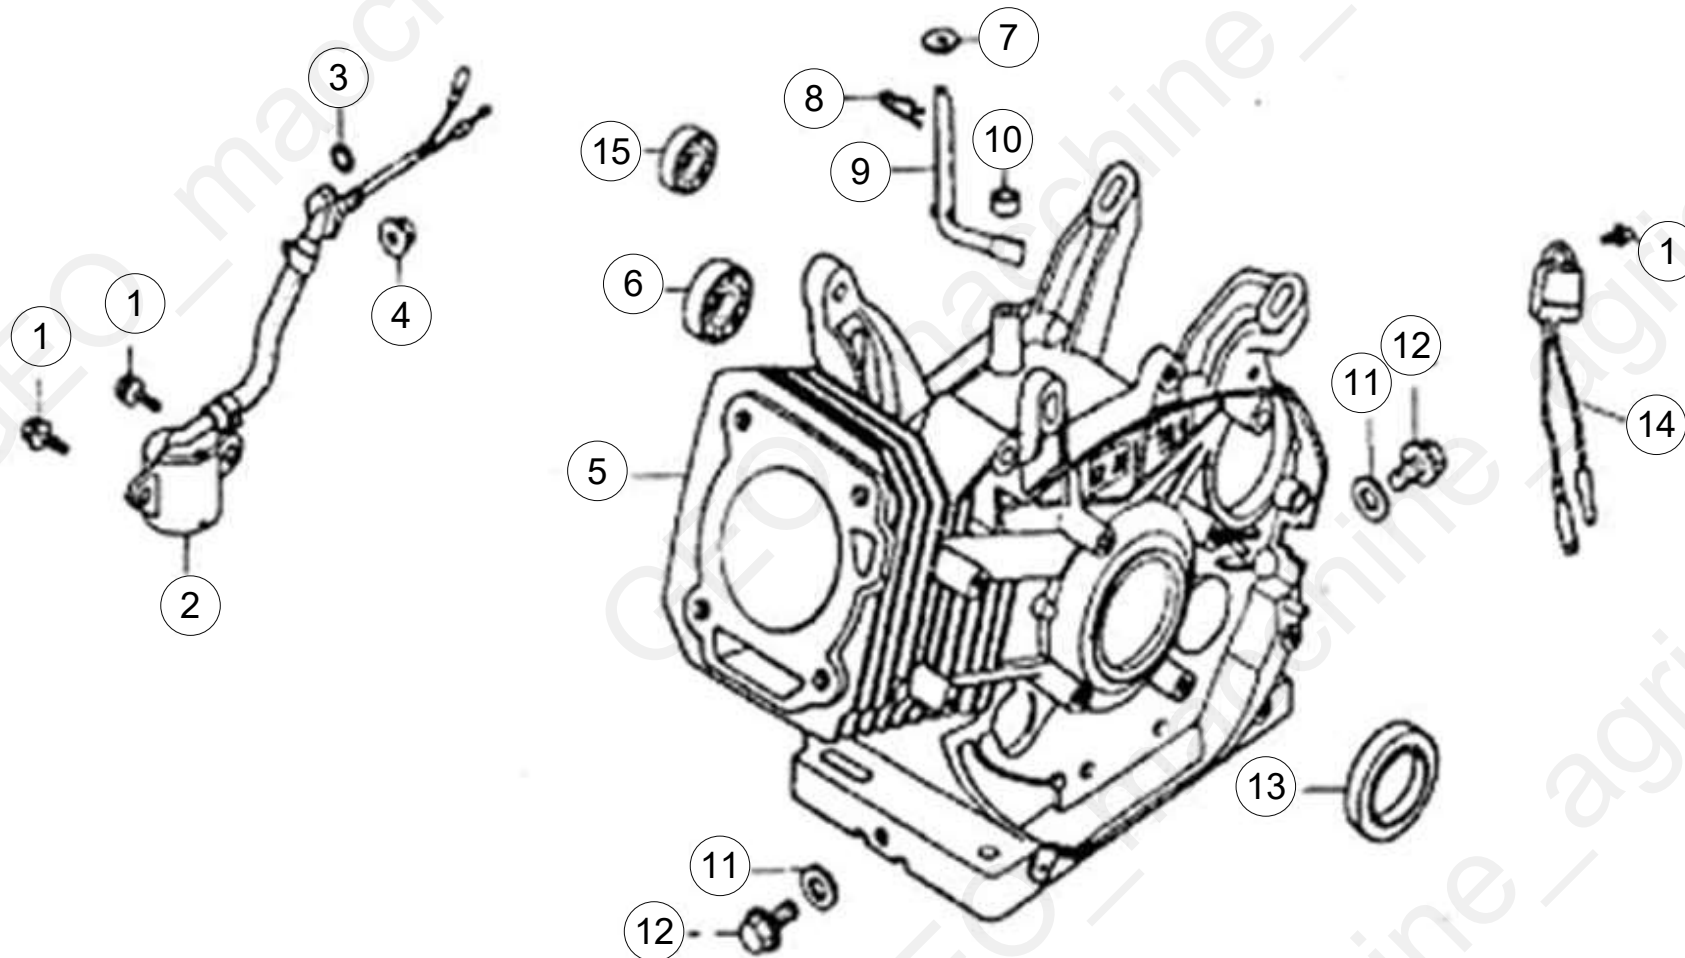


1

Pos	Code	Description	NOTE	Q.
1	JF340-B-01	FLANGE BOLT (M6×14)		3
2	JF240-B-02	OIL LEVEL SWITCH ASSY.		1
3	JF240-B-03	O-RING (14mm)		1
4	JF340-B-02	FLANGE NUT (10 mm)		1
5	JF340-B-03	CRANK CASE		1
6	JF340-B-04	BALL BEARING (6207)		1
7	JF340-B-05	WASHER (diam 8.3× diam 17×1)		1
8	JF340-B-06	LOCK PIN (10 mm)		1
9	JF340-B-07	GOVERNOR ARM SHAFT		1
10	JF340-B-08	OIL SEAL (diam 8× diam 14×5)		1
11	JF340-B-09	DRAIN PLUG WASHER (12 mm)		2
12	JF340-B-10	DRAIN PLUG BOLT		2
13	JF340-B-11	OIL SEAL (diam 35× diam 52×8)		1
14	JF340-B-12	OIL PROTECTOR		1
15	JF340-B-13	BALL BEARING (6202)		1

Cylinder head system assy.

1

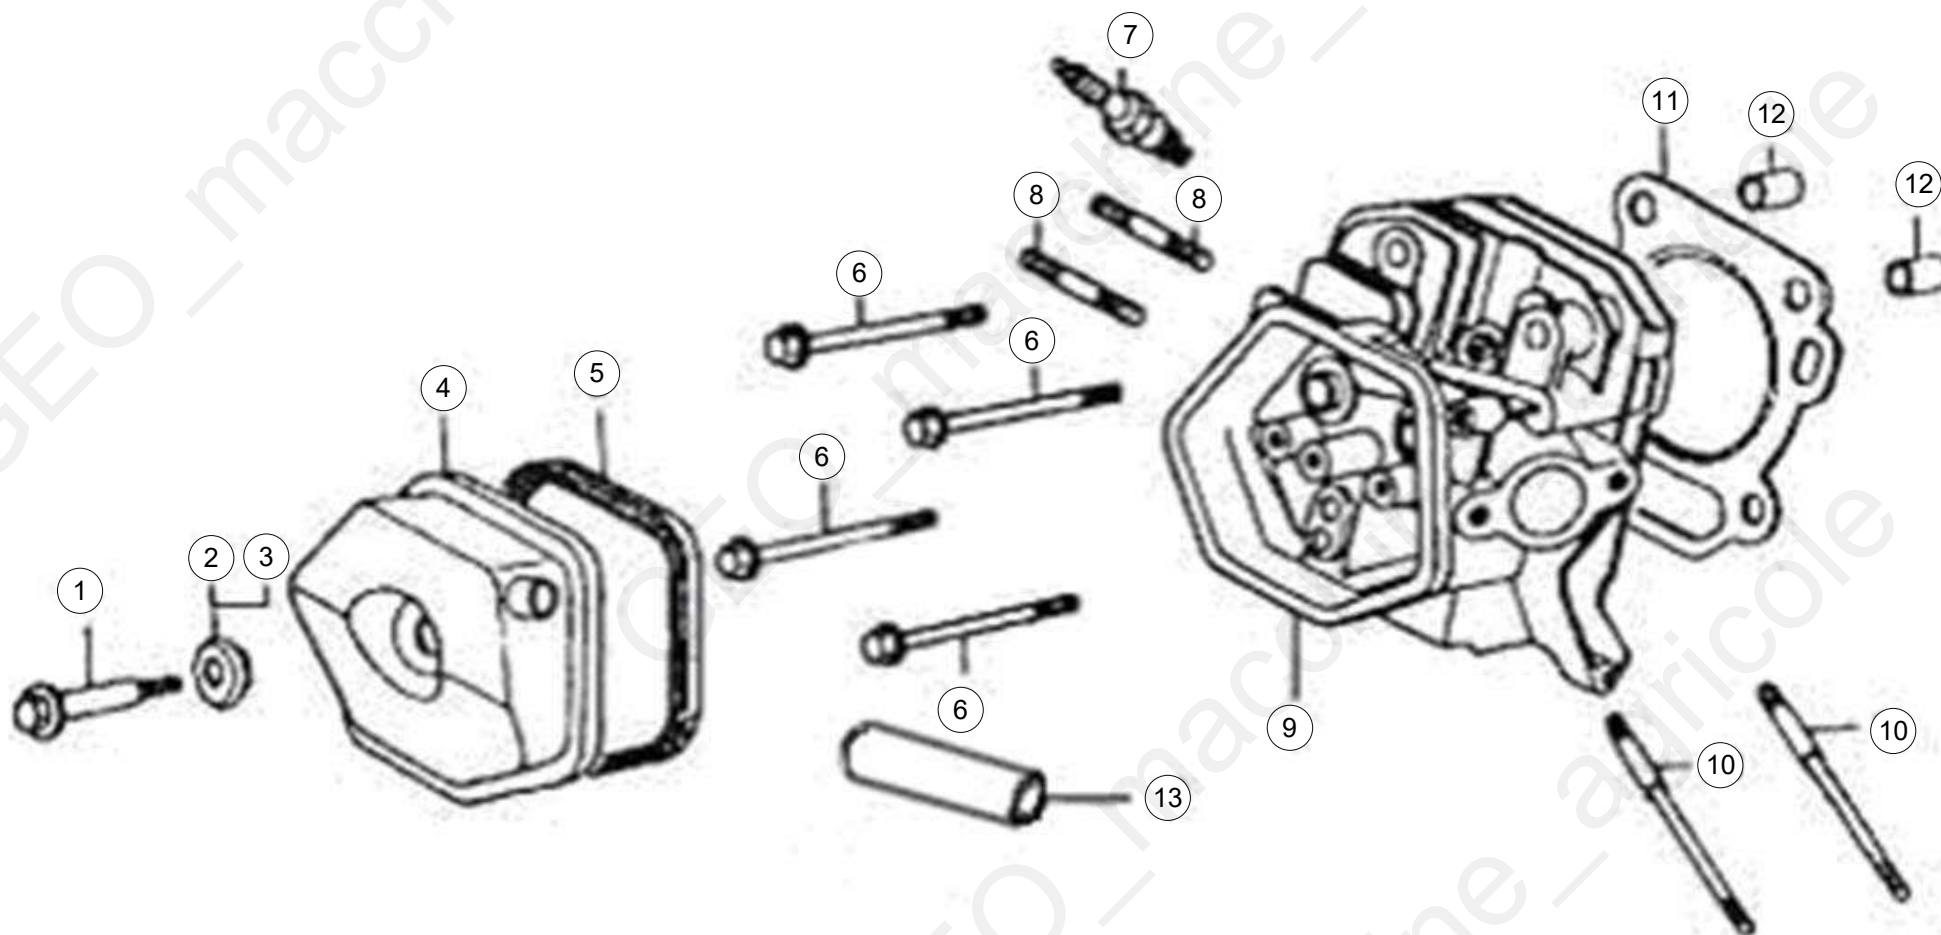

Pos	Code	Description	NOTE	Q.
1	JF340-A-01	HEAD COVER COMP. BOLT		1
2	JF340-A-02	HEAD COVER WASHER COMP.		1
3	JF340-A-03	WASHER COVER PACKING		1
4	JF340-A-04	HEAD COVER COMP.		1
5	JF340-A-05	HEAD COVER PACKING		1
6	JF340-A-06	FLANGE BOLT (M10×80)		4
7	JF340-A-07	SPARK PLUG		1
8	JF340-A-08A	EXHAUST PIPE STUD BOLT		2
9	JF340-A-09	CYLINDER HEAD COMP.		1
10	JF340-A-10A	CARBURETOR STUD BOLT		2
11	JF340-A-11	CYLINDER HEAD SEALING PAD		1
12	JF340-A-12	DOWE L PIN (diam 10× diam 12×20)		2
13	JF340-A-13A	BREATHER TUBE		1