


SB Seeder

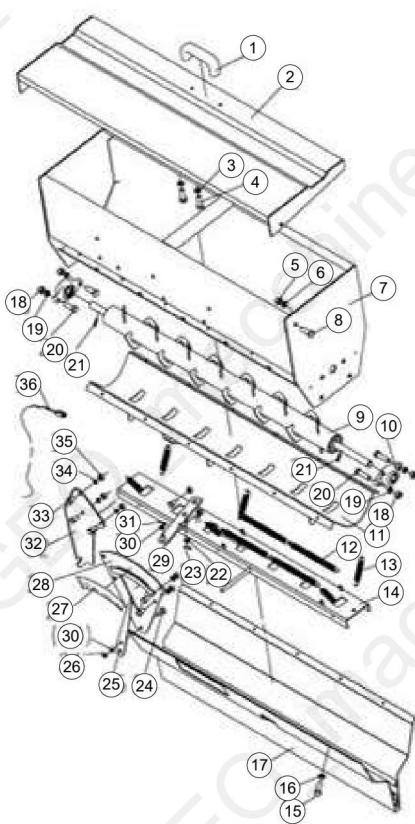

Assembly: Sb Seeder_parte 1



Machine: SB Seeder

Assembly: Sb Seeder_parte 1



Pos	Code	Description	NOTE	Q.
1	RKH120-BS	handle		1
2	MZ145B-0901-00	Upper cap (145)		1
2	MZ165B-0901-00	Upper cap (165)		1
3	GB93-8	Spring washer 8		2
4	GB5783-M8X20	bolt M8X20		2
5	DIN985-M10	Locking nut M10		2
6	GB97.1-10	PLAIN WASHER 10		2
7	MZ145B-0902-00	Hopper (145)		1
7	MZ165B-0902-00	Hopper (165)		1
8	GB5783-M10X30	Bolt M10X30		2
9	MZ145B-0903-00	Stirrer (145)		1
9	MZ165B-0903-00	Stirrer (165)		1
10	UCFL204-45	BEARING SEAT UCFL204-45		2
11	MZ145B-0904-00	Bottom plate(145)		1
11	MZ165B-0904-00	Bottom plate(165)		1
12	1BF200-0900-02	Big tension spring		4
13	1BF200-0900-01	Small tension spring		6
14	MZ145B-0905-00	Slide plate (145)		1
14	MZ165B-0905-00	Slide plate (165)		1
15	GB5783-M6X14	Hexagon nut		22
16	GB93-6	spring washer 6		22
17	MZ145B-0906-00	Ejection exit (145)		1
17	MZ165B-0906-00	Ejection exit (165)		1
18	DIN985-M12	nut M12		4
19	GB93-12	spring washer 12		4

GEO Italy S.R.L.

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT

Page 5

Machine: SB Seeder

Assembly: Sb Seeder_parte 1




Pos	Code	Description	NOTE	Q.
20	GB5783-M12X35	Bolt M12X35		4
21	GB879.1-5X30	Elastic cylindrical pin		2
22	GB97.1-12	plain washer 12		1
23	GB91-4X20	Cotter pin		1
24	1ZS-380.48.03	Bolt M8x20		1
25	1BF200-0900-04	Ejection exit pointer		1
26	DIN985-M8	nut M8		1
27	1BF200-0900-05	Scale sticker		1
28	1BF200-0908-00	Pointer fixed seat		1
29	1BF200-0907-00	Stress application rod		1
30	GB97.1-8	Plain washer 8		2
31	GB91-3.2X20	cotter pin 3.2x20		1
32	1BF200-0900-03	Stress application rod supporting plate		1
33	GB5783-M10X20	Bolt M10x20		7
34	GB93-10	spring washer 10		7
35	GB6170-M10	Nut 10		7
36	1BF200-1300-00	Manual control		1

GEO Italy S.R.L.

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT

Page 6

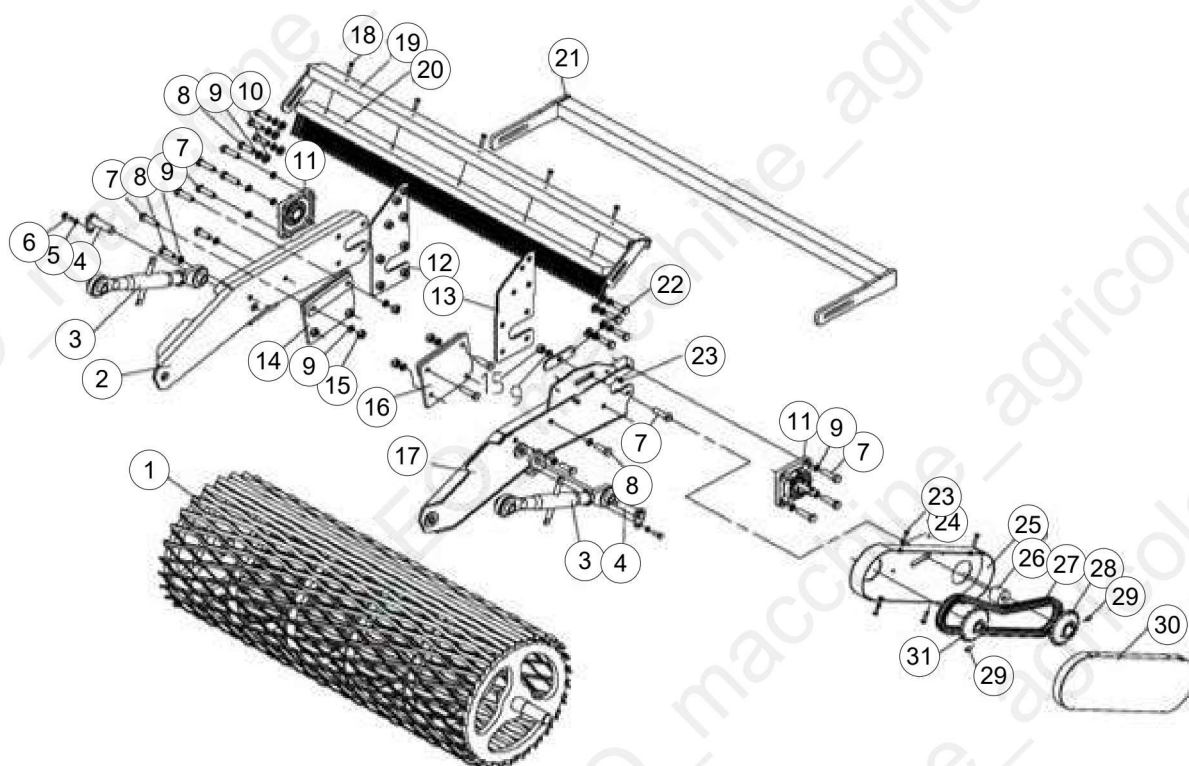

Machine: SB Seeder

Assembly: Sb Seeder_parte 2



Pos	Code	Description	NOTE	Q.
1	MZ145B-1001-00	Roller (145)		1
1	MZ165B-1001-00	Roller (165)		1
2	MZ105B.016	Right side pull frame		1
3	MZ105.024	Adjusting rod		2
4	MZ105B.011	Pin		2
5	GB93-8	Spring washer 8		2
6	GB5783-M8x20	bolt M8X20		2
7	GB5782-M12X45	Bolt M12x45		8
8	GB5783-M12X35	Bolt M12X35		12
9	GB93-12	spring washer 12		20
10	GB97.1-12	plain washer 12		8
11	UCF206	UCF206 bearing		2
12	1BF200-1007-00	Roller connect plate left		1
13	1BF200-1006-00	Roller connect plate right		1
14	1BF200-1005-00	Hopper connect frame		1
15	GB6170-M12	Nut 12		5
16	1BF200-1004-00	Hopper connect frame		1
17	MZ105B.015	left side pull frame		1
18	GB5783-M6X25	bolt M6X25		5
19	MZ145B-1009-00	Brush frame (145)		1
19	MZ165B-1009-00	Brush frame (165)		1
20	MZ145B-1000-01	Wood brush assembly(145)		1
20	MZ165B-1000-01	Wood brush assembly(165)		1
21	MZ145B-1008-00	Fender bracket(145)		1
21	MZ165B-1008-00	Fender bracket(165)		1

GEO Italy S.R.L.

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT

Page 8

Machine: SB Seeder

Assembly: Sb Seeder_parte 2



Pos	Code	Description	NOTE	Q.
22	1BF200-0000-04	Interior plate		1
23	GB5783-M6X16	bolt M6X16		6
24	GB93-6	spring washer 6		6
25	1BF200-1100-00	Sprocket cover 1		1
26	1BF200-0000-03	Nylon sleeve		1
27	10A-1-62	chain		1
28	1BF200-0000-01	Sprocket 1		1
29	GB77-M8X14	Set screw		2
30	1BF200-1200-00	Sprocket cover 2		1
31	1BF200-0000-02	Sprocket 2		1

GEO Italy S.R.L.

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT

Page 9