


Assembly: ATVSprayer_100



Machine: ATV SPRAYER
 Assembly: ATVSprayer_100

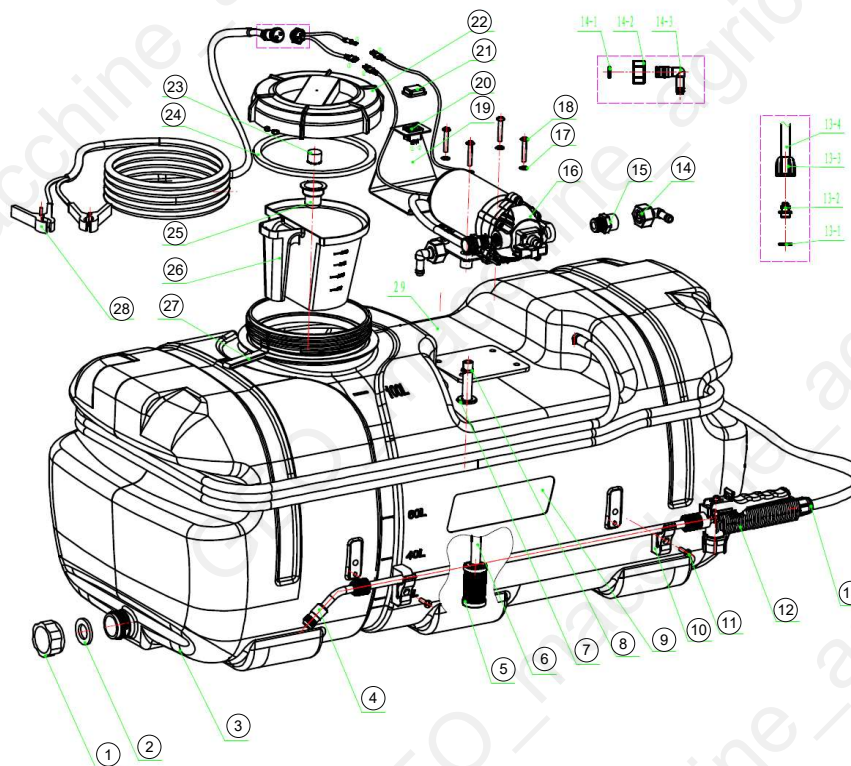

Pos	Code	Description	NOTE	Q.
1	TF900PP.01-06	TF900PP.01-06		1
2	TF900PP.01-07	TF900PP.01-07		1
3	ATV25.01	ATV25.01		1
4	SL-116	SL-116		1
5	ATV15.02	ATV15.02		1
6	ATV25-02	ATV25-02		1
7	ATV25-03	ATV25-03		1
8	ATVS.008	ATVS.008		2
9	ATVS.009	ATVS.009		2
10	ATV10-07	ATV10-07		2
11	GB/T818-2000	Cross bolt M5*12		2
12	MC-24	MC-24		1
13	ATV15.03	ATV15.03		1
14	ATV25.02	ATV25.02		2
15	ATV25-04	ATV25-04		1
16	ATVS.016	ATVS.016		1
17	GB/T95-2002	Plain washer 8		4
18	GB/T818-2000	Cross bolt M5*12		4
19	ATV25-01	ATV25-01		1
20	ATVS.020	ATVS.020		1
21	ATVS.021	ATVS.021		1
22	ATV10.01-01	ATV10.01-01		1
23	TF900PP.01-03	TF900PP.01-03		1
24	TF900PP.01-02	TF900PP.01-02		1
25	TF900PP.01-04	TF900PP.01-04		1

GEO Italy S.R.L.

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT

Page 4

Machine: ATV SPRAYER
Assembly: ATVSprayer_100



Pos	Code	Description	NOTE	Q.
26	ATV10-05	ATV10-05		1
27	ATV10-06	ATV10-06		1
28	ATV15.04	ATV15.04		1