


Assembly: ATVSprayer_50



Machine: ATV SPRAYER

Assembly: ATVSprayer_50

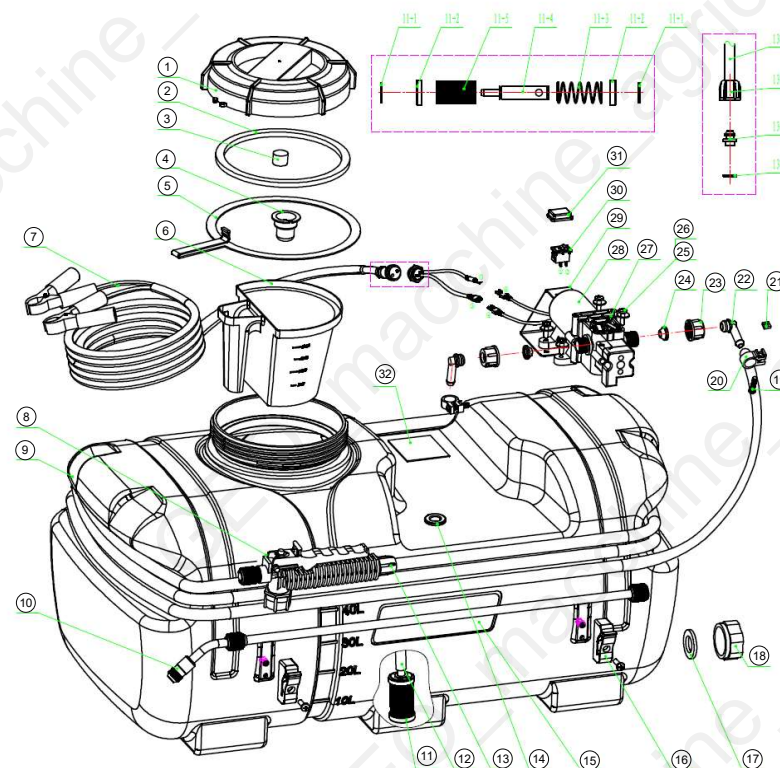

Pos	Code	Description	NOTE	Q.
1	ATV10.01-01	ATV10.01-01		1
2	TF900PP.01-02	TF900PP.01-02		1
3	TF900PP.01-03	TF900PP.01-03		1
4	TF900PP.01-04	TF900PP.01-04		1
5	ATV10-06	ATV10-06		1
6	ATV10-05	ATV10-05		1
7	ATV15.04	ATV15.04		1
8	MC-24	MC-24		1
9	ATV15.01	ATV15.01		1
10	SL-116	SL-116		1
11	ATV15.02	ATV15.02		1
12	ATV15-02	ATV15-02		1
13	ATV15.03	ATV15.03		1
14	ATV25-03	ATV25-03		1
15	ATV25.15	sticker		2
16	ATV10-07	ATV10-07		2
17	TF900PP.01-07	TF900PP.01-07		1
18	TF900PP.01-08	TF900PP.01-08		1
19	GB/T818-2000	Cross bolt M5*12		2
20	NS15-11	NS15-11		2
21	GB/T39-1988	GB/T39-1988		2
22	ATV5.02-01	ATV5.02-01		2
23	NS16.03-01	NS16.03-01		2
24	ATV5.02-02	ATV5.02-02		2
25	GB/T95-2002	Plain washer 8		4

GEO Italy S.R.L.

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT

Page 7

Machine: ATV SPRAYER

Assembly: ATVSprayer_50



Pos	Code	Description	NOTE	Q.
26	FGB/T818-2000	bolt		6
27	DMBD2.6L.00	DMBD2.6L.00		1
28	ATV25.28	PUMP		1
29	ATV15-03	ATV15-03		1
30	ATV25.30	ATV25.30		1
31	ATV25.31	ATV25.31		1
32	ATV25.32	ATV25.32		1

GEO Italy S.R.L.

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT

Page 8