


# Spare Part Book



## TL



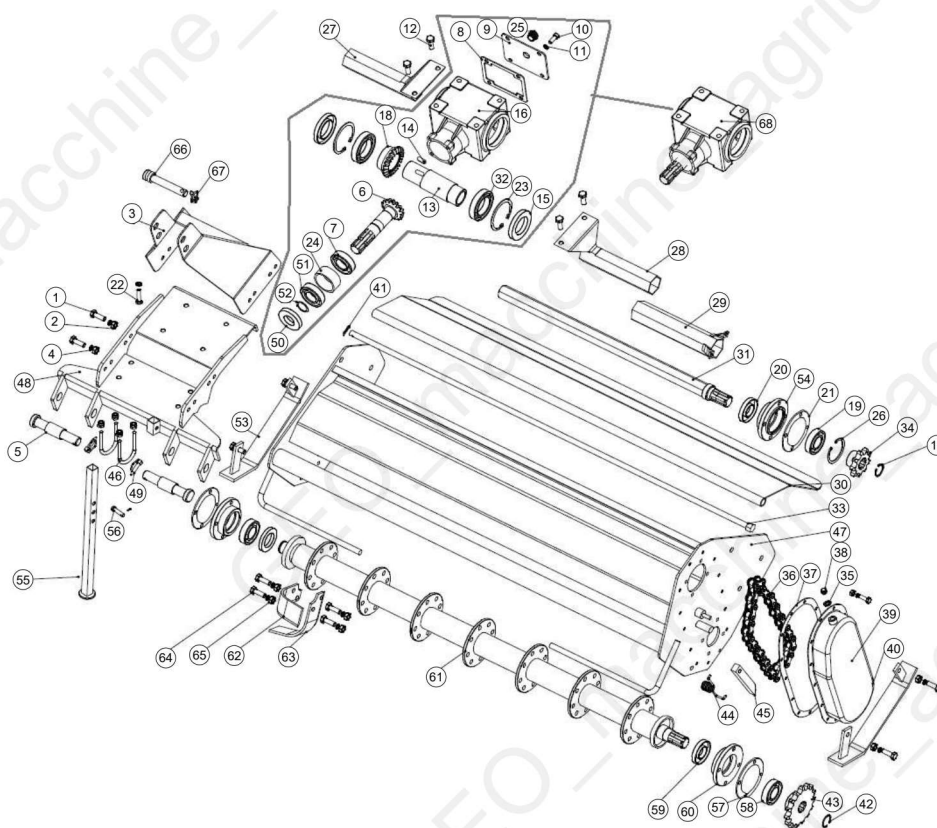

Machine: TL

Assembly: TL\_parte 1



| Pos | Code                | Description                       | NOTE | Q. |
|-----|---------------------|-----------------------------------|------|----|
| 1   | TL.001              | Bolts                             |      | 8  |
| 2   | TL.002              | Nuts                              |      | 8  |
| 3   | TL.003              | Shield protective cover           |      | 1  |
| 4   | TL.004              | Washer                            |      | 8  |
| 5   | TL.005              | Lower suspension pin              |      | 2  |
| 6   | TL.006              | Small bevel gear                  |      | 0  |
| 7   | TL.007              | Bearing 30207                     |      | 0  |
| 8   | TL.008              | Oil seal ring                     |      | 0  |
| 9   | TL.009              | Cap                               |      | 0  |
| 10  | TL.010              | Bolts                             |      | 0  |
| 11  | TL.011              | Washer                            |      | 0  |
| 12  | TL.012              | Bolts                             |      | 0  |
| 13  | TL.013              | Splite sleeve                     |      | 0  |
| 14  | TL.014              | Flat key                          |      | 0  |
| 15  | GB13871-94-55X90X12 | Oil seal of bearing seat 55*90*12 |      | 2  |
| 16  | TL.016              | Intermediate gearbox              |      | 0  |
| 17  | TL.017              | Circlip diam 32                   |      | 0  |
| 18  | TL.018              | Big bevel gear                    |      | 0  |
| 19  | TL.019              | Bearing 6207                      |      | 0  |
| 20  | GB13871-94-45X65X12 | Oil seal 45X65X12                 |      | 0  |
| 21  | TL.021              | Oil seal ring                     |      | 1  |
| 22  | TL.022              | Bolts                             |      | 0  |
| 23  | TL.023              | Eyelet washer diam 90             |      | 2  |
| 24  | TL.024              | bushing                           |      | 0  |
| 25  | TL.025              | Oil check plug                    |      | 0  |

GEO Italy S.R.L.

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT

Page 5

Machine: TL

Assembly: TL\_parte 1



| Pos | Code        | Description                   | NOTE | Q. |
|-----|-------------|-------------------------------|------|----|
| 26  | TL.026      | Eyelet washer diam 72         |      | 8  |
| 27  | TL.027      | Small sleeve tabe             |      | 8  |
| 28  | TL.028      | Small sleeve tabe             |      | 1  |
| 29  | TL.029      | Big sleeve tabe               |      | 1  |
| 30  | TL.030.01   | Tail plate TL95               |      | 1  |
| 30  | TL.030.02   | Tail plate TL105              |      | 1  |
| 30  | TL.030.03   | Tail plate TL115              |      | 1  |
| 30  | TL.030.04   | Tail plate TL125              |      | 1  |
| 30  | TL.030.05   | Tail plate TL135              |      | 1  |
| 31  | TL105.66.36 | 2nd EXAGONAL shaftTL105       |      | 1  |
| 31  | TL115.71.36 | 2nd EXAGONAL shaftTL115       |      | 1  |
| 31  | TL125.75.36 | 2nd EXAGONAL shaft TL125      |      | 1  |
| 31  | TL135.81.36 | 2nd EXAGONAL shaftTL135       |      | 1  |
| 31  | TL95.61.36  | 2nd EXAGONAL shaft TL95       |      | 1  |
| 32  | TL.032      | Bearing 6011                  |      | 2  |
| 33  | TL.033.01   | Rod TL95                      |      | 1  |
| 33  | TL.033.02   | Rod TL105                     |      | 1  |
| 33  | TL.033.03   | Rod TL115                     |      | 1  |
| 33  | TL.033.04   | Rod TL125                     |      | 1  |
| 33  | TL.033.05   | Rod TL135                     |      | 1  |
| 34  | TL.034      | Small sprocket wheel TL       |      | 1  |
| 35  | TL.035      | Washer                        |      | 1  |
| 36  | TL.036.01   | Chain TL95-105(12A-60H)       |      | 1  |
| 36  | TL.036.02   | Chain TL115-125-135 (16A-80H) |      | 1  |
| 37  | TL.037      | Oil seal ring                 |      | 1  |

GEO Italy S.R.L.

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT

Page 6

Machine: TL

Assembly: TL\_parte 1



| Pos | Code                | Description           | NOTE | Q. |
|-----|---------------------|-----------------------|------|----|
| 38  | TL.038              | Oil filler plug       |      | 1  |
| 39  | TL.039              | Side chain gear box   |      | 1  |
| 40  | TL.040              | Oil drain plug        |      | 1  |
| 41  | TL.01.041           | B type pin            |      | 1  |
| 42  | TL.042              | Circlip diam 32       |      | 1  |
| 43  | TL.043              | Big sprocket wheel TL |      | 1  |
| 44  | TL.044              | Spring                |      | 1  |
| 45  | TL.045              | Tension plate         |      | 1  |
| 46  | TL.046              | U-bolts               |      | 2  |
| 47  | TL.047.01           | Main Frame TL95       |      | 1  |
| 47  | TL.047.02           | Main Frame TL105      |      | 1  |
| 47  | TL.047.03           | Main Frame TL115      |      | 1  |
| 47  | TL.047.04           | Main Frame TL125      |      | 1  |
| 47  | TL.047.05           | Main Frame TL135      |      | 1  |
| 48  | TL.048              | Foot pedal            |      | 1  |
| 49  | TL.049              | Spring lock pin       |      | 0  |
| 50  | GB13871-94-35x72x12 | Oil Seal 35x72x12     |      | 0  |
| 51  | TL.051              | bearing 6207          |      | 0  |
| 52  | TL.052              | Shaft washer diam 32  |      | 1  |
| 53  | TL.053              | Anti-friction plate L |      | 2  |
| 54  | TL.054              | Bearing seat          |      | 1  |
| 55  | TL.055              | Stay bar              |      | 1  |
| 56  | TL.056              | Pin                   |      | 1  |
| 57  | TL.057              | Oil seal ring         |      | 2  |
| 58  | TL.058              | Bearing 6207          |      | 2  |

GEO Italy S.R.L.

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT

Page 7

Machine: TL

Assembly: TL\_parte 1




| Pos | Code                | Description          | NOTE | Q. |
|-----|---------------------|----------------------|------|----|
| 59  | GB13871-94-40x65x12 | Oil seal 40*65*12    |      | 2  |
| 60  | TL.060              | Bearing seat         |      | 2  |
| 61  | TL.061.01           | Blades shaftTL95     |      | 1  |
| 61  | TL.061.02           | Blades shaftTL105    |      | 1  |
| 61  | TL.061.03           | Blades shaftTL115    |      | 1  |
| 61  | TL.061.04           | Blades shaft TL125   |      | 1  |
| 61  | TL.061.05           | Blades shaftTL135    |      | 1  |
| 62  | 1GQ.11.128          | Blade (L)            |      | 1  |
| 63  | 1GQ.11.127          | Blade (R)            |      | 1  |
| 64  | TL.064              | Blades bolt          |      | 1  |
| 65  | TL.065              | Blades nut           |      | 1  |
| 66  | TL.066              | Upper suspension pin |      | 1  |
| 67  | TL.067              | Spring lock pin      |      | 1  |
| 68  | TL.068              | Complete gearbox     |      | 1  |

GEO Italy S.R.L.

Via G. Abbate, 215, 14054 Castagnole delle Lanze AT

Page 8

TL 135 - Roller front

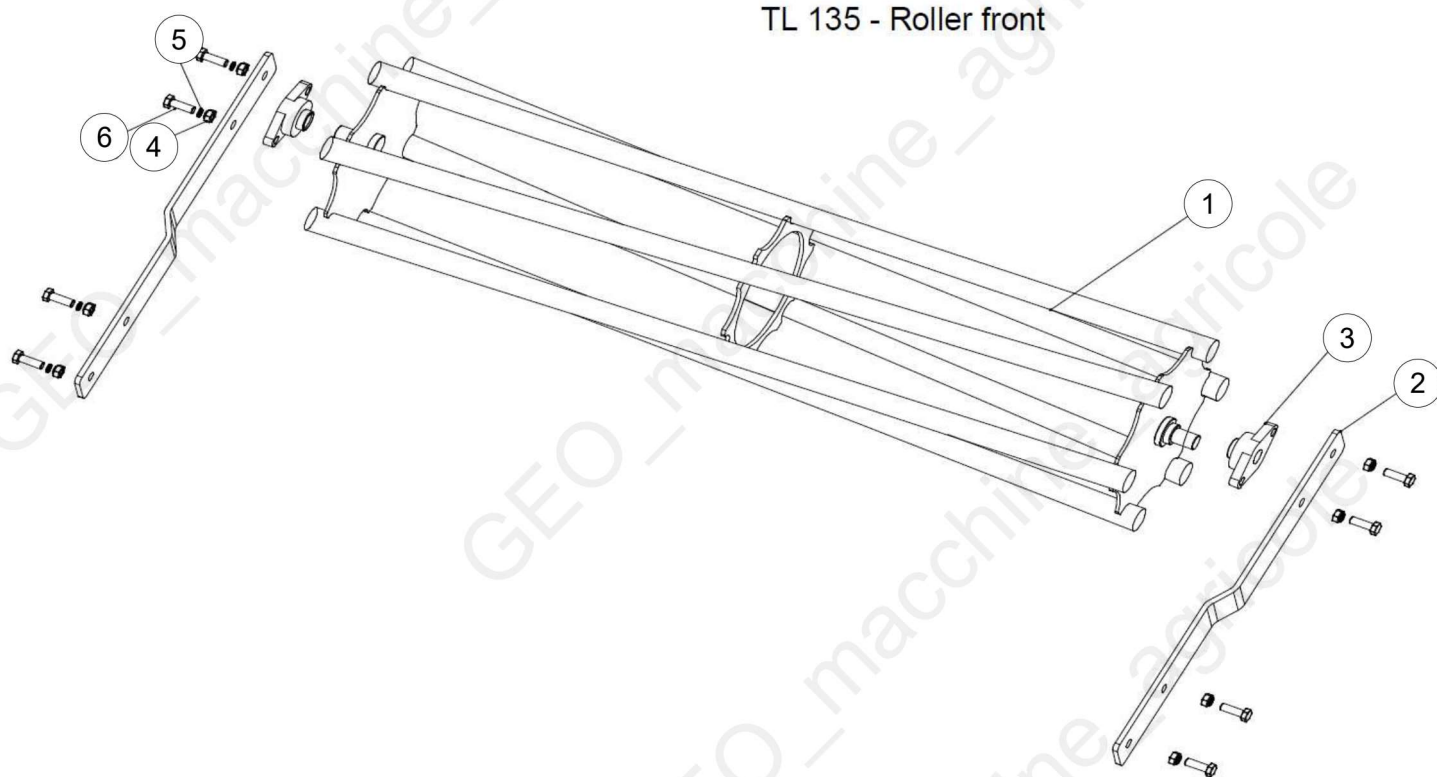

Machine: TL  
Assembly: TL\_parte 2



| Pos | Code              | Description      | NOTE | Q. |
|-----|-------------------|------------------|------|----|
| 1   | TL135.001         | roller 135       |      | 1  |
| 2   | TL135.002         | Connection plate |      | 2  |
| 3   | GB/T7810-UCFLU205 | BEARING UCFLU205 |      | 2  |
| 4   | TL135.004         | nut              |      | 8  |
| 5   | TL135.005         | washer           |      | 8  |
| 6   | TL135.006         | bolt             |      | 8  |